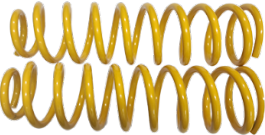
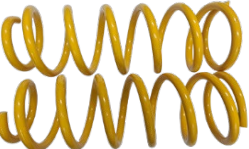


FORD MAVERICK - 4WD

Y60 SWB Hardtop 1988 to 1994

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
SHOCK ABSORBERS				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	
	41mm Foam Cell Shock Absorbers		SA41091FCN	
STEERING DAMPER				
	Steering Damper - Pre 9/1989	Eye/Eye	SD14034G	1 only
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	SD35036	
COIL SPRINGS				
	Raised Height Heavy Duty Coil Springs No bar / winch	50mm	NIS-200	1 pr
	Raised Height Heavy Duty Coil Springs With bar / winch	50mm	NIS-201	
CASTER BUSH KIT				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
SHOCK ABSORBERS				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	
	41mm Foam Cell Shock Absorbers		SA41094FC	
COIL SPRINGS				
	Raised Height Heavy Duty Coil Springs LBA up to 100KG	50mm	NIS-213	1 pr
	Raised Height Heavy Duty Coil Springs LBA 200kg to GVM	50mm	NIS-214	

F
R
O
N
T

R
E
A
R

* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**