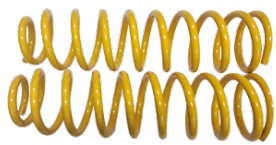
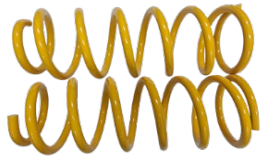


FORD MAVERICK - 4WD

Y60 LWB Station Wagon

1988 to 1994

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
SHOCK ABSORBERS				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCN	
STEERING DAMPER				
	Steering Damper - Pre 9/1989	Eye/Eye	SD14034G	1 only
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	SD35036	
COIL SPRINGS				
	Standard Height Heavy Duty Coil Springs	STD	NIS-204	1 pr
	Raised Height Heavy Duty Coil Springs LBA up to 45kg	50mm	NIS-201	
	Raised Height Heavy Duty Coil Springs LBA 50kg to 80kg	50mm	NIS-201HD	
	Raised Height Heavy Duty Coil Springs LBA 50kg to 80kg	65mm	NIS-201HHD	
CASTER BUSH KIT				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
SHOCK ABSORBERS				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
COIL SPRINGS				
	Standard Height Heavy Duty	STD	NIS-220	1 pr
	Raised Height Heavy Duty Coil Springs LBA up to 150kg	50mm	NIS-214	
	Raised Height Heavy Duty Coil Springs LBA 200kg to 350kg GVM	50mm	NIS-214HD	
	Raised Height Heavy Duty Coil Springs LBA 400kg to GVM - constant load when fitting NIS-214EHD it is recommended to fit coil tower brace bracket	50mm	NIS-214EHD	

* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)