

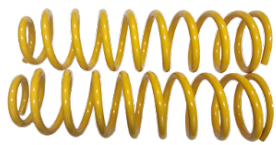


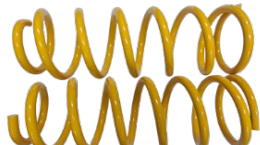


FORD MAVERICK - 4WD

Y60 LWB Station Wagon

1988 to 1994

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
SHOCK ABSORBERS						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea	F R O N T	
	41mm Foam Cell Shock Absorbers		SA41091FCN			
STEERING DAMPER						
	Steering Damper - Pre 9/1989	Eye/Eye	SD14034G	1 only		
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	SD35036			
COIL SPRINGS						
	Standard Height Heavy Duty Coil Springs	STD	NIS-204	1 pr		
	Raised Height Heavy Duty Coil Springs LBA up to 45kg	50mm	NIS-201			
	Raised Height Heavy Duty Coil Springs LBA 50kg to 80kg	50mm	NIS-201HD			
	Raised Height Heavy Duty Coil Springs LBA 50kg to 80kg	65mm	NIS-201HHD			
CASTER BUSH KIT						
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit		
SHOCK ABSORBERS						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	2 ea	R E A R	
	41mm Foam Cell Shock Absorbers		SA41094FC			
COIL SPRINGS						
	Standard Height Heavy Duty	STD	NIS-220	1 pr		
	Raised Height Heavy Duty Coil Springs LBA up to 150kg	50mm	NIS-214			
	Raised Height Heavy Duty Coil Springs LBA 200kg to 350kg GVM	50mm	NIS-214HD			
	Raised Height Heavy Duty Coil Springs LBA 400kg to GVM - constant load when fitting NIS-214EHD it is recommended to fit coil tower brace bracket	50mm	NIS-214EHD			

* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)