

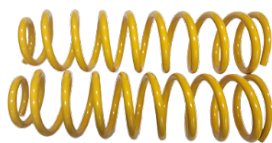





TOYOTA LANDCRUISER - 4WD

FJ80, HDJ80, HZJ80 Station Wagon 8/1991 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
SHOCK ABSORBERS				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35105GP	2 ea
STEERING DAMPER				
	Expanded Body Steering Damper - Piranha		SD35024GP	1 only
COIL SPRINGS				
	Standard Height Heavy Duty Coil Springs	STD	TLC-208	1 pr
	Raised Height Heavy Duty Coil Springs LBA up to 50kg	50mm	TLC-202	
	Raised Height Extra Heavy Duty Coil Springs LBA 50kg to 80kg	50mm	TLC-202HD	
CASTER BUSH KIT				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
SHOCK ABSORBERS				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35106GP	2 ea
COIL SPRINGS				
	Standard Height Heavy Duty Coil Springs	STD	TLC-217	1 pr
	Raised Height Heavy Duty Coil Springs Up to 150kg	50mm	TLC-213	
	Raised Height Extra Heavy Duty Coil Springs LBA 200kg to 300kg - constant load	50mm	TLC-213HD	
	Raised Height Ultra Heavy Duty Coil Springs LBA 360kg to GVM - constant Load	50mm	TLC-213HHD	

F
R
O
N
T

R
E
A
R

* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

* **Early model 80 series 5/1990 - 8/1991 require different coils. Contact for more info.**