



*Go to the Max*

2022

**2WD & 4WD**

SUSPENSION  
SOLUTIONS



SUSPENSION SUPPLIES AUSTRALIA

[www.ssa.com.au](http://www.ssa.com.au)



**piranha**  
OFF ROAD PRODUCTS

[www.piranhaoffroad.com.au](http://www.piranhaoffroad.com.au)



# TABLE OF CONTENTS

Chapter	Page
Parts Warranty .....	viii
Conditions of Sale .....	ix

## 2WD CATALOGUE

Ford Courier - PC, PD, PE, PG, PH 1985 to 11/2006 .....	2.01
Ford Ranger - PJ, PK 2.5 Diesel Standard Chassis 1/2007 to 8/2011.....	2.02
Ford Ranger - PJ, PK 3L Diesel Hi-Rider Overslung Rear Leaf 1/2007 to 8/2011.....	2.03
Ford Ranger - PX I & II Standard Chassis Underslung Rear Leaf 9/2011 to 6/2018.....	2.04
Ford Ranger - PX I & II High Rider Chassis Overslung Rear Leaf 9/2011 to 6/2018 .....	2.05
Ford Ranger - PX III Standard Chassis Underslung Rear Leaf 7/2018 to Current.....	2.06
Ford Ranger - PX III High Rider Chassis Overslung Rear Leaf 7/2018 to Current.....	2.07
Ford Falcon Wagon - XE-XF 6 Cyl & V8, EA-EL 6 Cyl, EB-EL V8, AU 6 Cyl & V8, BA-BF, BF MK II & III.....	2.08
Ford Falcon Utility - AU, BA-BF, FG Ute Not Suitable for RTV Utilities .....	2.09
Ford Territory - SX, SY 2004 to 9/2007 .....	2.10
Ford Territory - SX, SY 10/2007 to 5/2011 .....	2.11
Holden Rodeo - KB/TFS 8/1988 to 2003 .....	2.12
Holden Rodeo - RA Standard Chassis 3/2003 to 2008 .....	2.13
Holden Rodeo - RA Hi-Rider 3/2003 to 2008 .....	2.14
Holden Colorado - RC Standard Chassis 9/2008 to 5/2012.....	2.15
Holden Colorado - RC Hi-Rider 9/2008 to 5/2012 .....	2.16
Holden Colorado - RG Hi-Rider 5/2012 to 2020.....	2.17
Holden Colorado 7/Trailblazer - LT & LTZ 11/2012 to 2020.....	2.18
Hyundai iLoad - 2.4, 2.5 CRDI.....	2.19
Isuzu D-Max - 9/2008 to 5/2012 .....	2.20
Isuzu D-Max - TFS85 Standard Chassis 6/2012 Onwards.....	2.21
Isuzu D-Max - TFS85 Hi-Rider 6/2012 to 5/2020 .....	2.22
Isuzu D-Max - Hi-Rider 6/2020 Onwards .....	2.23
Isuzu MU-X – 4x2 2013 to 7/2021 .....	2.24
Isuzu MU-X – 4X2 7/2021 Onwards .....	2.25
Mazda Bravo - 1985 to 11/2006.....	2.26
Mazda BT50 - 2.5L Diesel Standard Chassis 1/2007 to 8/2011 .....	2.27
Mazda BT50 - 3L Diesel Hi-Rider 1/2007 to 8/2011.....	2.28
Mazda BT50 - 2.2L Standard Chassis 8/2011 to 9/2020.....	2.29
Mazda BT50 - 2.2L & 3.2L Diesel Hi-Rider 8/2011 to 9/2020.....	2.30
Mazda BT50 - Hi-Rider 10/2020 Onwards.....	2.31
Mitsubishi Triton - ME, MF, MG, MH, MJ, MK 1987 to 9/2006.....	2.32
Mitsubishi Triton - ML, MN 5/2006 to 5/2015.....	2.33
Mitsubishi Triton - MQ, MR 5/2015 Onwards .....	2.34
Nissan Navara - D21, D22 to Current Model .....	2.35
Nissan Navara - D40 11/2005 Onwards .....	2.36
Nissan Navara - D40 2012 Onwards .....	2.37
Toyota Hilux - 8/1088 to 2005 .....	2.38
Toyota Hilux - 2005 to 10/2015 .....	2.39

## 2WD CATALOGUE CONT.

Toyota Hilux Std Chassis - 10/2015 Onwards.....	2.40
Toyota Hilux High Ride Chassis - 10/2015 Onwards.....	2.41
Toyota Hi-Ace - 100 Series 1989 to 2004.....	2.42
Toyota Hi-Ace - 200 Series 3/2005 to 3/2019.....	2.43
Toyota Hi-Ace - 300 Series 4/2019 Onwards.....	2.44

## MISCELLANEOUS SUSPENSION PARTS

Centre Bolts.....	3.01
Repair Plates - Pre Cut Leaves.....	3.02

## U-BOLTS

Round Top.....	3.03
Round Top.....	3.04
Square Top.....	3.05

## 4WD CATALOGUE

Ford Explorer - UT, UX, UZ V6 & V8 Models 2001 to 2005.....	4.01
Ford Courier / Raider - 1987 to 11/2006.....	4.02
Ford Ranger - PJ, PK 2007 to 8/2011.....	4.03
Ford Ranger - PX I & II 2011 to 6/2018.....	4.04
Ford Ranger - PX III 2018 Onwards.....	4.05
Ford Maverick - Y60 SWB Hardtop 1988 to 1994.....	4.06
Ford Maverick - Y60 LWB Station Wagon 1988 to 1994.....	4.07
Ford Maverick - Y60 Cab Chassis & Utility 1988 to 1994.....	4.08
Ford Territory - SX, SY 2004 to 9/2007.....	4.09
Ford Territory - SX, SY, SZ 10/2007 to 5/2011.....	4.10
Ford F250 - 2000 Onwards.....	4.11
Ford F350 - 2000 Onwards.....	4.12
Foton Tunland - P201 2012 Onwards.....	4.13
Great Wall - V200 Diesel, V240.....	4.14
Great Wall – Steed.....	4.15
Great Wall - X200 – X240.....	4.16
Holden Rodeo - KB/TFS 8/1988 to 2003.....	4.17
Holden Rodeo - RA 2003 to 2008.....	4.18
Holden Colorado - RC Colorado 9/2008 to 5/2012.....	4.19
Holden Colorado - RG 5/2012 to 2020.....	4.20
Holden Colorado 7/Trailblazer - LT & LTZ 11/2012 to 2020.....	4.21
Holden Jackaroo - UBS 13, 16, 52 LWB Wagon 11/1981 to 10/1986.....	4.22
Holden Jackaroo - UBS 16, 17, 52, 55 LWB Wagon 11/1986 to 1991.....	4.23
Holden Jackaroo - UBS 25, 69 SWB & LWB Wagon 4/1992 to 2004 (including Monterey).....	4.24
Hyundai Terracan - HP 11/2001 to 12/2007.....	4.25

Isuzu D-Max - 9/2008 to 5/2012 .....	4.26
Isuzu D-Max - 5/2012 to 5/2020 .....	4.27
Isuzu D-Max - 6/2020 Onwards .....	4.28
Isuzu MU-X - 2013 to 7/2021 .....	4.29
Isuzu MU-X – 7/2021 Onwards .....	4.30
Jeep Cherokee - XJ Limited, Classic, Sport 1994 to 2001 .....	4.31
Jeep Cherokee - ZG, ZJ GRAND CHEROKEE 4/1996 to 1999 .....	4.32
Jeep Cherokee - WJ, WG GRAND CHEROKEE 1999 to 6/2005.....	4.33
Jeep Cherokee - WH, WK1 GRAND CHEROKEE 7/2005 to 2010 (WK Series 1 only).....	4.34
Jeep Cherokee - KJ 9/2001 to 1/2008 .....	4.35
Jeep Cherokee - KK 2008 Onwards Limited Edition Only (Sport Model may vary).....	4.36
Jeep Wrangler - TJ 10/1996 to 2007 .....	4.37
Jeep Wrangler - JK SWB & LWB 3/2007 Onwards .....	4.38
Mahindra - Pickup .....	4.39
Mazda Bravo - B2200, B2500, B2600 Utility 3/1987 to 11/2006.....	4.40
Mazda BT50 - 2007 to 10/2011 .....	4.41
Mazda BT50 - 10/2011 to 09/2020 .....	4.42
Mazda BT50 - 10/2020 Onwards.....	4.43
Mitsubishi Triton - ME, MF, MG, MH, MJ, MK 1987 to 2006.....	4.44
Mitsubishi Triton - ML, MN 5/2006 to 5/2015.....	4.45
Mitsubishi Triton - MQ 5/2015 Onwards .....	4.46
Mitsubishi Pajero - NA - NL SWB & LWB Leaf Springs Rear 5/1991 to 1996.....	4.47
Mitsubishi Pajero - NF- NL SWB V6 Wagon 1989 to 2000.....	4.48
Mitsubishi Pajero - NF, NG, NH, NJ, NK, NL LWB V6 TDI Wagon 1988 to 2000 .....	4.49
Mitsubishi Pajero - NM, NP, NS, NT SWB (3 Door) 2000 to 2014 .....	4.50
Mitsubishi Pajero - NM, NP, NS, NT, NW, NX - LWB 2000 to Current .....	4.51
Mitsubishi Challenger - Montero Sport PA - Leaf Springs Rear 1998 Onwards.....	4.52
Mitsubishi Challenger - Montero Sport PA - Coil Springs Rear 1996 to 2008.....	4.53
Mitsubishi Challenger - PB 2009 to 2013 Onwards .....	4.54
Mitsubishi Challenger - PC 2013 to 2016 .....	4.55
Nissan Navara - D21, D22 Pickup, Single / Dual Cab, King Cab 9/1985 to current .....	4.56
Nissan Navara - D40 2005 to 2015.....	4.57
Nissan Navara - D40 4/2010 Onwards STX 550 V6 Diesel.....	4.58
Nissan Navara - NP300 2015 Onwards Coil Springs Rear .....	4.59
Nissan Navara - NP300 2015 Onwards Leaf Springs Rear.....	4.60
Nissan Pathfinder - WD21 Terrano 1, Bakkie, Trader 10/1987 to 1995.....	4.61
Nissan Pathfinder - R51 2005 to 2012.....	4.62
Nissan Pathfinder - R51 Ti 550 2010 to 2012.....	4.63
Nissan X-Trail - T30 Wagon 2001 to 9/2007.....	4.64
Nissan X-Trail - T31 Wagon 10/2007 Onwards .....	4.65
Nissan Patrol - GQ / Y60 SWB Station Wagon & GR, Safari, KYY60 2/1988 to 1998.....	4.66
Nissan Patrol - GQ / Y60 LWB Station Wagon & GR, Safari, WYG60 8/1987 to 1997.....	4.67
Nissan Patrol - GQ / Y60 Cab Chassis & Utility Leaf Sprung 1988 to 5/1999 .....	4.68
Nissan Patrol - GQ / Y60 Cab Chassis & Utility Coil Sprung 1992 to 5/1999.....	4.69
Nissan Patrol - GU / Y61 Cab Chassis Utility Leaf Springs Rear 1999 Onwards .....	4.70
Nissan Patrol - GU / Y61 LWB Station Wagon 12/1997 Onwards .....	4.71
Nissan Patrol - GU / Y61 Cab Chassis & Utility Coil Springs 5/1999 Onwards.....	4.72

Rover Landrover - Defender 110 & TD5 LWB 110 Wheelbase 1992 to 2001	
& 130 Wheelbase Double Cab 1994 to 1999.....	4.73
Rover Landrover - Discovery Series I 1991 to 3/1999.....	4.74
Rover Landrover - Discovery Series II 3/1999 to 2004 .....	4.75
Rover Landrover - Discovery Series III 1/2005 Onwards.....	4.76
Rover - Range Rover - All Models 1971 to 1998 excluding air suspension.....	4.77
Ssangyong - Musso & Korando 1995 to 2006.....	4.78
Subaru Forester - MY99, MY00, MY01 1997 to 6/2002	
*excluding self levelling suspension .....	4.79
Subaru Forester - MY03, MY04, MY05 7/2002 to 7/2008	
*excluding 2.5L turbo and all self levelling suspension .....	4.80
Suzuki Jimny - SN413 to JB33 Wagon All Models 1998 Onwards.....	4.81
Suzuki Sierra - SJ & LJ 1981 to 3/1996 (also Holden Drover).....	4.82
Suzuki Sierra - SJ80 / SJ413 4/1996 to 12/1998 .....	4.83
Suzuki Vitara - SE416 1.6 Litre & SE420 2 Litre 3 door SWB 1988 to 1997	
Santana, Sidekick, Escudo, Geo Tracker.....	4.84
Suzuki Vitara - SE416 & SV420 / 620 5 door LWB Sidekick, Escudo 1991 to 1998.....	4.85
Suzuki Vitara - Grand Vitara SWB, LWB, XL7 4Cyl & V6 1998 to 2005 .....	4.86
Suzuki Vitara - Grand Vitara JB416 4Cyl & JB627 V6 8/2005 Onwards .....	4.87
Toyota Hilux & 4 Runner - Leaf Spring Front & Rear Pre I.F.S. LN / RN36 / 46 / 105	
LN / YN65 / 67 / 106, SR5 Models 1979 to 11/1997.....	4.88
Toyota Hilux - I.F.S. Single Cab / Dual Cab LN107 SR5, LN108, RN106 9/1991 to 2005.....	4.89
Toyota Hilux - I.F.S. LN / KZN / RN165/166/167, LN170 (2.4L Dsl), LN172 (3.0L Dsl), RZN169	
Single Cab / Dual Cab / Extra Cab 10/1997 to 2005.....	4.90
Toyota Hilux 4 Runner - I.F.S. LN61, YN63, Surf 8/1985 to 1989.....	4.91
Toyota Hilux 4 Runner - I.F.S. LN / RN / YN / VZN130, Surf 11/1989 to 1997.....	4.92
Toyota Hilux - KUN 26 4/2005 to 2015.....	4.93
Toyota Hilux - GUN 126 2015 Onwards Revo .....	4.94
Toyota Landcruiser - FJ45 / HJ47 LWB 7/1980 Onwards .....	4.95
Toyota Landcruiser - FJ60 / HJ60 Station Wagon 1980 to 1990.....	4.96
Toyota Landcruiser - FJ / HJ75 1984 to 1990 FZJ/HZJ75 1990 to 9/1999 Utility & Troop Carrier....	4.97
Toyota Landcruiser - VDJ76 Station Wagon 2007 Onwards.....	4.98
Toyota Landcruiser - FZJ78 / HZJ78 / VDJ78 Troop Carrier 9/1999 Onwards .....	4.99
Toyota Landcruiser - FZJ79 / HZJ79 / VDJ79 Single Cab Models Utility 9/1999 Onwards .....	4.100
Toyota Landcruiser - 70 Series Dual Cab 7/2012 Onwards.....	4.101
Toyota Landcruiser - FJ80, HDJ80, HZJ80 Station Wagon 8/1991 Onwards.....	4.102
Toyota Landcruiser - HDJ100, HZJ100, UZJ100 I.F.S. Station Wagon 4/1998 to 11/2007.....	4.103
Toyota Landcruiser - FZJ105R, HZJ105R Station Wagon 4/1998 to 11/2007.....	4.104
Toyota Landcruiser - 200 Series Station Wagon UZJ, URJ, GRJ, VDJ 11/2007 Onwards	
*excluding air suspension models .....	4.105
Toyota Landcruiser - FJ Cruiser 2006 Onwards.....	4.106
Toyota Fortuner – GUN156R .....	4.107
Toyota Prado 95 Series - VZJ, KZJ, RZJ, KDJ 95 Station Wagon 1996 to 2003 .....	4.108
Toyota Prado 120 Series - VZJ, KZJ, RZJ, KDJ 120 SWB & LWB Station Wagon	
-2003 to 11/2009 * excluding KDSS .....	4.109

Toyota Prado 150 Series - KDJ150, GRJ150, KDJ155 GX & GXL Station Wagon  
-2010 Onwards \* excluding KDSS .....4.110  
VW Amarok - 2010 Onwards \* excludes V6 models ..... 4.111  
VW Amarok - 2016 Onwards V6 model..... 4.112

# WARRANTY INFORMATION

## 2WD/4WD PARTS WARRANTY

At McNaughtan's T/A Suspension Supplies Australia (SSA) discretion, we will replace or repair any SSA product which is found to be defective in material and/or workmanship, **providing it has been correctly installed, maintained and that any part failure or breakage occurs on a registered vehicle under conditions of normal use.**

This is a limited warranty valid for a period after the original invoice date as follows:

- **Suspension Components:** 3 years or 60,000 Kilometers, whichever comes first.
- **Shock Absorbers:** Piranha 3 years or 100,000 Kilometers - Blue Max & SACHS 3 years or 60,000 Kilometers whichever comes first
- **Upper Control Arms:** 1 year on Manufacturing faults (excludes ball joints & bushes. Replacement parts available)
- **Polyurethane Leaf Spring Bushes:** 5 years or 100,000 Kilometers. When used with Greasable Pins & Shackles (When Regularly Greased with a Lithium Based Grease)
- **Consumables:** 90 days from the date of invoice.

The warranty applies to the defective part only and does not cover any costs associated with the removal or replacement and/or forwarding or return of the part. The Purchaser agrees to indemnify and hold Suspension Supplies Australia harmless from and against any loss, injury or damage, to person or property that extends beyond the warranties set, whether the claims against Suspension Supplies Australia or the damages are incidental or consequential. The warranty covers the original purchase and is not transferable.

### **Warranty exclusions also include the following:**

1. Fitting a part to a vehicle that is not (i) correctly matched with other suspension components or (ii) intended for the application.
2. Any repairs, alterations or modifications to the product or installation.
3. Vehicle modifications subsequent to the purchase of SSA parts may void warranty.
4. The operation of the subject vehicle loaded outside the manufacturer's recommendations and/or exceeding relevant Government's GVM limits will void the warranty.
5. Any product subjected to accident, extreme use or negligence.
6. The use and/or reworking of second hand parts.
7. Normal wear and tear.

Suspension Supplies Australia is to be notified by the Purchaser of a defect in writing/email as soon as it is noticed. Repair or replacement is preconditioned on the examination of the goods by Suspension Supplies Australia, which may require the goods to be returned to SSA's premises at 219 Toombul Road, Northgate Qld 4013.

Warranty claims made without substantial records will not be considered. Claims are to include a copy of the original invoice showing purchase date, detailing the vehicle owner, vehicle description and odometer reading – the installer's details must also accompany the claim. Vehicle details current at the time of claim will also be required.

## SERVICE WARRANTY

Work performed by our service department is covered for 90 days provided the vehicle is operated under conditions of normal use with the above conditions and exclusions applying.



## CONDITIONS OF SALE

The Vendor sells and the Purchaser buys the goods and services as per invoice and on the following conditions.

The Purchaser will pay the price of these goods and services to the Vendor within the time agreed with the Vendor. If there has been no agreement as to time, payment must be paid within 7 days of this invoice.

Title to these goods does not pass to the Purchaser until the Vendor is paid in full for these goods and services and all other goods and services previously supplied by the Vendor.

### **The Purchaser will:**

1. Store separately goods, which have not been paid for.
2. Keep separate records of the proceeds for the sale of any goods which have not been paid for, bank the proceeds into a separate account on behalf of the Vendor and immediately remit the proceeds to the credit of the Vendor; and
3. If any goods are used in a manufacturing process, or incorporated into vehicles or other machinery, record the value of goods so used in relation to each unit finished product and upon sale of any unit of finished product immediately pay the value to the Vendor from the proceeds of the sale.

If the Purchaser does not pay for any goods by the date specified in these conditions the Vendor may enter the Purchaser's premises (or any premises under the control of the Purchaser or its agents) and use reasonable force to take possession of the goods without liability for trespass, negligence or the payment of any compensation to the Purchaser.

Risk in the goods passes to the Purchaser upon delivery of the goods to the Purchaser or upon collection of the goods by the Purchaser's agent or courier.

## DELIVERY CONDITIONS FOR DISPATCHED GOODS

Our responsibility ceases on delivery to courier transport company or rail. Before signing for or accepting parcels, examine for loss or damage. When loss or damage occurs claim immediately on the carrier or your Insurance Company.

### **Return of Goods**

Suspension Supplies Australia is to be notified prior to goods being returned. Any returns are to be within 21 days of invoice date. Invoice Number and date must be quoted before credit will be considered and freight prepaid. Prices are ex-Store Freight, Insurance etc., are owners cost. We reserve the right to charge a 15% handling/restocking fee.

### **Special Products**

Products that are made to customer's special order, customer's specifications or are non-stock products, are not acceptable for return or credit. Cancellation of orders for special or non-stock products will not be accepted.

**NOTE:** This catalogue has been produced as a guide to select replacement parts. The manufacturer's names, O.E.M. reference numbers and illustrations appearing in this catalogue are used only to aid in identification of Suspension Supplies parts. Care has been exercised in producing this catalogue accurately, but no liability is accepted for errors or omissions that may be present.



*Go to the Max*

2022

**2WD**

APPLICATION LISTING












[www.ssa.com.au](http://www.ssa.com.au)



**Note:** The "Bluemax" parts offered are not O.E.M. Parts. Manufacturer's names, part numbers and other references or illustrations are for identification purposes only. The products offered are after market parts suitable for the use or vehicle prescribed.

# FORD COURIER - 2WD

PC, PD, PE, PG, PH 1985 to 11/2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP	2 ea
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 898mm		MAZDA009	1 pr
<b>SHOCK MOUNT REINFORCEMENT BRACKET</b>				
	Shock Absorber Top Mount Reinforcement Bracket		SHOCKBRKT-MAZ1	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 6 + 2 Leaf Springs LBA up to 250kg		MAZDA006	2 ea
	Raised Height Extra Heavy Duty 7 + 2 Leaf Springs LBA 300kg to 500kg		MAZDA006M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU756UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts * Check U bolt dimensions before ordering as some later models vary		UB451	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P794	2 ea










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
NOTE: 4 x 2 Hi-Rider models 2004 to 2006 are exceptions.  
Refer 4 x 4 section of catalogue

# FORD RANGER - 2WD

PJ, PK 2.5 Diesel Standard Chassis Underslung Rear Leaf 1/2007 to 8/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 1025mm		MAZDA051	1 pr
<b>SHOCK MOUNT REINFORCEMENT BRACKET</b>				
	Shock Absorber Top Mount Reinforcement Bracket		SHOCKBRKT-MAZ1	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers <b>Confirm Shock Measurements Before Ordering - Can Be SA35095GP</b>		*SA35650GLB*	2 ea
<b>LEAF SPRINGS</b>				
	<b>STD Chassis With Underslung Leaf Springs</b> Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	30-40mm	MAZDA060M	2 ea
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	30-40mm	MAZDA060MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant loads</b> <b>LBA 600kg to GVM</b>	30-40mm	MAZDA060GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU765UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB475	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
\* Contact SSA For More Info\*

# FORD RANGER - 2WD

PJ, PK 3L Diesel Hi-Rider Overslung Rear Leaf 1/2007 to 8/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 1025mm		MAZDA051	1 pr
<b>SHOCK MOUNT REINFORCEMENT BRACKET</b>				
	Shock Absorber Top Mount Reinforcement Bracket		SHOCKBRKT-MAZ1	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	
<b>LEAF SPRINGS</b>				
	<b>Hi-Rider Chassis With Overslung Leaf Springs</b>			
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	30-40mm	MAZDA050	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	30-40mm	MAZDA050M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 400kg to 600kg</b>	30-40mm	MAZDA050MH	2 ea
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant loads LBA 600kg to GVM</b>	30-40mm	MAZDA050GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU765UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB475	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea








FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD RANGER - 2WD

PX I & II Standard Chassis Underslung Reaf Leaf 09/2011 to 6/2018

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers		TBA	2 ea
<b>COIL SPRINGS</b>	Raised Height Heavy Duty Tapered Coils <b>Progressive Rate - No Bar / Winch</b>	30-40mm	FOR-210T	1 pr
	Raised Extra Height Heavy Duty Tapered Coils <b>Progressive Rate - With Bar / Winch</b>	30-40mm	FOR-210HT	
	Raised Height Extra Heavy Duty <b>Extreme loads only</b>	30-40mm	FOR-210HD	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL3080	2 ea
<b>TAIL SHAFT SPACER KIT</b>				
	Driveshaft Centre Bearing Spacer Kit		SP-MAZ-01	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers <b>Confirm Shock Measurements Before Ordering - Can Be SA35095GP</b>		*SA35650GLB*	2 ea
<b>LEAF SPRINGS</b>	<b>STD Chassis With Underslung Leaf Springs</b>			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	30-40mm	MAZDA060M	2 ea
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 400kg to 600kg</b>	30-40mm	MAZDA060MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	30-40mm	MAZDA060GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit - Use With MAZDA060 Springs		BU773UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB473	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S389K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea









FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
\* Contact SSA For More Info\*

# FORD RANGER - 2WD

PX I & II High Rider Chassis Overslung Rear Leaf 09/2011 to 06/2018

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GP	2 ea		
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GPA			
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210 COIL-ST-FOR01	1 pr		
	Coils Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210H COIL-ST-FOR03			
	Coils Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HD COIL-ST-FOR21			
	Coils Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HHD COIL-ST-FOR04			
	Tapered Coils Springs <b>For Vehicles Without Bullbar</b> Raised Height Coil Springs - Tapered Comfort Coil	40mm	FOR-210T COIL-ST-FOR05			
	Tapered Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HT COIL-ST-FOR52			
	Tapered Coils Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HDT COIL-ST-FOR06			
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount			TPL3080	2 ea
	<b>TAIL SHAFT SPACER KIT</b> 	Driveshaft Centre Bearing Spacer Kit to prolong centre bearing life			SP-MAZ-01	1 kit
	<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha			SA35095GP	2 ea
35mm <b>Adjustable</b> Shock Absorbers - Piranha			SA35095GPA			
<b>LEAF SPRINGS</b> 	<b>Hi-Rider Chassis With Overslung Leaf Springs</b> Raised Height 5 Leaf <b>Parabolic</b> Springs <b>LBA Up to 300kg - Must Use BU770UK</b>	40mm	MAZDA052P5	2 ea		
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	40mm	MAZDA050			
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	MAZDA050M			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	40mm	MAZDA050MH			
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	MAZDA050GV			
	<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit - Suits OE Springs & <b>MAZDA052P5</b> With 54mm Front Spring Eye			BU770UK	1 kit
Polyurethane Bush Kit - <b>Use With MAZDA050 Springs</b>		BU773UK				
<b>U-BOLTS</b> 	Round Form U Bolts - With Nuts		UB473	4 ea		
	Round Form U Bolts - With Nuts use with MAZDA052P5 MAZDA050MHT & MAZDA050GV		UB473-1			
<b>SHACKLES</b> 	Greaseable Shackles		S389K	2 ea		
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea		

FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD RANGER - 2WD

PX III Standard Chassis Underslung Reaf Leaf 07/2018 to Current

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers		TBA	2 ea
<b>COIL SPRINGS</b>	Coil Springs <b>For Vehicles Without Bullbar</b>	40mm	FOR-224	
	Coil Springs <b>For Vehicles With Alloy Bullbar</b>	40mm	FOR-224H	
	Coil Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b>	50mm	FOR-224HH	1 pr
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b>	40mm	FOR-224T	
	Tapered Coil Springs <b>For Vehicles With Alloy Bullbar</b>	40mm	FOR-224HT	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL8099	2 ea
<b>TAIL SHAFT SPACER KIT</b>	Driveshaft Centre Bearing Spacer Kit to prolong centre bearing life		SP-MAZ-01	1 kit
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers		*SA35650GLB*	2 ea
	<b>Confirm Shock Measurements Before Ordering - Can Be SA35095GP</b>			
<b>LEAF SPRINGS</b>	<b>STD Chassis With Underslung Leaf Springs</b>			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	30-40mm	MAZDA060M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 400kg to 600kg</b>	30-40mm	MAZDA060MH	2 ea
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	30-40mm	MAZDA060GV	
<b>SHACKLE BUSH KITS</b>	Polyurethane Bush Kit - Use With MAZDA060 Springs		BU773UK	1 kit
<b>U-BOLTS</b>	Round Form U Bolts - With Nuts		UB473	4 ea
<b>SHACKLES</b>	Greaseable Shackles		S389K	2 ea
<b>PINS</b>	Greaseable Pins		P387-2	2 ea

FRONT









REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
\* Contact SSA For More Info\*



# FORD RANGER - 2WD

PX III High Rider Chassis Overslung Leaf Leaf 07/2018 to Current

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers		SA67093GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224 COIL-ST-FOR07	1 pr
	Coil Springs <b>For Vehicles With Alloy Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224H COIL-ST-FOR08	
	Coil Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	50mm	FOR-224HH COIL-ST-FOR09	
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	50mm	FOR-224HD COIL-ST-FOR12	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224T COIL-ST-FOR10	
	Tapered Coil Springs <b>For Vehicles With Alloy Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224HT COIL-ST-FOR11	
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		
<b>TAIL SHAFT SPACER KIT</b> 	Driveshaft Centre Bearing Spacer Kit to prolong centre bearing life		SP-MAZ-01	1 kit
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	
<b>LEAF SPRINGS</b> 	<b>Hi-Rider Chassis With Overslung Leaf Springs</b> Raised Height 5 Leaf <b>Parabolic</b> Springs <b>LBA Up to 300kg - Must Use BU770UK</b>	40mm	MAZDA052P5	2 ea
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	40mm	MAZDA050	
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	MAZDA050M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	40mm	MAZDA050MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	MAZDA050GV	
	<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit - Suits OE Springs & <b>MAZDA052P5</b> With 54mm Front Spring Eye		
	Polyurethane Bush Kit - <b>Use With MAZDA050 Springs</b>		BU773UK	
<b>U-BOLTS</b> 	Round Form U Bolts - With Nuts		UB473	
	Round Form U Bolts - With Nuts		UB473-1	
	use with MAZDA052P5 MAZDA050MHT & MAZDA050GV			
<b>SHACKLES</b> 	Greaseable Shackles		S389K	
<b>PINS</b> 	Greaseable Pins		P387-2	


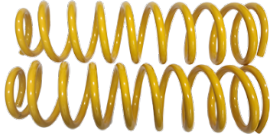





FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD FALCON Wagon - 2WD


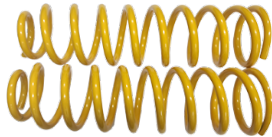





XE-XF 6 Cyl & V8, EA-EL 6 Cyl, EB-EL V8, AU 6 Cyl & V8, BA-BF, BF MK II & III

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	Gas Shocks - XE to XF		SAB28160		2 ea
	Gas Struts - EA to EL		SAB28240		
	Gas Struts - AU I, II, III		SAB28800		
	Gas Struts BA to BF		SAB36690		
<b>COIL SPRINGS</b>					
	Standard Height Plus Heavy Duty Coil Springs	20mm	H/Duty Coil available on request for each model	1 pr	FRONT
<b>SHOCK ABSORBERS</b>					
	Gas Shock Absorbers - XE to EL		SAB28220	2 ea	FRONT
	Gas Shock Absorbers - AU to BF		SAB36670		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 6 Leaf Springs <b>Fixed end eye = 54mm</b> <b>Must use BlueMax bush kit with these springs</b> <b>LBA up to 400kg</b>	15-20mm	FORD020	2 ea	FRONT
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit		BU744UK	1 kit	FRONT
<b>U-BOLTS</b>					
	<b>Early Models up to BA</b> Round Form U Bolts - With Nuts UB258 = 230mm x 75mm x 7/16" round		UB258		4 ea
	UB258L = 260mm x 75mm x 7/16" round		UB258L		
	<b>After BA</b> Round Form U Bolts - With Nuts UB458 = 190mm x 75mm x 9/16" round		UB458		
<b>SANDWICH PLATES</b>					
	U Bolt Sandwich Plates - <b>sold in pairs</b>		SPS-FORD	2 pr	REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD FALCON Utility - 2WD


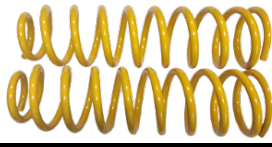

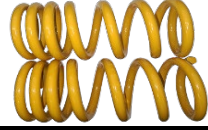
AU, BA-BF, FG Ute **Not Suitable for RTV Utilities**

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	AU, AU11-A11 V6 & V8, XR6 & XR8 Ute		SAB28800		FRONT
	BA to BF - ALL Utes		SAB36690	2 ea	
	FG-XR6 & XR8 & XR6 Turbo & R6 Ute		SA673637G		
<b>COIL SPRINGS</b>					
	Standard Height Plus Heavy Duty Coil Springs	40mm	H/Duty Coil available on request for each model	1 pr	
<b>SHOCK ABSORBERS</b>					
	AU-BF - 07/1999 to 09/2006		SAB36660	2 ea	REAR
	FG-XR6 & XR8 & XR6 Turbo Ute - 02/2008 Onwards		SAS314317 SAS314316	1 R 1 L	
	FG-R6 Ute - 02/2008 Onwards		SAS314315	2 ea	
<b>LEAF SPRINGS</b>					
	<b>NB: Not Suitable For XR Models</b> Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 400kg</b>	25-30mm	FORD021	2 ea	REAR
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	25-30mm	FORD021M		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit <b>Fixed end eye = 54mm</b> <b>Must use BlueMax bush kit with these springs</b>		BU744UK	1 kit	
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts				
	UB458 = 190mm x 75mm x 9/16" round		UB458		4 ea
	UB458-1 = 210mm x 75mm x 9/16" round		UB458-1		
	<b>OR</b> UB453-1 = 215mm x 83mm x 9/16" round		UB453-1		
<b>SANDWICH PLATES</b>					
	U Bolt Sandwich Plates - <b>sold in pairs</b> FORD021 2pr FORD021M 4pr		SPS-FORD	2/4pr	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)


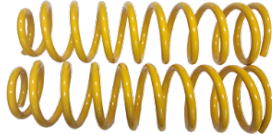


# FORD TERRITORY - 2WD

SX, SY 2004 to 9/2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA673673G	1 L	FRONT
			SA673674G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs 2WD Only	20mm	FOR-212	1 pr	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Bulged Shock Absorbers		SAB36680	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs 2WD only	20mm	FOR-214	1 pr	









# FORD TERRITORY - 2WD

SX, SY, SZ 10/2007 to 5/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT / SHOCK ABSORBERS</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA673677G	1 L	FRONT
			SA673678G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs 2WD Only	20mm	FOR-213	1 pr	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Bulged Shock Absorbers		SAB36680	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs 2WD only	20mm	FOR-214	1 pr	

# HOLDEN RODEO - 2WD


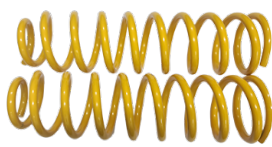






KB/TFS 8/1988 to 2003

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35087GP	2 ea	FRONT
	35mm Gas Bulged Shock Absorbers - Piranha <b>V6 Models</b>		SA35649GP		
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars <b>Length 1000mm</b>		HOLD005A	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	40mm	HOLD004	2 ea	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	40mm	HOLD004M		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit		BU728UK	1 kit	
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts		UB453-1	4 ea	
<b>SHACKLES</b>					
	Greaseable Shackles		S386K	2 ea	
<b>PINS</b>					
	<b>Check pin size</b> Greaseable Pins Non Teardrop - <b>14mm</b>		P387-2	2 ea	
	Greaseable Pins Teardrop - <b>18mm</b>		P792		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN RODEO - 2WD









RA Standard Chassis 3/2003 to 2008

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers		SA67080G	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>Petrol</b>	20-30mm	KHFR-51	1 pr		
	Raised Height Heavy Duty Coil Springs <b>Diesel</b>	20-30mm	TPR-200			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea		
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	40mm	HOLD018	2 ea		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	40mm	HOLD018M			
	Raised Height Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit	REAR	
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-1	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN RODEO - 2WD

RA Hi-Rider 3/2003 to 2008


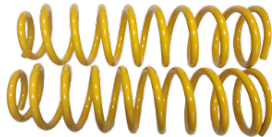






Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP	2 ea	FRONT
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP		REAR
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	50mm	HOLD018		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	HOLD018M		
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	HOLD018MH		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit		BU728UK	1 kit	
<b>U-BOLTS</b>					
	Check U Bolt part number with rear springs Round Form U Bolts - With Nuts		UB473		
	Round Form U Bolts - With Nuts <b>Use with HOLD018M &amp; HOLD018MH</b>		UB473-1	4 ea	
<b>SHACKLES</b>					
	Greaseable Shackles		S386K	2 ea	
<b>PINS</b>					
	Greaseable Pins		P387-2	2 ea	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# HOLDEN COLORADO - 2WD









RC Standard Chassis 9/2008 to 5/2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers		SA67080G	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>Petrol</b>	20-30mm	KHFR-51	1 pr		
	Raised Height Heavy Duty Coil Springs <b>Diesel</b>	20-30mm	TPR-200			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP		REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	40mm	HOLD018	2 ea		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	40mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-1	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN COLORADO - 2WD








RC Hi-Rider 9/2008 to 5/2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP	2 ea	FRONT
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP		
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	50mm	HOLD018		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	HOLD018M		
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	HOLD018MH		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit		BU728UK	1 kit	REAR
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts		UB473		
	Round Form U Bolts - With Nuts <b>Use with HOLD018M &amp; HOLD018MH</b>		UB473-1	4 ea	
<b>SHACKLES</b>					
	Greaseable Shackles		S386K	2 ea	
<b>PINS</b>					
	Greaseable Pins		P387-2	2 ea	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN COLORADO - 2WD

RG Hi-Ride 5/2012 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67092GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b>	<b>NOTE: 04/2013 to 06/2016 must purchase SSA strut top plates mount TPL1002</b>			
	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210 COIL-ST-HOL01	1 pr
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL11	
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210T COIL-ST-HOL51	
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL53	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA	
<b>LEAF SPRINGS</b>				
	Raised Height 4 Leaf Parabolic Springs <b>LBA up to 200kg</b>	40mm	HOLD022P4	2 ea
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	HOLD022	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	HOLD022M	
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	40mm	HOLD022MH	
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	HOLD022GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU786UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with HOLD022P4, HOLD022MH &amp; HOLD022GV</b>		UB437	
<b>SHACKLES</b>				
	Greaseable Shackles		S390K	2 ea
<b>PINS</b>				
	Greaseable Pin		P387-2	2 ea


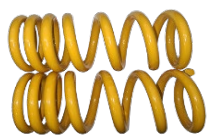
FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN COLORADO 7 / TRAILBLAZER - 2WD

LT & LTZ 11/2012 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67092GP	2 ea		
<b>COILS &amp; STRUT ASSEMBLY</b>	<b>NOTE: 04/2013 to 06/2016 must purchase SSA strut top plates mount TPL1002</b>					
	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210 COIL-ST-HOL01			
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL11			
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210T COIL-ST-HOL51	1 pr		
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL53			
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea	
	<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers		SA35100GP	2 ea	
	<b>COIL SPRINGS</b>					
	Raised Height Coil Springs	40mm	HOL-211			
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to 300kg - constant load</b>	40mm	HOL-211HD	1 pr		







FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HYUNDAI iLOAD - 2WD


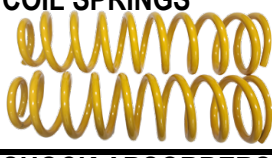






2.4, 2.5 CRDI

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA674893	1 R	FRONT
			SA674892	1 L	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	20mm	KHFR-173	1 pr	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Shock Absorbers		SAS314891	2 ea	
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 400kg</b>		HYUN006	2 ea	REAR
	Raised Height Extra Heavy Duty 4 + 2 Leaf Springs <b>with all 10mm leaves - constant loads</b> <b>LBA 500kg to GVM</b>		HYUN006MH		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit <b>Must use BlueMax bush kit with these springs</b>		BU791UK	1 kit	
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts		UB258-3	4 ea	

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# ISUZU D-MAX - 2WD


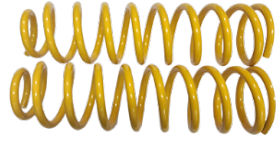






9/2008 to 5/2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers		SA67080G	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>Petrol</b>	20-30mm	KHFR-51	1 pr		
	Raised Height Heavy Duty Coil Springs <b>Diesel</b>	20-30mm	TPR-200			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea		
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	40mm	HOLD018	2 ea		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	40mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit	REAR	
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-1	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ISUZU D-MAX - 2WD








TFS85 Standard Chassis 6/2012 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67080G	2 ea	FRONT
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>Petrol</b>	20-30mm	KHFR-51	1 pr	
	Raised Height Heavy Duty Coil Springs <b>Diesel</b>	20-30mm	TPR-200		
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	HOLD024	2 ea	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	HOLD024M		
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD024MH		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit		BU728UK	1 kit	REAR
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts - Check Dimensions <b>1/2\" Material</b>		UB475	4 ea	
	Round Form U Bolts - With Nuts - Check Dimensions <b>9/16\" Material</b>		UB473-1		
<b>SHACKLES</b>					
	Greaseable Shackles		S386K	2 ea	
<b>PINS</b>					
	Greaseable Pins		P387-2	2 ea	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ISUZU D-MAX - 2WD

TFS85 Hi-Rider 5/2012 to 5/2020

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67092GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL12	1 pr
	Coils Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR02	
	Coils Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL52	
	Coils Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR53	
	Coils Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR53	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA	
<b>LEAF SPRINGS</b> 	Raised Height 4 Leaf Parabolic Springs <b>LBA up to 200kg</b>	40mm	HOLD022P4	2 ea
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	HOLD022	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	HOLD022M	
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	40mm	HOLD022MH	
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	HOLD022GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU786UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>Use with HOLD022P4, HOLD022MH &amp; HOLD022GV</b>		UB437	
<b>SHACKLES</b> 	Greaseable Shackles		S390K	2 ea
<b>PINS</b> 	Greaseable Pin		P387-2	2 ea

FRONT








REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# ISUZU D-MAX - 2WD

High Ride 06/2020 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GP	2 ea	
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GPA		
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL12	1 pr	
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR02		
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL52		
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR53		
	<b>TOP PLATE MOUNT</b>				
	Strut Top Plate Mount		TPL1002		2 ea
<b>SHOCK ABSORBERS</b> 					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35096GP	2 ea	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35096GPA		
<b>LEAF SPRINGS</b> 					
	Raised Height 3 Leaf Parabolic Springs <b>No Load</b>	30-40mm	HOLD022P3	2 ea	
	Raised Height 4 Leaf Parabolic Springs <b>LBA 100kg to 300kg</b>	30-40mm	HOLD022P4		
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA Up to 300kg</b>	40mm	HOLD022		
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	HOLD022M		
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD022MH		
<b>SHACKLE BUSH KITS</b> 					
	Polyurethane Bush Kit		BU792UK	1 kit	
<b>U-BOLTS</b> 					
	Square Form U Bolts - With Nuts		UB453-2	4 ea	
	Square Form U Bolts - With Nuts use with HOLD022P4 & HOLD022MH		UB437		
<b>SHACKLES</b> 					
	Greaseable Shackles		S392K	2 ea	
<b>PINS</b> 					
	Greaseable Pin		P387-2	2 ea	



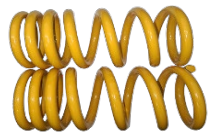
FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ISUZU MU-X - 2WD

2013 to 7/2021

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle			
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67092GP</b>	2 ea			
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>HOL-210H</b> <b>COIL-ST-HOL12</b>	1 pr	<b>F R O N T</b>		
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204</b> <b>COIL-ST-TPR02</b>				
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>HOL-210HT</b> <b>COIL-ST-HOL52</b>				
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204T</b> <b>COIL-ST-TPR53</b>				
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount				<b>TPL1002</b>	2 ea
	<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha				<b>SA35100GP</b>	2 ea
<b>COIL SPRINGS</b> 	Raised Height Coil Springs	40mm	<b>ISU-201</b>	1 pr	<b>R E A R</b>		
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to 300kg - constant load</b>	40mm	<b>ISU-201HD</b>				

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# ISUZU MU-X - 2WD

7/2021 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GPA	
<b>COILS &amp; STRUT ASSEMBLY</b>	<b>Coil Springs For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204	1 pr
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR03	
	<b>Coil Springs For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204H	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR17	
	<b>Coil Springs For Vehicles With 100kg + of Accessories</b>	40mm	TPR-204HD	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR27	
	<b>Tapered Coil Springs For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204T	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR60	
<b>Tapered Coil Springs For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204HT		
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR61		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers - Piranha		SA35100GP	2 ea
<b>COIL SPRINGS</b>	Raised Height Coil Springs	40mm	KIRS-02	1 pr
	Raised Height Heavy Duty Coil Springs	40mm	ISU-201	









F  
R  
O  
N  
T

R  
E  
A  
R

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MAZDA BRAVO - 2WD

1985 to 11/2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers <b>Urethane boot optional extra</b>	STD	SA12087GL	2 ea	FRONT	
	35mm Gas Bulged Shock Absorbers	RSD	SA35649GP			
	Optional Urethane Shock Protection Boot		SC641U			
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars <b>Length 898mm</b>		MAZDA009	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Shock Absorbers - Piranha		SA35636GP	2 ea		
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA up to 250kg</b>		MAZDA006	2 ea		
	Raised Height Extra Heavy Duty 7 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>		MAZDA006M			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU756UK	1 kit	REAR	
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts <b>* Check U bolt dimensions before ordering as some later models vary</b>		UB451	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386-1K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P794	2 ea		










\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

NOTE: 4 x 2 Hi-Rider models 2004 to 2006 are exceptions.

Refer 4 x 4 section of catalogue

# MAZDA BT50 - 2WD

2.5L Diesel Standard Chassis 1/2007 to 8/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 1025mm		MAZDA051	1 pr
<b>SHOCK MOUNT REINFORCEMENT BRACKET</b>				
	Shock Absorber Top Mount Reinforcement Bracket		SHOCKBRKT-MAZ1	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers <b>Confirm Shock Measurements Before Ordering - Can Be SA35095GP</b>		*SA35650GLB*	2 ea
<b>LEAF SPRINGS</b>				
	<b>STD Chassis With Underslung Leaf Springs</b>			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	30-40mm	MAZDA060M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	30-40mm	MAZDA060MH	2 ea
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant loads</b> <b>LBA 600kg to GVM</b>	30-40mm	MAZDA060GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU765UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB475	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea









FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
\* Contact SSA For More Info\*

# MAZDA BT50 - 2WD









3L Diesel Hi-Rider 1/2007 to 8/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1025mm		MAZDA051	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea	REAR	
	35mm Adjustable Shock Absorbers - Piranha		SA35095GPA			
<b>LEAF SPRINGS</b>						
	<b>Hi-Rider Chassis With Overslung Leaf Springs</b>					
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 200kg</b>	30-40mm	MAZDA050			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 200kg to 300kg</b>	30-40mm	MAZDA050M			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	30-40mm	MAZDA050MH	2 ea		
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	30-40mm	MAZDA050GV			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU765UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB475	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386-1K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MAZDA BT50 - 2WD

2.2L Standard Chassis 8/2011 Onwards









Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers		TBA	2 ea	<b>F R O N T</b>
<b>COILS &amp; STRUT ASSEMBLY</b>	Preassembled Strut/Coil With Top Plate Mount		Nominate coil fitment		
	Raised Height Heavy Duty Coils <b>No Bar / Winch</b>	30-40mm	FOR-210	1 pr	
	Raised Extra Height Heavy Duty Coils <b>With Bar / Winch</b>	30-40mm	FOR-210H		
	Raised Height Extra Heavy Duty Coils <b>Extreme loads only</b>	30-40mm	FOR-210HD		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL3080	2 ea	
<b>TAIL SHAFT SPACER KIT</b>	Driveshaft Centre Bearing Spacer Kit		SP-MAZ-01	1 kit	<b>R E A R</b>
					
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers		*SA35650GLB*	2 ea	
	<b>Confirm Shock Measurements Before Ordering - Can Be SA35095GP</b>				
<b>LEAF SPRINGS</b>	<b>STD Chassis With Underslung Leaf Springs</b>				
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	30-40mm	MAZDA060M	2 ea	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 400kg to 600kg</b>	30-40mm	MAZDA060MH		
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	30-40mm	MAZDA060GV		
<b>SHACKLE BUSH KITS</b>	Polyurethane Bush Kit - Use With MAZDA060 Springs		BU773UK	1 kit	
					
<b>U-BOLTS</b>	Round Form U Bolts - With Nuts		UB473	4 ea	
					
<b>SHACKLES</b>	Greaseable Shackles		S389K	2 ea	
					
<b>PINS</b>	Greaseable Pins		P387-2	2 ea	
					

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

\* Contact SSA For More Info\*

# MAZDA BT50 - 2WD

2.2L & 3.2L Diesel Hi-Rider 8/2011 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GPA	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210 COIL-ST-FOR01	1 pr
	Coils Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210H COIL-ST-FOR03	
	Coils Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HD COIL-ST-FOR21	
	Coils Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HHD COIL-ST-FOR04	
	Tapered Coils Springs <b>For Vehicles Without Bullbar</b> Raised Height Coil Springs - Tapered Comfort Coil	40mm	FOR-210T COIL-ST-FOR05	
	Tapered Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HT COIL-ST-FOR52	
	Tapered Coils Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HDT COIL-ST-FOR06	
	<b>TOP PLATE MOUNT</b> Strut Top Plate Mount		TPL3080	
<b>TAIL SHAFT SPACER KIT</b> 	Driveshaft Centre Bearing Spacer Kit		SP-MAZ-01	1 kit
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	
<b>LEAF SPRINGS</b> 	<b>Hi-Rider Chassis With Overslung Leaf Springs</b> Raised Height 5 Leaf <b>Parabolic</b> Springs <b>LBA Up to 300kg - Must Use BU770UK</b>	30-40mm	MAZDA052P5	2 ea
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	30-40mm	MAZDA050	
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	30-40mm	MAZDA050M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b>	30-40mm	MAZDA050MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	30-40mm	MAZDA050GV	
	<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit - Suits OE Springs & <b>MAZDA052P5</b> With 54mm Front Spring Eye		
	Polyurethane Bush Kit - Use With MAZDA050 Springs		BU773UK	
<b>U-BOLTS</b> 	Round Form U Bolts - With Nuts		UB473	4 ea
	Round Form U Bolts - With Nuts use with MAZDA052P5 MAZDA050MHT & MAZDA050GV		UB473-1	
<b>SHACKLES</b> 	Greaseable Shackles		S389K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea

FRONT








REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# MAZDA BT50 - 2WD

High Ride 10/2020 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GP	2 ea		
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GPA			
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL12	1 pr		
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR02			
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL52			
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR53			
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount			TPL1002	2 ea
	<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha			SA35096GP	2 ea
35mm <b>Adjustable</b> Shock Absorbers - Piranha			SA35096GPA			
<b>LEAF SPRINGS</b> 	Raised Height 3 Leaf Parabolic Springs <b>No Load</b>		HOLD022P3	2 ea		
	Raised Height 4 Leaf Parabolic Springs <b>LBA 100kg to 300kg</b>		HOLD022P4			
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA Up to 300kg</b>	40mm	HOLD022			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	HOLD022M			
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD022MH			
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU792UK	1 kit		
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		UB453-2	4 ea		
	Square Form U Bolts - With Nuts use with HOLD022P4 & HOLD022MH		UB437			
<b>SHACKLES</b> 	Greaseable Shackles		S392K	2 ea		
<b>PINS</b> 	Greaseable Pin		P387-2	2 ea		


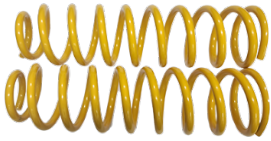







FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI TRITON - 2WD









ME, MF, MG, MH, MJ, MK 1987 to 9/2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers		SA30700G	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	ME - MJ '87 to '96 Raised Height Medium Duty Coils		NLA	1 pr		
	MK '96 to '06 Raised Height Medium Duty Coils		NLA			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Medium Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	50mm	MITS018	2 ea		
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	50mm	MITS018M			
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	MITS018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit Suits SSA Springs Only		BU774UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB451	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S795K	2 ea		
<b>PINS</b>						
	<b>Check pin size</b> Greaseable Pins Non Teardrop		P387-2 14mm	2 ea		
	Greaseable Pins Teardrop		P796 18mm			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI TRITON - 2WD

ML, MN 5/2006 to 5/2015

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67330GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207 COIL-ST-MIT01	1 pr
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207H COIL-ST-MIT11	
	Tapered Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207HD COIL-ST-MIT21	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207T COIL-ST-MIT51	
	<b>TOP PLATE MOUNT</b> Strut Top Plate Mount		TPL4075	
<b>TAIL SHAFT SPACER KIT</b> 	Use this kit with raised suspensions to correctly align the tailshaft centre bearing on 2 piece tailshafts. Contains: 1 x spacer - 2 x wedges - 4 x bolts, nuts, washers		SPKITTRIT	1 kit
	Use this kit with <b>Bluemax Springs</b> . As Bluemax springs already have a wedge fitted to bottom of the spring pack		SPKITTRIT-BM	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35634GP	2 ea
<b>LEAF SPRINGS</b> 	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 250kg</b>	50mm	MITS028	2 ea
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 300kg to 400kg</b>	50mm	MITS028M	
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant loads LBA 500kg to GVM</b>	50mm	MITS028GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU772UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts - ML <b>1/2" material</b>		UB454	4 ea
	Square Form U Bolts - With Nuts - MN <b>9/16" material</b>		UB464	
<b>SHACKLES</b> 	Greaseable Shackles		S795K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI TRITON - 2WD

MQ MR 5/2015 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67330GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207 COIL-ST-MIT01	1 pr
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207H COIL-ST-MIT11	
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207HD COIL-ST-MIT21	
	Taoered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207T COIL-ST-MIT51	
<b>TOP PLATE MOUNT SHORTENED FRONT BUMP STOP</b> 	Strut Top Plate Mount		TPL4075	2 ea
<b>TAIL SHAFT SPACER</b> 	Use to correctly align the tailshaft centre bearing on 2 piece tailshafts. <b>Contains:</b> 1 x spacer - 2 x wedges - 4 x bolts, nuts, washers		SPKITTRIT	1 kit
	Use this kit with <b>Bluemax Springs</b> . As Bluemax springs already have a wedge fitted to bottom of the spring pack		SPKITTRIT-BM	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35645GP	2 ea
<b>LEAF SPRINGS</b> 	Raised Height Heavy Duty Leaf Springs <b>LBA up to 250kg</b>	40-50mm	MITS040	2 ea
	Raised Height Heavy Duty Leaf Springs <b>LBA 300kg to 500kg</b>	40-50mm	MITS040M	
	Raised Height Extra Heavy Duty Leaf Springs <b>LBA 600kg to GVM</b>	40-50mm	MITS040GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU782UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts With Nuts		UB453-2	4 ea
	Square Form U Bolts With Nuts <b>use with MITS040M &amp; MITS040GV</b>		UB437	
<b>SHACKLES</b> 	Greaseable Shackles		S393K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea









FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# NISSAN NAVARA - 2WD








D21, D22 to Current Model

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Shock Absorbers <b>Urethane boot optional extra</b> <b>*Bulged cannister too big for control arms</b>		SA12087GL	2 ea	<b>F R O N T</b>
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars				<b>R E A R</b>
	D21 1985 to 1996 - <b>Length 1203mm</b>		NISS013	1 pr	
	D22 1997 to current - <b>Length 890mm</b>		NISS013A		
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35074GP	2 ea	
<b>LEAF SPRINGS</b>					
	Raised Height Medium Duty 3 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	NISS022	2 ea	
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	40mm	NISS022M		
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>LBA 450kg to GVM</b>	40mm	NISS022MH		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit		BU704UK	1 kit	
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts <b>190mm x 77mm x 1/2"</b>		UB451	4 ea	
	Round Form U Bolts - With Nuts <b>215mm x 83mm x 9/16"</b>		UB453-1		
<b>SHACKLES</b>					
	Greaseable Shackles		S797K	2 ea	
<b>PINS</b>					
	Greaseable Pins		P798	2 ea	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# NISSAN NAVARA - 2WD

D40 11/2005 to 12/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67089GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226 COIL-ST-NIS01	1 pr
	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HD COIL-ST-NIS21	
	Tapered Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226T COIL-ST-NIS52	
	Tapered Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HDT COIL-ST-NIS51	
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35651GP	2 ea
	41mm Foam Cell Shock Absorbers (for NISS024GV use only)		SA41094FCA	
<b>LEAF SPRINGS</b> 	Raised Height Medium Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	40mm	NISS024	1 pr
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	NISS024M	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant loads</b> <b>LBA 500kg to GVM</b>	40mm	NISS024GV	
	<b>Note: When using NISS024GV use Braided Extended Brake Hoses BH1010BR</b>			
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU767UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with NISS024GV</b>		UB437	
<b>SHACKLES</b> 	Greaseable Shackles		S797-1K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea








FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# NISSAN NAVARA - 2WD

D40 2012 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67089GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226 COIL-ST-NIS01	1 pr
	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HD COIL-ST-NIS21	
	Tapered Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226T COIL-ST-NIS52	
	Tapered Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HDT COIL-ST-NIS51	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL2040	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35651GP	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Medium Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	40mm	NISS034	2 ea
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	NISS034M	
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	NISS034MH	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU767UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-3	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S797-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea

FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# Can you spot the BLUE MAX Difference?



## ORIGINAL SUSPENSION



ORIGINAL SUSPENSION UNLADEN



ORIGINAL SUSPENSION UNLADEN

See how each suspension handles the 500kg of load in the rear of the vehicle.

## BLUEMAX SUSPENSION



BLUEMAX SUSPENSION UNLADEN



BLUEMAX SUSPENSION UNLADEN

Save yourself time and money and let **BLUE MAX** Lighten your load...

If your vehicle is sagging because it can't carry the load or if the comfort has gone in your ride, then it sounds like you need a lift. Allow SSA to "get it right for you...the first time". You will be turning heads when you get that **BLUE MAX** suspension look..**Don't be fooled by shonky advertising.** You know exactly what you want from your vehicle, so come to the experts in suspension who deliver sound advice, quality products and service, along with great



*Go to the Max*

**PH: 1800 630 411**











[www.ssa.com.au](http://www.ssa.com.au)

**SUSPENSION BUILT TO LAST**  
[info@ssa.com.au](mailto:info@ssa.com.au)



# TOYOTA HILUX - 2WD


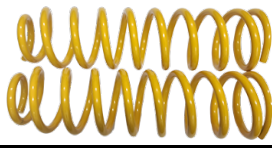






8/1988 to 2005

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Shock Absorbers		SA30700G	2 ea	FRONT
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars		TOY033	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>Main Leaf 530mm - 670mm</b> <b>LBA up to 250kg</b>	40mm	TOY085M	2 ea	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	TOY085MH		
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>Main leaf 560mm - 740mm</b> <b>Must check main leaf length - LBA up to 200kg</b>	40mm	TOY040		
	Raised Height Extra Heavy Duty 4 + 2 Leaf Springs <b>Main leaf 560mm - 740mm</b> <b>Must check main leaf length - LBA 300kg to 500kg</b>	40mm	TOY040M		
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit for <b>TOY085M / MH</b> <b>use with parallel shackle</b>		BU733UKT	1 kit	REAR
	Polyurethane Bush Kit for <b>TOY085M / MH</b> <b>use with non parallel shackle</b>		BU758UK		
	Polyurethane Bush Kit for <b>TOY040 / TOY040M</b> <b>use with non parallel shackle</b>		BU747UK		
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts for <b>TOY085M/MH</b>		UB451	4 ea	
	Round Form U Bolts - With Nuts for <b>TOY040/M</b>		UB455		
<b>SHACKLES</b>					
	Greaseable Shackles Parallel		S386K	2 ea	
	Greaseable Shackles Non Parallel		S386-1K		
<b>PINS</b>					
	<b>Check pin size</b> Greaseable Pins Non Teardrop		P387-2	2 ea	
	Greaseable Pins Teardrop		P385		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HILUX - 2WD


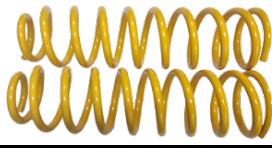






2005 to 10/2015

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT / SHOCK ABSORBERS</b>						
	Strut/Gas Spring Seat Shock Absorbers		SA67711G	1 L	FRONT	
			SA67712G	1 R		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs		TPR-213	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP			
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35650GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Medium Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	TOY145			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>Constant loads - LBA 250kg to 400kg</b>	40mm	TOY145M	2 ea		
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>Constant loads - LBA 500kg to GVM</b>	40mm	TOY145MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU776UK genuine tear-drop pin BU766UK P387-2	1 kit	REAR	
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-3	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S387K	2 ea		
<b>PINS</b> (check pin type)						
	Greaseable Pins <b>non-teardrop</b>		P387-2	2 ea		
	Greaseable Pins <b>teardrop</b>		N/A			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HILUX - 2WD








10/2015 Onwards Standard Chassis Underslung Reaf Leaf

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT / SHOCK ABSORBERS</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67711G	1 L	FRONT
			SA67712G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs		TPR-213	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP	2 ea	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35650GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Medium Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	TOY052	2 ea	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>Constant loads - LBA 200kg - 500kg</b>	40mm	TOY052M		
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>Constant loads - LBA 500kg to GVM</b>	40mm	TOY052MH		
<b>Special Note: From Factory Single Cab Models Should Have a 35mm Front Spring Eye &amp; Extra/Dual Cabs Should Have a 40mm Front Spring Eye Where SSA Springs Have 35mm Spring Eye . We Use This Spring For All Models.</b>					
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit - Suits Tear Drop Style Pin & SSA Springs		BU777UK	1 kit	REAR
	Polyurethane Bush Kit - Suits 14mm Bolt Style Pin & SSA Springs		BU794UK		
<b>Special Note: Replacement Bushes For 40mm Front Spring Eye Use BU776UK For Teardrop Pins &amp; BU766UK For 14mm Bolt Style Pin</b>					
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts		UB453-3	4 ea	
<b>SHACKLES</b>					
	Greaseable Shackles		TBA	2 ea	
<b>PINS</b>					
(check pin type)	Greaseable Pins <b>non-teardrop</b>		P387-2	2 ea	
	Greaseable Pins <b>teardrop</b>		N/A		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HILUX - 2WD

2015 Onwards High Rider Chassis Overslung Reaf Leaf

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67087GP</b>	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204</b> <b>COIL-ST-TPR01</b>	1 pr
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204H</b> <b>COIL-ST-TPR11</b>	
	Coil Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HD</b> <b>COIL-ST-TPR21</b>	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204T</b> <b>COIL-ST-TPR52</b>	
	Tapered Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HT</b> <b>COIL-ST-TPR51</b>	
	<b>TOP PLATE MOUNT</b>	Strut / Coil Assembly Top Plate Mount		
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35098GP</b>	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		<b>SA35098GPA</b>	
<b>LEAF SPRINGS</b> 	Raised Height Comfort 3 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	<b>TOY056</b>	2 ea
	Raised Height Heavy Duty 3 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	50mm	<b>TOY056M</b>	
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	<b>TOY056GV</b>	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		<b>BU766UK</b>	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		<b>UB453-2</b>	4 ea
	Square Form U Bolts - With Nuts <b>use with TOY056M &amp; TOY056GV</b>		<b>UB437</b>	
<b>SHACKLES</b> 	Greaseable Shackles		<b>S391K</b>	2 ea
<b>PINS</b> 	Greaseable Pins		<b>P387-2</b>	2 ea








FRONT

REAR

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# TOYOTA HI-ACE - 2WD







100 Series 1989 to 2004

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers		SAS290152	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars		TOY027	1 pr		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers - <b>eye/pin</b>		SAS312804	2 ea	REAR	
	30mm Gas Shock Absorbers - <b>eye/eye</b> <b>Confirm shock end types</b>		SAS230023			
<b>LEAF SPRINGS</b>						
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	40mm	TOY029	2 ea		
	Raised Height Extra Heavy Duty 5 + 1 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant loads</b> <b>LBA 600kg to GVM</b>	40mm	TOY029GV			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU754UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-3	4 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HI-ACE - 2WD


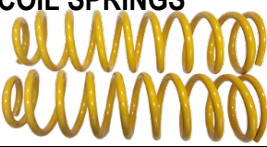




200 Series 3/2005 to 4/2019

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers		SAS315350	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars		TOY027	1 pr		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers		SAS315351	2 ea	REAR	
<b>LEAF SPRINGS</b>						
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	40mm	TOY029	2 ea		
	Raised Height Extra Heavy Duty 5 + 1 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	40mm	TOY029GV			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit <b>does not include chassis bushes</b>		BU784UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-3	4 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HI-ACE - 2WD

300 Series 4/2019 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers		TBA	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs		TBA	1 pr		
<b>SHOCK ABSORBERS</b>						
	30mm Gas Shock Absorbers		TBA	2 ea	REAR	
<b>LEAF SPRINGS</b>						
	OE Replacement 3 Leaf Parabolic Springs	20mm	TOY030P			
	Heavy Duty 4 Leaf Parabolic Springs LBA 300kg to 500kg	20mm	TOY030MP			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		TBA	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		TBA	4 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



*Go to the Max*

2022

## MISCELLANEOUS SUSPENSION PARTS

Repair Plates (Loose Leaf Spring)  
& Centre Bolts



[www.ssa.com.au](http://www.ssa.com.au)



# CENTRE BOLTS



## STANDARD HEAD CENTREBOLTS

BlueMaxPart No.	Shank Diameter	Shank Length	Head Diameter	Head Length
CB516-3	5/16"	3"	12mm	10mm
CB516-4	5/16"	4"	12mm	10mm
CB516-6	5/16"	6"	12mm	10mm
CB38-2	3/8"	2"	14mm	10mm
CB38-3	3/8"	3"	14mm	10mm
CB38-4	3/8"	4"	14mm	10mm
CB38-6	3/8"	6"	14mm	10mm
CB38-8	3/8"	8"	14mm	10mm
CB38-10	3/8"	10"	14mm	10mm
CB716-6	7/16"	6"	16mm	12mm



## SPECIAL HEAD CENTREBOLTS

BlueMaxPart No.	Shank Diameter	Shank Length	Head Diameter	Head Length
CBS516-3	5/16"	3"	13mm	16mm
CBS516-4	5/16"	4"	13mm	16mm
CBS38-4.5A	3/8"	4.5"	16mm	14mm
CBS38-4.5B	3/8"	4.5"	14mm	16mm

# Miscellaneous LEAF SPRINGS



## REPAIR PLATES

BlueMaxPart No.	Material Width x Thickness (mm)	Dimensions Front-Rear (mm)
RP6071500P	60 x 7 x 1500	650-850
RP6081600P	60 x 8 x 1600	750-850
RP6571500P	65 x 7 x 1500	650-850
RP6581500P	65 x 8 x 1500	650-850
RP7071600P	70 x 7 x 1600	700-900
RP7081600P	70 x 8 x 1600	700-900
RP70101500P	70 x 10 x 1500	650-850
RP70111500P	70 x 11 x 1500	750-750
RP70121550P	70 x 12 x 1550	700-850
RP75131600P	75 x 13 x 1600	800-800
RP80101600P	80 x 10 x 1600	800-800
RP80111600P	80 x 11 x 1600	800-800
RP80121600P	80 x 12 x 1600	800-800

Note: 1. Punched centre bolt hole 2. All plates have 200mm camber

## PRE CUT LEAVES

BlueMax Part No.	Fitment	Material Width x Thickness (mm)	Dimensions Front-Rear (mm)	Camber (mm)	C/Bolt
RP14PC	Falcon Rear Wagon / Ute	65 x 8	550-865	120	5/16"
RP15PC	Falcon AU Rear	65 x 9	550-870	130	11mm

Note: All Pre Cut leaves have speared ends and pad holes cut to size

## PARABOLIC REPAIR LEAVES

BlueMaxPart No.	Material Width x Thickness (mm)	Dimensions Front-Rear (mm)
RPP70161350	70 x 16 (Centre) x 1350	675-675
RPP75131800	70 x 13 (Centre) x 1800	900-900
RPP75161800	70 x 16 (Centre) x 1800	900-900
RPP80201600	80 x 20 (Centre) x 1600	800-800
RPP80241600	80 x 24 (Centre) x 1600	800-800



*Go to the Max*

2022

# U Bolts

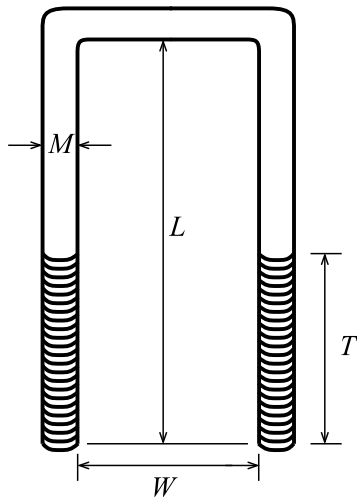


[www.ssa.com.au](http://www.ssa.com.au)

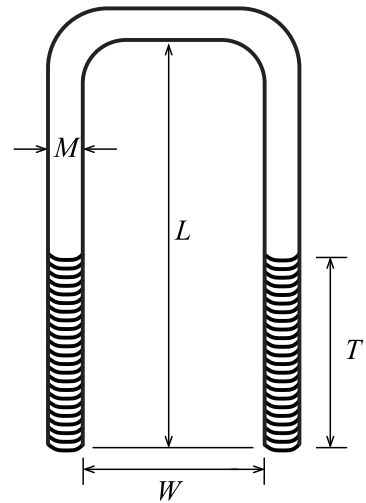
**Note:** The "Bluemax" parts offered are not O.E.M. Parts. Manufacturer's names, parts numbers and other references or illustrations are for identification purposes only. The products offered are after market parts suitable for the use or vehicle prescribed.

# U BOLT MANUFACTURE FORM

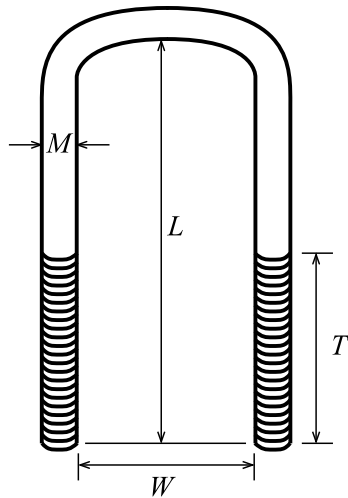
**SQUARE TOP  
FORM A**



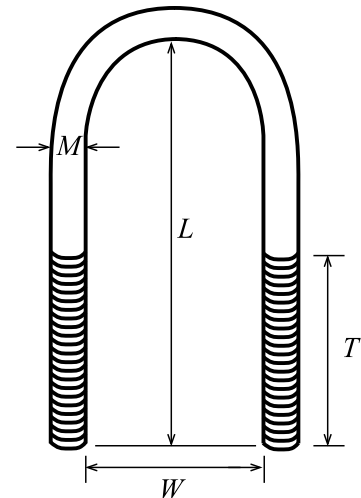
**SQUARE TOP  
ROUND CORNER  
FORM B**



**SEMI ROUND  
TOP  
FORM C**



**ROUND TOP  
FORM D**



"U" Bolts can be made to order given the specifications listed. Specify the vehicle make/model to assist in shape determination  
All manufactured "U" Bolts are UNF thread. Any "U" Bolt made to order is Non-Returnable

ORDER No.:	VEHICLE MAKE/MODEL:	QTY:
( ) =	( ) = Form of "U" Bolt i.e. (A), (B), (C) or (D)	
W =	W = Inside Width	
M =	M = Material Diameter	
L =	L = Inside Length	
T =	T = Thread Length	

**Date:** \_\_\_\_\_ **Order No.:** \_\_\_\_\_

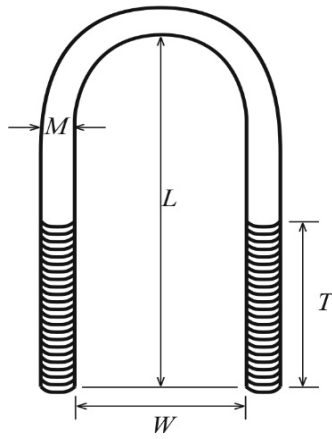
**Company:** \_\_\_\_\_ **Contact:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**Transport Company:** \_\_\_\_\_

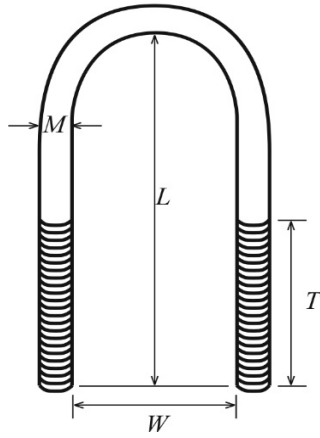
\*Manufactured U Bolts are only available through Brisbane

# ROUND TOP (RD)



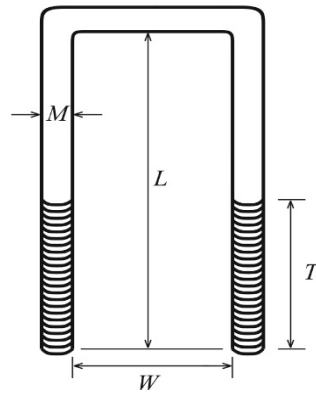
BlueMax Part No.	Form	Specifications				
		L	W	M	M	T
UB652	ROUND	150	60	10	7/16	61
UB512	ROUND	160	70	11	7/16	65
UB258-3	ROUND	200	71	11	7/16	100
UB655	ROUND	145	72	11	7/16	60
UB258-1	ROUND	190	75	11	7/16	80
UB258	ROUND	230	75	11	7/16	100
UB258L	ROUND	265	75	11	7/16	100
UB654	ROUND	165	82	11	7/16	75
UB451	ROUND	195	75	12	1/2	75
UB451-2	ROUND	220	75	12	1/2	80
UB475	ROUND	205	88	12	1/2	80
UB455	ROUND	150	72	14	9/16	70
UB478	ROUND	195	72	14	9/16	
UB458	ROUND	190	75	14	9/16	75
UB458-1	ROUND	220	75	14	9/16	65
UB453-3	ROUND	200	85	14	9/16	100
UB453-1	ROUND	215	83	14	9/16	100
UB416	ROUND	235	83	14	9/16	100
UB418	ROUND	260	83	14	9/16	
UB473	ROUND	200	88	14	9/16	102
UB473-1	ROUND	215	88	14	9/16	100
UB453	ROUND	220	97	14	9/16	102
UB671	ROUND	260	112	14	9/16	80
UB472	ROUND	285	90	16	5/8	102
UB472-1	ROUND	300	90	16	5/8	120

# ROUND TOP (RD)



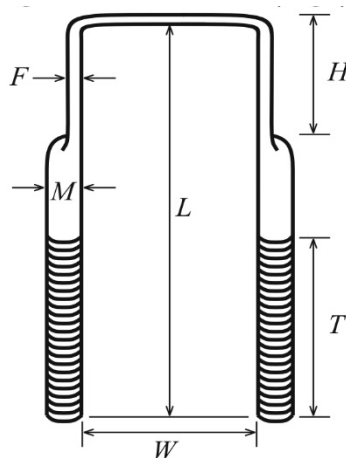
BlueMax Part No.	Application	Form	Specifications				
			L	W	M	M	T
UB473	MISCELLANEOUS	ROUND	200	88	14	9/16	100
UB473-1	RODEO RA REAR	ROUND	215	88	14	9/16	100
UB670	NISSAN	ROUND	230	95	14	9/16	100
UB453S	NISSAN	ROUND	210	97	14	9/16	100
UB453	NISSAN	ROUND	220	97	14	9/16	100
UB671	NISSAN	ROUND	265	112	14	9/16	100
UB472	FORD F250 REAR	ROUND	280	90	16	5/8	
UB472-1	FORD F250 REAR	ROUND	295	90	16	5/8	
UB569	MISCELLANEOUS	ROUND	460	72	19	3/4	
UB925	FRUEHAUF , MCGRATH	ROUND	343	75	19	3/4	
UB924	MISCELLANEOUS	ROUND	420	75	19	3/4	
UB266	MACK	ROUND	280	92	19	3/4	100
UB589	MISCELLANEOUS	ROUND	264	102	19	3/4	
UB586	3/4" X 5" X 11.5"	ROUND	292	127	19	3/4	
UB34-5-12.5RD	3/4" X 5" X 12.5" RD	ROUND	317	127	19	3/4	
UB588	FREIGHTER	ROUND	343	127	19	3/4	
UB34-5-14.5RD	3/4" X 5" X 14.5" RD	ROUND	370	127	19	3/4	
UB34-5-15.5RD	3/4" X 5" X 15.5" RD	ROUND	394	127	19	3/4	

## SQUARE TOP (SQ)



BlueMax Part No.	Form	Specifications				
		L	W	M	M	T
UB452S	SQUARE	100	62	12	1/2	60
UB452	SQUARE	120	62	12	1/2	65
UB788	SQUARE	195	63	12	1/2	78
UB454	SQUARE	185	72	12	1/2	77
UB453-2	SQUARE	180	62	14	9/16	75
UB437	SQUARE	210	62	14	9/16	100
UB464	SQUARE	185	72	14	9/16	73
UB436	SQUARE	220	73	14	9/16	121
UB471	SQUARE	235	77	14	9/16	102
UB471-1	SQUARE	250	77	14	9/16	102
UB449	SQUARE	235	84	14	9/16	101

## SQUARE FORGED (SQF)



BlueMax Part No.	Form	Specifications				
		L	W	M	M	T
UB669F	SQUARE FORGED	220	73	14	9/16	76
UB678	SQUARE FORGED	210	63	14	9/16	100



*Go to the Max*

2022

**4WD**

APPLICATION LISTING



[www.ssa.com.au](http://www.ssa.com.au)


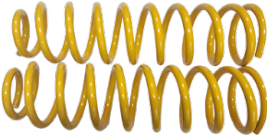

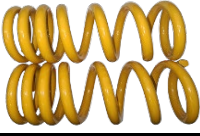


**Note:** The "Bluemax" parts offered are not O.E.M. Parts. Manufacturer's names, part numbers and other references or illustrations are for identification purposes only. The products offered are after market parts suitable for the use or vehicle prescribed.












# FORD EXPLORER - 4WD

UT, UX, UZ V6 & V8 Models 2001 to 2005

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Shock Absorbers (Sachs)		SAS030320	2 ea	FRONT
<b>COIL SPRINGS</b>					
	Raised Height Coil Springs <b>6 Cylinder Engine</b>	25mm	FOR-208	1 pr	FRONT
	Raised Height Coil Springs <b>V8 Engine</b>	25mm	FOR-208SP		
<b>SHOCK ABSORBERS</b>					
	35mm Gas Shock Absorbers	25mm	SAS030321	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Coil Springs <b>6 Cylinder &amp; V8 Engine</b>	25mm	FOR-209	1 pr	REAR

# FORD COURIER / RAIDER - 4WD

1987 to 11/2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 924mm		MAZDA005	1 pr
<b>SHOCK MOUNT REINFORCEMENT BRACKET</b>				
	Shock Absorber Top Mount Reinforcement Bracket		SHOCKBRKT-MAZ1	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs Overslung - LBA up to 400kg	50mm	MAZDA016	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU756UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB453-1	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P794	2 ea










F  
R  
O  
N  
T

R  
E  
A  
R

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD RANGER - 4WD

PJ, PK 2007 to 8/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 1025mm		MAZDA051	1 pr
<b>SHOCK MOUNT REINFORCEMENT BRACKET</b>				
	Shock Absorber Top Mount Reinforcement Bracket		SHOCKBRKT-MAZ1	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	
<b>LEAF SPRINGS</b>				
	<b>Overslung Leaf Springs</b> Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA up to 150kg</b>	30-40mm	MAZDA050	2 ea
	<b>Overslung Leaf Springs</b> Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	30-40mm	MAZDA050M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	30-40mm	MAZDA050MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	30-40mm	MAZDA050GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU765UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB475	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea

FRONT

REAR

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# PROBLEM SOLVED



## DO YOUR CUSTOMERS CARRY HEAVY LOADS?

At SSA we have been able to solve the heavy load requirements of Mazda BT50/Ford Ranger customers with our spring made to our unique design. This has given the over slung spring added strength in its low camber design.

**NOTE: Loads are to be kept within the vehicle's legal limits. See how this was achieved in this featured video.**

**VISIT WEBSITE: [www.ssa.com.au/solutions/improved-suspension-mazda-bt50](http://www.ssa.com.au/solutions/improved-suspension-mazda-bt50)**

## EXTRA HEAVY SPRING PACKS

SSA has now expanded its range of heavy duty springs to other makes incorporating this same design. These include:

- **Isuzu Dmax/Holden Colorado 2012** - HOLD022GV
- **Mazda BT50/Ford Ranger '06-'11** - MAZDA050GV
- **Mazda BT50/Ford Ranger '12 on** - MAZDA052GV
- **Mitsubishi Triton MQ** - MITS04GV
- **Nissan Navara D23** - NISS036GV
- **Nissan Navara D40** - NISS024GV
- **Toyota Hilux '05-15** - TOY146GV
- **Toyota Hilux '15 on** - TOY056GV
- **Mitsubishi Triton ML/MN** - MITS028GV

### CONTACT US:









**PHONE:** 1800 630 411

**EMAIL:** [info@ssa.com.au](mailto:info@ssa.com.au)



# FORD RANGER - 4WD

PX I & II 2011 to 6/2018

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GP	2 ea	
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GPA		
<b>COILS &amp; STRUT ASSEMBLY</b>	Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210 COIL-ST-FOR01	1 pr	
	Coils Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210H COIL-ST-FOR03		
	Coils Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HD COIL-ST-FOR21		
	Coils Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HHD COIL-ST-FOR04		
	Tapered Coils Springs <b>For Vehicles Without Bullbar</b> Raised Height Coil Springs - Tapered Comfort Coil	40mm	FOR-210T COIL-ST-FOR05		
	Tapered Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HT COIL-ST-FOR52		
	Tapered Coils Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HDT COIL-ST-FOR06		
					
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL3080	2 ea	
<b>TAIL SHAFT SPACER KIT</b>		Driveshaft Centre Bearing Spacer Kit	SP-MAZ-01	1 kit	
<b>SHOCK ABSORBERS</b>		35mm Gas Bulged Shock Absorbers - Piranha	SA35095GP	2 ea	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha	SA35095GPA			
<b>LEAF SPRINGS</b>		Raised Height 5 Leaf <b>Parabolic</b> Springs <b>LBA Up to 300kg - Must Use BU770UK</b>	40mm	MAZDA052P5	2 ea
		Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	40mm	MAZDA050	
		Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	MAZDA050M	
		Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	40mm	MAZDA050MH	
		Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	MAZDA050GV	
<b>SHACKLE BUSH KITS</b>		Polyurethane Bush Kit - Suits OE Springs & <b>MAZDA052P5</b> With 54mm Front Spring Eye	BU770UK	1 kit	
		Polyurethane Bush Kit - <b>Use With MAZDA050 Springs</b>	BU773UK		
<b>U-BOLTS</b>		Round Form U Bolts - With Nuts	UB473	4 ea	
		Round Form U Bolts - With Nuts use with MAZDA052P5 MAZDA050MHT & MAZDA050GV	UB473-1		
<b>SHACKLES</b>		Greaseable Shackles	S389K	2 ea	
<b>PINS</b>		Greaseable Pins	P387-2	2 ea	









FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD RANGER - 4WD

PX III 08/2018 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers		SA67093GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224 COIL-ST-FOR07	1 pr
	Coil Springs <b>For Vehicles With Alloy Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224H COIL-ST-FOR08	
	Coil Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	50mm	FOR-224HH COIL-ST-FOR09	
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	50mm	KFFR-24HD COIL-ST-FOR12	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224T COIL-ST-FOR10	
	Tapered Coil Springs <b>For Vehicles With Alloy Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-224HT COIL-ST-FOR11	
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		
<b>TAIL SHAFT SPACER KIT</b> 	Driveshaft Centre Bearing Spacer Kit - Required		SP-MAZ-01	1 kit
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	
<b>LEAF SPRINGS</b> 	Raised Height 5 Leaf <b>Parabolic</b> Springs <b>LBA Up to 300kg - Must Use BU770UK</b>	40mm	MAZDA052P5	
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	40mm	MAZDA050	
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	MAZDA050M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	40mm	MAZDA050MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	MAZDA050GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit - Suits OE Springs & <b>MAZDA052P5</b> With 54mm Front Spring Eye		BU770UK	1 kit
	Polyurethane Bush Kit - <b>Use With MAZDA050 Springs</b>		BU773UK	
<b>U-BOLTS</b> 	Round Form U Bolts - With Nuts		UB473	4 ea
	Round Form U Bolts - With Nuts use with MAZDA052P5 MAZDA050MHT & MAZDA050GV		UB473-1	
<b>SHACKLES</b> 	Greaseable Shackles		S389K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea



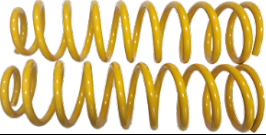


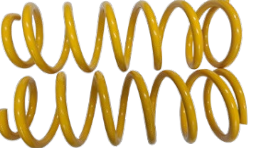
FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD MAVERICK - 4WD


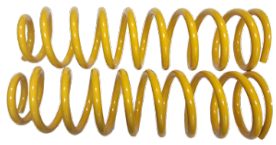


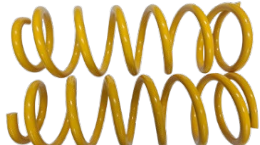
Y60 SWB Hardtop 1988 to 1994

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35091GP</b>		
	41mm Foam Cell Shock Absorbers		<b>SA41091FCN</b>		
<b>STEERING DAMPER</b>					
	Steering Damper - Pre 9/1989	Eye/Eye	<b>SD14034G</b>	1 only	<b>F R O N T</b>
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	<b>SD35036</b>		
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>No bar / winch</b>	50mm	<b>NIS-200</b>	1 pr	<b>F R O N T</b>
	Raised Height Heavy Duty Coil Springs <b>With bar / winch</b>	50mm	<b>NIS-201</b>		
<b>CASTER BUSH KIT</b>					
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		<b>BU1721UK</b>	1 kit	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35094GP</b>		<b>R E A R</b>
	41mm Foam Cell Shock Absorbers		<b>SA41094FC</b>		
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>LBA up to 100KG</b>	50mm	<b>NIS-213</b>	1 pr	<b>R E A R</b>
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg to GVM</b>	50mm	<b>NIS-214</b>		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# FORD MAVERICK - 4WD

Y60 LWB Station Wagon 1988 to 1994

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCN	
<b>STEERING DAMPER</b>				
	Steering Damper - Pre 9/1989	Eye/Eye	SD14034G	1 only
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	SD35036	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD	NIS-204	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 45kg</b>	50mm	NIS-201	
	Raised Height Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	NIS-201HD	
	Raised Height Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	65mm	NIS-201HHD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty	STD	NIS-220	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 150kg</b>	50mm	NIS-214	
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg to 350kg GVM</b>	50mm	NIS-214HD	
	Raised Height Heavy Duty Coil Springs <b>LBA 400kg to GVM - constant load</b> when fitting NIS-214EHD it is recommended to fit coil tower brace bracket	50mm	NIS-214EHD	

FRONT
















REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# FORD MAVERICK - 4WD

Y60 Cab Chassis & Utility 1988 to 1994

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers		SA35661G	2 ea
	41mm Foam Cell Shock Absorbers		SA41661FC	
<b>STEERING DAMPER</b>				
	Steering Damper - Pre 9/1989	Eye/Eye	SD14034G	1 only
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	SD35036	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 Leaf Springs <b>Heavy duty</b>	50mm	NISS011	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU718UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB436	3 N/S
	Square Forged U Bolts - With Nuts		UB669F	1 D/S
<b>SHACKLES</b>				
	Greaseable Shackles <b>Anti-Inversion Shackles Also Available</b>		S353K	2 ea
<b>PINS</b>				
	Greaseable Pins		P667	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers		SA35648GL	2 ea
	41mm Foam Cell Shock Absorbers <b>Urethane boot optional extra</b>		SA41648FC	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 + 2 Leaf Springs <b>LBA up to 300kg</b>	50mm	NISS012D-S NISS012N-S	1 D/S 1 N/S
	Raised Height Extra Heavy Duty 9 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	NISS012MH	
	Raised Height Extra Heavy Duty 7 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	50mm	NISS012GV	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB453	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles <b>Anti-Inversion Shackles Also Available</b>		S353K	2 ea
<b>PINS</b>				
	Greaseable Pins		P667	2 ea


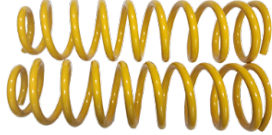


FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)


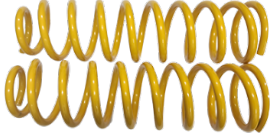


# FORD TERRITORY - 4WD

SX SY 2004 to 9/2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA673671G	1 L	FRONT
			SA673672G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs AWD Only	20mm	FOR-213	1 pr	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Bulged Shock Absorbers		SAB36680	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs AWD Only	20mm	FOR-214	1 pr	

# FORD TERRITORY - 4WD

SX SY SZ 10/2007 to 5/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA673675G	1 L	FRONT
			SA673676G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs AWD Only	15-20mm	FOR-211	1 pr	
<b>SHOCK ABSORBERS</b>					
	30mm Gas Bulged Shock Absorbers		SAB36680	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs AWD Only	25mm	FOR-214	1 pr	

# FORD F250 - 4WD

2000 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35101GP	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty Parabolic Springs <b>3 Leaf - LBA up to 100kg - bushes supplied pre fitted</b>	50mm to 75mm	FORD033P3	2 ea
	Raised Height Extra Heavy Duty Parabolic Springs <b>4 leaf - use with extreme loads LBA 100kg plus - bushes supplied pre fitted</b>	50mm to 75mm	FORD033P4	
<b>SHACKLE BUSHES</b>				
	Silent Block Bush - Shackle Pin Upper & Lower		BU149	4 ea
	Silent Block Bush - Fixed Pin		BU150	2 ea
	also available as Polyurethane Bush Kit		BU740UK	1 kit
<b>PINS</b>				
	Greaseable Pins - <b>Front Eye Only</b>		P1136	2 ea
	Greaseable Pins - <b>Rear Eye Only. Will not fit Shackle</b>		P1134	2 ea
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB471	4 ea
<b>PANHARD RODS</b>				
	Adjustable Panhard Rod		PRF250	1 ea
<b>SHOCK ABSORBERS</b>				
	<b>Quad Suspension</b> 35mm Gas Bulged Shock Absorbers - Piranha		SA35102GP	4 ea
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 500kg</b>	50mm	FORD031	2 ea
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 500kg to 800kg</b>	50mm	FORD031M	
<b>SHACKLE BUSHES</b>				
	Silent Block Bush - Shackle Pin Upper & Lower		BU149	4 ea
	Silent Block Bush - Fixed Pin		BU150	2 ea
	also available as Polyurethane Bush Kit		BU740UK	1 kit
<b>PINS</b>				
	Greaseable Pins - <b>Front Eye Only</b>		P1136	2 ea
	Greaseable Pins - <b>Rear Eye Only. Will not fit Shackle</b>		P1134	2 ea
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB472	4 ea
	Round Form U Bolts - With Nuts <b>use with FORD031M</b>		UB472-1	
<b>POLYAIR SPRINGS</b>				
	Polyair Bellows Kit F250, F350 2000 onwards 4 shock rear	RSD	PA85301	1 kit
	Spacer Bracket <b>use with RSD suspension</b>		SP-F250	4 ea
	Square Form U Bolts - With Nuts <b>to suit spacer bracket</b>		UB381	4 ea














FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FORD F350 - 4WD

2000 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35101GP	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty Parabolic Springs <b>3 Leaf - LBA up to 100kg - bushes supplied pre fitted</b>	50mm to 75mm	FORD033P3	2 ea
	Raised Height Extra Heavy Duty Parabolic Springs <b>4 leaf - use with extreme loads LBA 100kg plus - bushes supplied pre fitted</b>	50mm to 75mm	FORD033P4	
<b>SHACKLE BUSHES</b>				
	Silent Block Bush - Shackle Pin Upper & Lower		BU149	4 ea
	Silent Block Bush - Fixed Pin		BU150	2 ea
	Also available as Polyurethane Bush Kit		BU740UK	1 kit
<b>PINS</b>				
	Greaseable Pins - <b>Front Eye Only</b>		P1136	2 ea
	Greaseable Pins - <b>Rear Eye Only. Will not fit Shackle</b>		P1134	2 ea
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB471	4 ea
<b>PANHARD RODS</b>				
	Adjustable Panhard Rod		PRF250	1 ea
<b>SHOCK ABSORBERS</b>				
	35mm Shock Absorbers		SA35102GP	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty Leaf Springs <b>*** Made to order ***</b>	50mm	FORD038	2 ea
<b>SHACKLE BUSHES</b>				
	Silent Block Bush - Shackle Pin Upper & Lower		BU149	4 ea
	Silent Block Bush - Fixed Pin		BU150	2 ea
	Also available as Polyurethane Bush Kit		BU740UK	1 kit
<b>PINS</b>				
	Greaseable Pins - <b>Front Eye Only</b>		P1136	2 ea
	Greaseable Pins - <b>Rear Eye Only. Will not fit Shackle</b>		P1134	2 ea
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		TBA	4 ea








FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# FOTON TUNLAND - 4WD

P201 2012 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67087GP</b>	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204</b> <b>COIL-ST-TPR01</b>	1 pr
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204H</b> <b>COIL-ST-TPR11</b>	
	Coil Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HD</b> <b>COIL-ST-TPR21</b>	
	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204T</b> <b>COIL-ST-TPR52</b>	
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HT</b> <b>COIL-ST-TPR51</b>	
	<b>TOP PLATE MOUNT</b>	Strut / Coil Assembly Top Plate Mount		
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35650GP</b>	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		<b>SA35650GPA</b>	
<b>LEAF SPRINGS</b> 	Raised Height Medium Duty 4 + 2 Leaf Springs <b>LBA up to 150kg</b> <b>* do not use TOY146 on style side utilities</b>	40mm	<b>TOY146</b>	2 ea
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	40mm	<b>TOY146M</b>	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	<b>TOY146GV</b>	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		<b>BU766UK</b>	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		<b>UB453-2</b>	4 ea
	Square Form U Bolts - With Nuts <b>use with TOY146P5, TOY146M, TOY146MH &amp; TOY146GV</b>		<b>UB437</b>	
<b>SHACKLES</b> 	Greaseable Shackles		<b>S387K</b>	2 ea
<b>PINS</b> 	Greaseable Pins		<b>P387-2</b>	2 ea


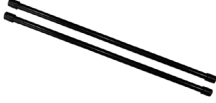






FRONT

REAR

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# GREAT WALL - 4WD









V200 Diesel, V240

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha	RSD	SA35649GP		FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	50mm	HOLD018			
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB473	4 ea		
	Round Form U Bolts - With Nuts <b>Use with HOLD018M &amp; HOLD018MH</b>		UB473-1			
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# GREAT WALL - 4WD

## STEED





Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha	RSD	SA35649GP		FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	50mm	HOLD018			
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB473	4 ea		
	Round Form U Bolts - With Nuts <b>Use with HOLD018M &amp; HOLD018MH</b>		UB473-1			
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)











# GREAT WALL - 4WD

X200 - X240

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers <b>Urethane boot optional extra</b>		SA35643G	2 ea	FRONT
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP		
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars		HOLD005B	1 pr	REAR
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers <b>DO NOT use this shock with STD suspension</b>		SA35661G	2 ea	
<b>COIL SPRINGS</b>					
	Raised Height Medium Duty Coil Springs	30mm	HOL-202	1 pr	

# HOLDEN RODEO - 4WD









KB/TFS 8/1988 to 2003

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP		FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1000mm		HOLD005A	1 pr	FRONT	
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 300kg</b>	40mm	HOLD004M	2 ea		
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 400kg</b>	40mm	HOLD004MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-1	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN RODEO - 4WD









RA 2003 to 2008

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs LBA up to 250kg	50mm	HOLD018	2 ea		
	Raised Height Heavy Duty 6 + 3 Leaf Springs LBA 250kg to 400kg	50mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs LBA 500kg to GVM	50mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB473	4 ea		
	Round Form U Bolts - With Nuts Use with HOLD018M & HOLD018MH		UB473-1			
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN COLORADO - 4WD








RC Colorado 9/2008 to 5/2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 200kg</b>	50mm	HOLD018	2 ea		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB473	4 ea		
	Round Form U Bolts - With Nuts use with HOLD018M & HOLD018MH		UB473-1			
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN COLORADO - 4WD

RG 5/2012 to 2020

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67092GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b>	<b>NOTE: 04/2013 to 06/2016 must purchase SSA strut top plates mount TPL1002</b>			
	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210 COIL-ST-HOL01	1 pr
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL11	
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210T COIL-ST-HOL51	
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL53	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA	
<b>LEAF SPRINGS</b>				
	Raised Height 4 Leaf Parabolic Springs <b>LBA up to 200kg</b>	40mm	HOLD022P4	2 ea
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	HOLD022	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	HOLD022M	
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	40mm	HOLD022MH	
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	HOLD022GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU786UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with HOLD022P4, HOLD022MH &amp; HOLD022GV</b>		UB437	
<b>SHACKLES</b>				
	Greaseable Shackles		S390K	2 ea
<b>PINS</b>				
	Greaseable Pin		P387-2	2 ea

FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN COLORADO 7 / TRAILBLAZER - 4WD









LT & LTZ 11/2012 to 2020

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67092GP	2 ea	F R O N T
<b>COILS &amp; STRUT ASSEMBLY</b>	<b>NOTE: 04/2013 to 06/2016 must purchase SSA strut top plates mount TPL1002</b>				
	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210 COIL-ST-HOL01		
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL11		
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210T COIL-ST-HOL51	1 pr	
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL53		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea	
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers		SA35100GP	2 ea	
<b>COIL SPRINGS</b>	Raised Height Coil Springs	40mm	HOL-211		
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to 300kg - constant load</b>	40mm	HOL-211HD	1 pr	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN JACKAROO - 4WD


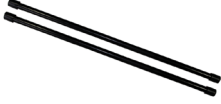






UBS 13, 16, 52 LWB Wagon 11/1981 to 10/1986

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35087GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1000mm		HOLD005A	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 2 Leaf Springs LBA 250kg to 400kg	50mm	HOLD004M	2 ea		
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB451	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P792	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# HOLDEN JACKAROO - 4WD

UBS 16, 17, 52, 55 LWB Wagon 11/1986 to 1991




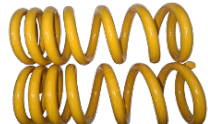
Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35087GP	2 ea	FRONT	
	41mm Foam Cell Shock Absorbers Urethane boot optional extra		SA41087FC			
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 997mm		HOLD007	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers		SA35758G	2 ea	REAR	
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 2 Leaf Springs LBA 250kg to 400kg	50mm	HOLD004M	2 ea		
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB451	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)







# HOLDEN JACKAROO - 4WD

UBS 25, 69 SWB & LWB Wagon 4/1992 to 2004 (including Monterey)

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	36mm Gas Bulged Shock Absorbers		TBA	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1220mm		HOLD009	1 pr		
<b>SHOCK ABSORBERS</b>						
	36mm Gas Bulged Shock Absorbers		TBA	2 ea	REAR	
<b>COIL SPRINGS</b>						
	Raised Height Medium Duty Coil Springs	40mm	HOL-201	1 ea		
	Raised Height Heavy Duty Coil Spring	40mm	HOL-201HD			









# HYUNDAI TERRACAN - 4WD

HP 11/2001 - 12/2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers		TBA	2 ea	FRONT
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars Length 1275mm		HYUN004	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers		TBA	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Medium Duty Coil Springs	40mm	MIT-201	1 pr	

# ISUZU D-MAX - 4WD

9/2008 to 5/2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35649GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1140mm		HOLD005B	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 3 Leaf Springs <b>LBA up to 250kg</b>	50mm	HOLD018	2 ea		
	Raised Height Heavy Duty 6 + 3 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	HOLD018M			
	Raised Height Extra Heavy Duty 7 + 3 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	HOLD018MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU728UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB473	4 ea		
	Round Form U Bolts - With Nuts use with HOLD018M & HOLD018MH		UB473-1			
<b>SHACKLES</b>						
	Greaseable Shackles		S386K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



*Go to the Max*

2022

## UPPER CONTROL ARMS










- Built in caster & camber correction for raised vehicles
- Fixed position heavy duty greaseable ball joint
- Powdercoated steel construction
- Built in provisions for relocating OEM ABS lines (where required)
- Available for Hilux, PX Ranger, Colorado, DMAX 12-20, Triton, Navara, DMAX 20+, Mazda BT50 20+, Landcruiser 200 Series



[www.ssa.com.au](http://www.ssa.com.au)

# ISUZU D-MAX - 4WD

5/2012 to 5/2020

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67092GP	2 ea		
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210H COIL-ST-HOL12	1 pr		
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR02			
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL52			
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR53			
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount			TPL1002	2 ea
	<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha			SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>LEAF SPRINGS</b> 	Raised Height 4 Leaf Parabolic Springs <b>LBA up to 200kg</b>	40mm	HOLD022P4	2 ea		
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	40mm	HOLD022			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	HOLD022M			
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	40mm	HOLD022MH			
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	HOLD022GV			
	<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit			BU786UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		UB453-2	4 ea		
	Square Form U Bolts - With Nuts <b>Use with HOLD022P4, HOLD022MH &amp; HOLD022GV</b>		UB437			
<b>SHACKLES</b> 	Greaseable Shackles		S390K	2 ea		
<b>PINS</b> 	Greaseable Pin		P387-2	2 ea		








FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ISUZU D-MAX - 4WD

06/2020 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GPA	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204	1 pr
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR03	
	Coil Springs <b>For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204H	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR17	
	Coil Springs For Vehicles <b>With 100kg + of Accessories</b>	40mm	TPR-204HD	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR27	
	Tapered Coil Springs <b>For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204T	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR60	
Tapered Coil Springs <b>For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204HT	1 pr	
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR61		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35096GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35096GPA	
<b>LEAF SPRINGS</b>				
	Raised Height 3 Leaf Parabolic Springs <b>No Load</b>		HOLD022P3	2 ea
	Raised Height 4 Leaf Parabolic Springs <b>LBA 100kg to 300kg</b>		HOLD022P4	
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA Up to 300kg</b>	40mm	HOLD022	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	HOLD022M	
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD022MH	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU792UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with HOLD022P4 &amp; HOLD022MH</b>		UB437	
<b>SHACKLES</b>				
	Greaseable Shackles		S392K	2 ea
<b>PINS</b>				
	Greaseable Pin		P387-2	2 ea



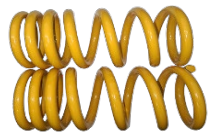
FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ISUZU MU-X - 4WD

2013 to 7/2021

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle			
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67092GP</b>	2 ea			
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>HOL-210H</b> <b>COIL-ST-HOL12</b>	1 pr	<b>F</b> <b>R</b> <b>O</b> <b>N</b> <b>T</b>		
	Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204</b> <b>COIL-ST-TPR02</b>				
	Tapered Coils Springs <b>For Vehicles With Up To 50kg Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>HOL-210HT</b> <b>COIL-ST-HOL52</b>				
	Tapered Coils Springs <b>For Vehicles With 50kg Plus Bullbar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204T</b> <b>COIL-ST-TPR53</b>				
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount				<b>TPL1002</b>	2 ea
	<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha				<b>SA35100GP</b>	2 ea
<b>COIL SPRINGS</b> 	Raised Height Coil Springs	40mm	<b>ISU-201</b>	1 pr			
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to 300kg - constant load</b>	40mm	<b>ISU-201HD</b>				

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# ISUZU MU-X - 4WD

7/2021 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GPA	
<b>COILS &amp; STRUT ASSEMBLY</b>	<b>Coil Springs For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204	1 pr
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR03	
	<b>Coil Springs For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204H	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR17	
	<b>Coil Springs For Vehicles With 100kg + of Accessories</b>	40mm	TPR-204HD	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR27	
	<b>Tapered Coil Springs For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204T	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR60	
<b>Tapered Coil Springs For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204HT	1 pr	
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR61		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers - Piranha		SA35100GP	2 ea
<b>COIL SPRINGS</b>	Raised Height Coil Springs	40mm	KIRS-02	1 pr
	Raised Height Heavy Duty Coil Springs	40mm	ISU-201	

F  
R  
O  
N  
T



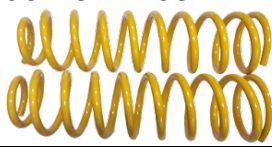





R  
E  
A  
R

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# JEEP CHEROKEE - 4WD


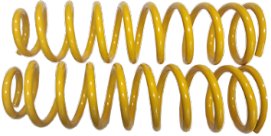


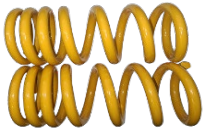
XJ Limited, Classic, Sport 1994 to 2001

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	46mm Gas Mono Tube Shock Absorbers	STD	SA46665GM	2 ea	F R O N T	
<b>STEERING DAMPER</b>						
	Steering Damper		SD14040G	1 only		
<b>COIL SPRINGS</b>						
	Standard Height Heavy Duty Coil Springs	40mm	JEEP-200	1 pr		
<b>SHOCK ABSORBERS</b>						
	46mm Gas Mono Tube Shock Absorbers	STD	SA46666GM	2 ea	R E A R	
	36mm Gas Bulged Shock Absorbers	RSD	SA36766G			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 4 + 2 Leaf Springs LBA up to 500kg	50mm	JEEP004	2 ea		
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU761UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB512	4 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)


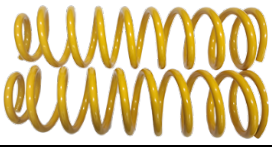


# JEEP CHEROKEE - 4WD

ZG, ZJ GRAND CHEROKEE 4/1996 to 1999

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	Shock Absorbers		TBA	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs	40mm	JEEP-200	1 pr		
<b>STEERING DAMPER</b>						
	Steering Damper		SD14040G	1 only	REAR	
<b>SHOCK ABSORBERS</b>						
	36mm Gas Bulged Shock Absorbers		TBA	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs	40mm	JEEP-203	1 pr		


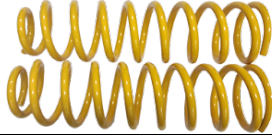
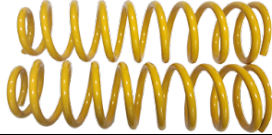

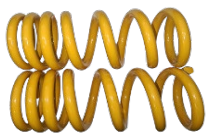
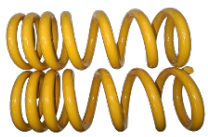
# JEEP CHEROKEE - 4WD

WJ, WG GRAND CHEROKEE 1999 to 6/2005

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	Gas Shock Absorbers		TBA	2 ea	FRONT
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40mm	JEEP-202	1 pr	
<b>SHOCK ABSORBERS</b>					
	36mm Gas Bulged Shock Absorbers		SA36659G	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40mm	JEEP-206	1 pr	


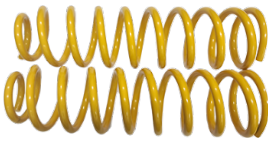


# JEEP CHEROKEE - 4WD

WH, WK1 GRAND CHEROKEE 7/2005 to 2010 (WK Series 1 only)

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers		TBA	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>No bar / winch</b>	30mm	JEEP-215	1 pr		
	Raised Height Heavy Duty Coil Springs <b>With bar / winch</b>	30mm	JEEP-215HD			
<b>SHOCK ABSORBERS</b>						
	Gas Shock Absorbers		TBA	2 ea	REAR	
<b>COIL SPRINGS</b>						
	Raised Height Medium Duty Coil Springs	30mm	JEEP-216	1 pr		
	Raised Height Heavy Duty Coils Springs	30mm	JEEP-216HD			


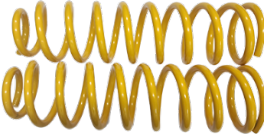

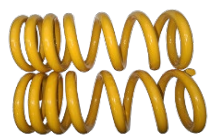
# JEEP CHEROKEE - 4WD

KJ 9/2001 to 1/2008

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		TBA	2 ea	FRONT
<b>COIL SPRINGS</b>					
	Raised Height Medium Duty Coil Springs <b>Petrol Engine</b>	40mm	JEEP-207	1 pr	FRONT
	Raised Height Heavy Duty Coil Springs <b>Diesel Engine</b>	50mm	JEEP-207HD		
<b>SHOCK ABSORBERS</b>					
	Gas Shock Absorbers		TBA	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	50mm	JEEP-208	1 pr	REAR


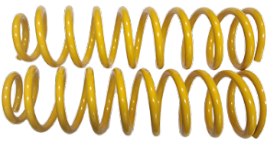



# JEEP CHEROKEE - 4WD

**KK 2008 Onwards Limited Edition Only (Sport Model may vary)**

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		TBA	2 ea	<b>F R O N T</b>
<hr/>					
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30-35mm	JEEP-217	1 pr	<b>F R O N T</b>
<hr/>					
<b>SHOCK ABSORBERS</b>					
	Gas Shock Absorbers		TBA	2 ea	<b>R E A R</b>
<hr/>					
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40mm	JEEP-218	1 pr	<b>R E A R</b>

# JEEP WRANGLER - 4WD

TJ 10/1996 to 2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	Gas Shock Absorbers		TBA	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs	30mm	JEEP-201	1 pr		
<b>STEERING DAMPER</b>						
	Steering Damper		SD14040G	1 only	REAR	
<b>SHOCK ABSORBERS</b>						
	Gas Shock Absorbers		TBA	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs	30mm	JEEP-204	1 pr		

# JEEP WRANGLER - 4WD

JK SWB & LWB 3/2007 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	36mm Gas Bulged Shock Absorbers		TBA	2 ea
<b>COIL SPRINGS</b>				
	Raised Height Heavy Duty Coil Springs <b>SWB Petrol</b>	25-30mm	JEEP-209	1 pr
	Raised Height Heavy Duty Coil Springs <b>SWB Diesel</b>	25-30mm	JEEP-210	
	Raised Height Heavy Duty Coil Springs <b>LWB Petrol</b>	25-30mm	JEEP-211	
	Raised Height Heavy Duty Coil Springs <b>LWB Diesel</b>	25-30mm	JEEP-212	
<b>SHOCK ABSORBERS</b>				
	36mm Gas Bulged Shock Absorbers		TBA	2 ea
<b>COIL SPRINGS</b>				
	Raised Height Heavy Duty Coil Springs <b>SWB</b>	25-30mm	JEEP-213	1 pr
	Raised Height Heavy Duty Coil Springs <b>LWB</b>	25-30mm	JEEP-214	









FRONT

REAR











# MAHINDRA - 4WD

## Pickup

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Shock Absorbers <b>Urethane boot extra</b>		SA12087GL	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars <b>Must Confirm Torsion Bar Length As Later Models May Vary</b>		MAHIN002	1 pr		
<b>SHOCK ABSORBERS</b>						
	36mm Gas Bulged Shock Absorbers - Piranha		SA35645GP	2 ea	REAR	
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 2 Leaf Springs	40mm	MAHIN001	2 ea		
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU719UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB478	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S353K	2 ea		
<b>PINS</b>						
	Greaseable Pins		TBA	2 ea		

# MAZDA BRAVO - 4WD









B2200, B2500, B2600 Utility 3/1987 to 11/2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP		FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 928mm		MAZDA005	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 5 + 2 Leaf Springs Overslung - LBA up to 400kg	50mm	MAZDA016	2 ea		
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU756UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-1	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386-1K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P794	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MAZDA BT50 - 4WD

2007 to 10/2011

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1025mm		MAZDA051	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA			
<b>LEAF SPRINGS</b>						
	Raised Height Comfort 5 + 2 Leaf Springs <b>LBA up to 150kg</b>	30-40mm	MAZDA050	2 ea		
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	30-40mm	MAZDA050M			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 400kg to 600kg</b>	30-40mm	MAZDA050MH			
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	30-40mm	MAZDA050GV			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU765UK	1 kit		
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB475	4 ea		
<b>SHACKLES</b>						
	Greaseable Shackles		S386-1K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# MAZDA BT50 - 4WD








10/2011 - 08/2020

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GP	
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67091GPA	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b>	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210 COIL-ST-FOR01	
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210H COIL-ST-FOR03	
	Coil Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HD COIL-ST-FOR21	
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HHD COIL-ST-FOR04	1 pr
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Raised Height Coil Springs - Tapered Comfort Coil	40mm	FOR-210T COIL-ST-FOR05	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HT COIL-ST-FOR52	
	Tapered Coil Springs <b>For Vehicles With Steel Bullbar or Alloy Bar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	FOR-210HDT COIL-ST-FOR06	
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL3080
<b>TAIL SHAFT SPACER KIT</b>	Driveshaft Centre Bearing Spacer Kit		SP-MAZ-01	1 kit
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers - Piranha		SA35095GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35095GPA	2 ea
<b>LEAF SPRINGS</b>	Raised Height 5 Leaf <b>Parabolic</b> Springs <b>LBA Up to 300kg - Must Use BU770UK</b>	40mm	MAZDA052P5	
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA Up to 200kg</b>	40mm	MAZDA050	
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA 200kg to 400kg</b>	40mm	MAZDA050M	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 400kg to 600kg</b>	40mm	MAZDA050MH	2 ea
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	40mm	MAZDA050GV	
<b>SHACKLE BUSH KITS</b>	Polyurethane Bush Kit - Suits OE Springs & <b>MAZDA052P5</b> With 54mm Front Spring Eye		BU770UK	
	Polyurethane Bush Kit - Use With MAZDA050 Springs		BU773UK	1 kit
<b>U-BOLTS</b>	Round Form U Bolts - With Nuts		UB473	4 ea
	Round Form U Bolts - With Nuts use with MAZDA052P5 MAZDA050MHT & MAZDA050GV		UB473-1	
<b>SHACKLES</b>	Greaseable Shackles		S389K	2 ea
<b>PINS</b>	Greaseable Pins		P387-2	2 ea

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MAZDA BT50 - 4WD

10/2020 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67096GPA	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204	1 pr
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR03	
	Coil Springs <b>For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204H	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR17	
	Coil Springs For Vehicles <b>With 100kg + of Accessories</b>	40mm	TPR-204HD	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR27	
	Tapered Coil Springs <b>For Vehicles With Up To 50kg of Accessories</b>	40mm	TPR-204T	
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR60		
Tapered Coil Springs <b>For Vehicles With 50 - 100kg of Accessories</b>	40mm	TPR-204HT		
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR61		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1002	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35096GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35096GPA	
<b>LEAF SPRINGS</b>				
	Raised Height 3 Leaf Parabolic Springs <b>No Load</b>		HOLD022P3	2 ea
	Raised Height 4 Leaf Parabolic Springs <b>LBA 100kg to 300kg</b>		HOLD022P4	
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA Up to 300kg</b>	40mm	HOLD022	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	HOLD022M	
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	40mm	HOLD022MH	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU792UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with HOLD022P4 &amp; HOLD022MH</b>		UB437	
<b>SHACKLES</b>				
	Greaseable Shackles		S392K	2 ea
<b>PINS</b>				
	Greaseable Pin		P387-2	2 ea










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI TRITON - 4WD

ME, MF, MG, MH, MJ, MK 1987 to 9/2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	1987 - 11/1996 35mm Gas Bulged Shock Absorbers <b>Urethane boot optional extra</b>		<b>SA35082GL</b>	2 ea
	11/1996 Onwards 35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35087GP</b>	
<b>STEERING DAMPER</b>				
	Steering Damper - 10/1987 - 5/1992		<b>SD14022G</b>	1 only
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars 1987 - 6/1991 <b>Length 1277.5mm</b>		<b>MITS013</b>	1 pr
	7/1991 Onwards <b>Length 1366mm</b>		<b>MITS015</b>	
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35075GP</b>	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	50mm	<b>MITS018</b>	2 ea
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	50mm	<b>MITS018M</b>	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit <b>Suits SSA Springs Only</b>		<b>BU774UK</b>	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		<b>UB451</b>	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		<b>S795K</b>	2 ea
<b>PINS</b>				
	Greaseable Pins		<b>P387-2</b>	2 ea

FRONT

REAR

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**



*Go to the Max*

2022

## UPPER CONTROL ARMS












- Built in caster & camber correction for raised vehicles
- Fixed position heavy duty greaseable ball joint
- Powdercoated steel construction
- Built in provisions for relocating OEM ABS lines (where required)
- Available for Hilux, PX Ranger, Colorado, DMAX 12-20, Triton, Navara, DMAX 20+, Mazda BT50 20+, Landcruiser 200 Series



[www.ssa.com.au](http://www.ssa.com.au)

# MITSUBISHI TRITON - 4WD

ML, MN 5/2006 to 5/2015

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67330GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207 COIL-ST-MIT01	1 pr
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207H COIL-ST-MIT11	
	Tapered Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207HD COIL-ST-MIT21	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207T COIL-ST-MIT51	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL4075	2 ea
<b>SHORTENED FRONT BUMP STOP</b> 	Shortened Bump Stop For Front Upper Control Arm		BSMC0960-15	2 ea
<b>TAIL SHAFT SPACER KIT</b> 	Use to correctly align the tailshaft centre bearing on 2 piece tailshafts. <b>Contains:</b> 1 x spacer - 2 x wedges - 4 x bolts, nuts, washers		SPKITTRIT	1 kit
	Use this kit with <b>Bluemax Springs</b> . As Bluemax springs already have a wedge fitted to bottom of the spring pack		SPKITTRIT-BM	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35634GP	2 ea
<b>LEAF SPRINGS</b> 	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 250kg</b>	50mm	MITS028	2 ea
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 300kg to 400kg</b>	50mm	MITS028M	
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	50mm	MITS028GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU772UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts With Nuts - ML <b>1/2" material</b>		UB454	4 ea
	Square Form U Bolts With Nuts - MN <b>9/16" material</b>		UB464	
<b>SHACKLES</b> 	Greaseable Shackles		S795K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea

FRONT










REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# MITSUBISHI TRITON - 4WD

MQ MR 5/2015 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67330GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207 COIL-ST-MIT01	1 pr
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207H COIL-ST-MIT11	
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207HD COIL-ST-MIT21	
	Taoered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	MIT-207T COIL-ST-MIT51	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL4075	2 ea
<b>SHORTENED FRONT BUMP STOP</b> 	Shortened Bump Stop For Front Upper Control Arm		BSMC0960-15	2 ea
<b>TAIL SHAFT SPACER</b> 	Use to correctly align the tailshaft centre bearing on 2 piece tailshafts. <b>Contains:</b> 1 x spacer - 2 x wedges - 4 x bolts, nuts, washers		SPKITTRIT	1 kit
	Use this kit with <b>Bluemax Springs</b> . As Bluemax springs already have a wedge fitted to bottom of the spring pack		SPKITTRIT-BM	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35645GP	2 ea
<b>LEAF SPRINGS</b> 	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - Low Camber LBA up to 250kg</b>	40-50mm	MITS040	2 ea
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - High Camber LBA 300kg to 500kg</b>	40-50mm	MITS040M	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 600kg to GVM</b>	40-50mm	MITS040GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU782UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts With Nuts		UB453-2	4 ea
	Square Form U Bolts With Nuts <b>use with MITS040M &amp; MITS040GV</b>		UB437	
<b>SHACKLES</b> 	Greaseable Shackles		S393K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI PAJERO - 4WD

NA, NL SWB & LWB Leaf Springs Rear 5/1991 to 1996

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35087GP	2 ea
<b>STEERING DAMPER</b>				
	Steering Damper		SD14017G	1 only
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars Length 1277.5mm		MITS013	1 pr
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 4 + 2 Leaf Springs LBA up to 250kg	50mm	MITS018	2 ea
	Raised Height Heavy Duty 5 + 2 Leaf Springs LBA 300kg to 500kg	50mm	MITS018M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit Must confirm pin sizing - Suits 18mm Pin		BU764UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB451	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S795K	2 ea
<b>PINS</b>				
	Greaseable Pins		P796	2 ea






FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI PAJERO - 4WD






NF - NL SWB V6 Wagon 1989 to 2000

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	36mm Gas Bulged Shock Absorbers <b>8/1988 to 5/1991 - Urethane boot optional extra</b>		<b>SA36082G</b>	2 ea	<b>F R O N T</b>
	36mm Gas Bulged Shock Absorbers - Piranha <b>5/1991 Onwards</b>		<b>SA35087GP</b>		
<b>STEERING DAMPER</b>					
(right angle pin) 	Steering Damper <b>* Fitted to NF &amp; NG models only to 4/1991</b>		<b>SD14017G</b>	1 only	
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars <b>Length 1366mm</b>		<b>MITS015</b>	1 pr	
<b>SHOCK ABSORBERS</b>					
	36mm Gas Bulged Shock Absorbers - Piranha <b>8/1988 to 5/1991</b>		<b>SA35645GP</b>	2 ea	<b>R E A R</b>
	36mm Gas Bulged Shock Absorbers <b>5/1991 Onwards</b>		<b>SA35646GL</b>		
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Progressive Rate Coils <b>LBA up to 200kg</b>	40mm	<b>MIT-202</b>	1 pr	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI PAJERO - 4WD

NF, NG, NH, NJ, NK, NL LWB V6 TDI Wagon 1988 to 2000

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	36mm Gas Bulged Shock Absorbers <b>8/1988 to 5/1991 - Urethane boot optional extra</b>		<b>SA36082G</b>	
	36mm Gas Bulged Shock Absorbers -Piranha <b>5/1991 Onwards</b>		<b>SA35087GP</b>	2 ea
<b>*check some late 1999 models may use a strut option</b>				
<b>STEERING DAMPER</b>				
	Steering Damper		<b>SD14017G</b>	1 only
<b>* Fitted to NF &amp; NG models only to 4/1991</b>				
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars <b>Length 1277.5mm</b>		<b>MITS013</b>	
	Increased Rate Torsion Bars <b>Length 1307mm</b>		<b>MITS014</b>	1 pr
<b>SHOCK ABSORBERS</b>				
	36mm Gas Bulged Shock Absorbers - Piranha <b>8/1988 to 5/1991</b>		<b>SA35645GP</b>	
	36mm Gas Bulged Shock Absorbers <b>5/1991 Onwards</b>		<b>SA35646GL</b>	2 ea
<b>COIL SPRINGS</b>				
	Raised Height Heavy Duty Progressive Rate Coils <b>LBA up to 200kg</b>	50mm	<b>MIT-201</b>	
	Raised Height Heavy Duty Progressive Rate Coils <b>LBA 200kg plus - constant load</b>	50mm	<b>MIT-201HD</b>	1 pr


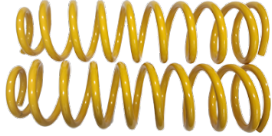




FRONT

REAR

**\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# MITSUBISHI PAJERO - 4WD


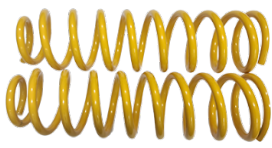




NM, NP, NS, NT SWB (3 Door) 2000 to 2014

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers - Piranha <b>This shock does not come with top bush. Use O.E. bush or supply top plate mount which includes a new bush in the assembly.</b>		SA67105GP	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>Petrol LBA up to 25kg</b>	40mm	MIT-200	1 pr		
	Raised Height Heavy Duty Coil Springs <b>Petrol LBA 50kg to 80kg</b>	40mm	MIT-200H			
	Raised Height Heavy Duty Coil Springs <b>Diesel LBA up to 25kg</b>	40mm	MIT-200HD			
<b>TOP PLATE MOUNT</b>						
	Strut Top Plate Mount		TPL4038	2 ea	FRONT	
<b>STRUT BUMP STOP</b>						
	Front Strut Bump Stop & Boot		BSMC5911	2 ea		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35647GP	2 ea	REAR	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs	40mm	MIT-206	1 pr		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
\* Extra half hour labour to be charged to remove airbox and battery

# MITSUBISHI PAJERO - 4WD

NM, NP, NS, NT, NW, NX - LWB 2000 to Current

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>				
	Strut/Gas Spring Seat Shock Absorbers - Piranha <b>This shock does not come with top bush. Use O.E. bush or supply top plate mount which includes a new bush in the assembly.</b>		SA67105GP	2 ea
<b>COIL SPRINGS</b>				
	Raised Height Heavy Duty Coil Springs <b>Petrol LBA up to 25kg</b>	40mm	MIT-200	1 pr
	Raised Height Heavy Duty Coil Springs <b>Petrol LBA 50kg to 80kg</b>	40mm	MIT-200H	
	Raised Height Heavy Duty Coil Springs <b>Diesel LBA up to 25kg</b>	40mm	MIT-200HD	
	Raised Height Heavy Duty Coil Springs <b>Diesel With Bull Bar / Winch</b>	40mm	MIT-200HHD	
<b>TOP PLATE MOUNT</b>				
	Strut Top Plate Mount		TPL4038	2 ea
<b>STRUT BUMP STOP</b>				
	Front Strut Bump Stop		BSMC5911	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35647GP	2 ea
<b>COIL SPRINGS</b>				
	Raised Height Heavy Duty Progressive Rate Coils <b>LBA up to 200kg</b>	40mm	MIT-203	1 pr
	Raised Height Heavy Duty Progressive Rate Coils <b>LBA 200kg plus - constant load</b>	40mm	MIT-203HD	








FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)  
\* Extra half hour labour to be charged to remove airbox and battery

# MITSUBISHI CHALLENGER - 4WD





Montero Sport PA Leaf Springs Rear 1998 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35087GP	2 ea	FRONT
	41mm Foam Cell Shock Absorbers Urethane boot optional extra		SA41087FC		
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars Length 1308mm		MITS014	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA		
<b>LEAF SPRINGS</b>					
	Raised Height Heavy Duty 4 + 2 Leaf Springs LBA up to 250kg	50mm	MITS018	2 ea	
<b>SHACKLE BUSH KITS</b>					
	Polyurethane Bush Kit Must confirm pin size - bush kit may not be in stock		TBA	1 kit	
<b>U-BOLTS</b>					
	Round Form U Bolts - With Nuts		UB451	4 ea	
<b>SHACKLES</b>					
	Greaseable Shackles		S795K	2 ea	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# MITSUBISHI CHALLENGER - 4WD




Montero Sport PA Coil Springs Rear 1996 to 2008

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35087GP	2 ea	FRONT
<b>TORSION BARS</b>					
	Increased Rate Torsion Bars Length 1308mm		MITS014	1 pr	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35645GP	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40mm	MIT-205	1 pr	







# MITSUBISHI CHALLENGER - 4WD

PB 2009 to 2013

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67330GP</b>	2 ea	<b>F R O N T</b>
<b>COILS &amp; STRUT ASSEMBLY</b>	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>MIT-207</b> <b>COIL-ST-MIT01</b>	1 pr	
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>MIT-207H</b> <b>COIL-ST-MIT11</b>		
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>MIT-207HD</b> <b>COIL-ST-MIT21</b>		
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>MIT-207T</b> <b>COIL-ST-MIT51</b>		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		<b>TPL4075</b>		
<b>SHORTENED FRONT BUMP STOP</b>	Shortened Bump Stop For Front Upper Control Arm		<b>BSMC0960-15</b>	2 ea	<b>R E A R</b>
					
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35645GP</b>	2 ea	
<b>COIL SPRINGS</b>	Raised Height Heavy Coil Springs	40-50mm	<b>MIT-204</b>	1 pr	
					

# MITSUBISHI CHALLENGER - 4WD

PC 2013 to 2016

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67330GP</b>	2 ea	FRONT
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b>	40mm	<b>MIT-207</b>	1 pr	
	Preassembled Strut/Coil With Top Plate Mount		<b>COIL-ST-MIT01</b>		
	Coil Springs <b>For Vehicles With Alloy Bull Bar</b>	40mm	<b>MIT-207H</b>		
	Preassembled Strut/Coil With Top Plate Mount		<b>COIL-ST-MIT11</b>		
	Coil Springs <b>For Vehicles With Steel Bullbar &amp; Winch</b>	40mm	<b>MIT-207HD</b>		
	Preassembled Strut/Coil With Top Plate Mount		<b>COIL-ST-MIT21</b>		
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b>	40mm	<b>MIT-207T</b>		
	Raised Height Coil Springs - Tapered Comfort Coil		<b>COIL-ST-MIT51</b>		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		<b>TPL4075</b>	2 ea	
<b>SHORTENED FRONT BUMP STOP</b> 	Shortened Bump Stop For Front Upper Control Arm		<b>BSMC0960-15</b>	2 ea	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35645GP</b>	2 ea	REAR
<b>COIL SPRINGS</b> 	Raised Height Heavy Duty Progressive Rate Coils <b>LBA up to 200kg</b>	40-50mm	<b>MIT-201</b>	1 pr	
	Raised Height Heavy Duty Progressive Rate Coils <b>LBA 200kg plus - constant load</b>	40-50mm	<b>MIT-201HD</b>		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# Can you spot the BLUE MAX Difference?



**ORIGINAL SUSPENSION**



**ORIGINAL SUSPENSION UNLADEN**



**ORIGINAL SUSPENSION UNLADEN**

See how each suspension handles the 500kg of load in the rear of the vehicle.

**BLUEMAX SUSPENSION**



**BLUEMAX SUSPENSION UNLADEN**



**BLUEMAX SUSPENSION UNLADEN**

**Save yourself time and money and let BLUE MAX  
Lighten your load...**

If your vehicle is sagging because it can't carry the load or if the comfort has gone in your ride, then it sounds like you need a lift. Allow SSA to "get it right for you...the first time". You will be turning heads when you get that BLUE **MAX** suspension look..**Don't be fooled by shonky advertising.** You know exactly what you want from your vehicle, so come to the experts in suspension who deliver sound advice, quality products and service, along with great



*Go to the Max*

**PH: 1800 630 411**












[www.ssa.com.au](http://www.ssa.com.au)

**SUSPENSION BUILT TO LAST**  
[info@ssa.com.au](mailto:info@ssa.com.au)

# NISSAN NAVARA - 4WD

D21, D22, Single / Dual Cab, King Cab 9/1985 to current

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha <b>9/1985 - 2/1997</b>		<b>SA35087GP</b>	2 ea
	35mm Gas Bulged Shock Absorbers - Piranha <b>3/1997 onwards</b>		<b>SA35335GP</b>	
<b>STEERING DAMPER</b>				
	Steering Damper <b>9/1985 - 1997</b>		<b>SD14035G</b>	
	Expanded Body Steering Damper		<b>SD35035G</b>	
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars			
	D21 1985 to 1996 - <b>Length 1203mm</b>		<b>NISS013</b>	1 pr
	D22 1997 to current - <b>Length 890mm</b>		<b>NISS013A</b>	
	<b>O.E. torsion bars have 40mm of spline each end. The above bars have 30mm. Centralise torsion bar so 15mm of spline is in each end of the cup length.</b>			
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35074GP</b>	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Medium Duty 4 + 1 Leaf Springs <b>Med duty spring with tapered leaves &amp; slipper pads</b> <b>LBA up to 200kg</b>	40mm	<b>NISS016T</b>	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 250kg</b>	40mm	<b>NISS016</b>	2 ea
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 300kg to GVM - constant load</b>	40mm	<b>NISS016M</b>	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		<b>BU704UK</b>	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		<b>UB788</b>	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		<b>S797K</b>	2 ea
<b>PINS</b>				
	Greaseable Pins		<b>P798</b>	2 ea








FRONT

REAR

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# NISSAN NAVARA - 4WD

D40 2005 to 2015

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67089GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226 COIL-ST-NIS01	1 pr
	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HD COIL-ST-NIS21	
	Tapered Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226T COIL-ST-NIS52	
	Tapered Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HDT COIL-ST-NIS51	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL2040	2 ea
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35651GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41651FC	
	41mm Foam Cell Shock Absorbers <b>(for NISS024GV use only)</b>		SA41094FCA	
<b>LEAF SPRINGS</b> 	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	40-50mm	NISS024	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40-50mm	NISS024M	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 600kg to GVM - constant load</b>	40-50mm	NISS024GV	
	<b>When using NISS024GV use Braided Extended Brake Hoses</b>		BH1010BR	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU767UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with NISS024GV</b>		UB437	
<b>SHACKLES</b> 	Greaseable Shackles		S797-1K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea







FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# NISSAN NAVARA - 4WD




D40 4/2010 to 2015 STX 550 V6 Diesel

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67089GP	2 ea	<b>F R O N T</b>	
<b>COILS &amp; STRUT ASSEMBLY</b>	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b>	40mm	NIS-226HDSP			
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-NIS31			
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL2040	2 ea		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35651GP	2 ea		
	41mm Foam Cell Shock Absorbers		SA41651FC			
	41mm Foam Cell Shock Absorbers ( <b>for NISS024GV use only</b> )		SA41094FCA			
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA up to 250kg</b>	40-50mm	NISS024			
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	40-50mm	NISS024M			
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves LBA 600kg to GVM - constant load</b>	40-50mm	NISS024GV			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit		BU767UK	1 kit	<b>R E A R</b>	
<b>U-BOLTS</b>						
	Square Form U Bolts - With Nuts		UB453-2	4 ea		
	Square Form U Bolts - With Nuts <b>use with NISS024GV</b>		UB437			
<b>SHACKLES</b>						
	Greaseable Shackles		S797-1K	2 ea		
<b>PINS</b>						
	Greaseable Pins		P387-2	2 ea		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)








# NISSAN NAVARA - 4WD

NP300 2015 Onwards Coil Springs Rear

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67089GP</b>	2 ea	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	25-30mm	<b>NIS-232</b> <b>COIL-ST-NIS02</b>		<b>F R O N T</b>
	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	25-30mm	<b>NIS-232HD</b> <b>COIL-ST-NIS22</b>		
	Tapered Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	25-30mm	<b>NIS-232T</b> <b>COIL-ST-NIS53</b>	1 pr	
	Tapered Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	25-30mm	<b>NIS-232HDT</b> <b>COIL-ST-NIS54</b>		
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		<b>TPL2040</b>	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35084GP</b>	2 ea	
<b>COIL SPRINGS</b> 	Raised Height Medium Duty Coil Springs <b>LBA Up to 100kg</b>	25-30mm	<b>NIS-233</b>	1 pr	<b>R E A R</b>
	Raised Height Medium Duty Higher Coil Springs <b>LBA 100kg to 250kg</b>	25-30mm	<b>KDRR-73H</b>		
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to 300kg</b>	25-30mm	<b>NIS-233HD</b>		
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 300kg to 500kg</b>	25-30mm	<b>NIS-233EHD</b>		

# NISSAN NAVARA - 4WD

NP300 2015 Onwards Leaf Springs Rear

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67089GP	2 ea
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226 COIL-ST-NIS01	1 pr
	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HD COIL-ST-NIS21	
	Tapered Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226T COIL-ST-NIS52	
	Tapered Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	NIS-226HDT COIL-ST-NIS51	
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL2040	2 ea
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35075GP	2 ea
<b>LEAF SPRINGS</b> 	Raised Height Heavy Duty 3+1 Leaf Springs <b>LBA up to 250kg</b>	40mm	NISS036	2 ea
	Raised Height Heavy Duty 4+1 Leaf Springs <b>LBA 300kg to 500kg</b>	40mm	NISS036M	
	Raised Height Extra Heavy Duty 4+1 Leaf Springs <b>with 10mm main &amp; wrap leaves</b> <b>LBA 500kg to GVM</b>	40mm	NISS036GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU787UK	1 kit
<b>U-BOLTS</b> 	Round Form U Bolts - With Nuts		UB453-3	4 ea
<b>SHACKLES</b> 	Greaseable Shackles		S395K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea

FRONT





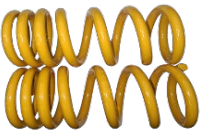
REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)





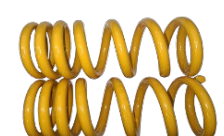
# NISSAN PATHFINDER - 4WD

WD21 Terrano 1, Bakkie, Trader 10/1987 to 1995

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35643GP		FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1232mm		NISS017	1 pr		
<b>STEERING DAMPER</b>						
(right angle pin) 	Steering Damper		SD14035G	1 only		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea	REAR	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35636GPA			
<b>COIL SPRINGS</b>						
	Standard Height Heavy Duty Coil Springs	STD +	NIS-217	1 pr		
	Raised Height Heavy Duty Coil Springs	40mm	NIS-212			

# NISSAN PATHFINDER - 4WD


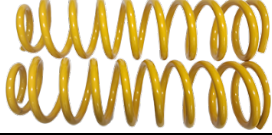


R51 2005 to 2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67089GP</b>	2 ea	<b>F R O N T</b>	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>NIS-226</b> <b>COIL-ST-NIS01</b>			
	Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>NIS-226HD</b> <b>COIL-ST-NIS21</b>			
	Tapered Coil Springs <b>For Vehicles With Up To 50kg Bullar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>NIS-226T</b> <b>COIL-ST-NIS52</b>	1 pr		
	Tapered Coil Springs <b>For Vehicles With 50kg Plus Bullar / Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>NIS-226HDT</b> <b>COIL-ST-NIS51</b>			
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		<b>TPL2040</b>		2 ea
	<b>SHOCK ABSORBERS</b> 	36mm Gas Bulged Shock Absorbers		<b>SA36442G</b>		2 ea
<b>COIL SPRINGS</b> 	Raised Height Heavy Duty Coil Springs <b>LBA up to 200kg</b>	40mm	<b>NIS-227</b>	1 pr	<b>R E A R</b>	
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg plus - constant load</b>	40mm	<b>NIS-227HD</b>			

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# NISSAN PATHFINDER - 4WD



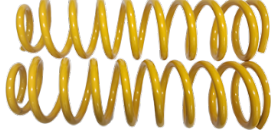


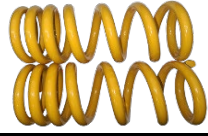
R51 Ti 550 2010 to 2012

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67089GP	1 pr	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs	40mm	NIS-226HDSP	1 pr		
<b>SHOCK ABSORBERS</b>						
	36mm Gas Bulged Shock Absorbers		SA36442G	2 ea	REAR	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>LBA up to 200kg</b>	40mm	NIS-227	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg plus - constant load</b>	40mm	NIS-227HD			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)


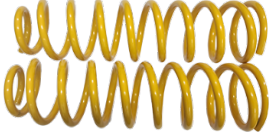


# NISSAN X-TRAIL - 4WD

T30 Wagon 2001 to 9/2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA673227G	1 L	FRONT
			SA673226G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40mm	NIS-222	1 pr	
<b>SHOCK ABSORBERS</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA673229G	1 L	REAR
			SA673228G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40mm	NIS-224	1 pr	



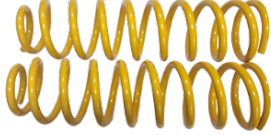



# NISSAN X-TRAIL - 4WD

T31 Wagon 10/2007 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67043G	1 L	FRONT
			SA67042G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>Petrol - No Bar / Winch</b>	25-30mm	NIS-228	1 pr	FRONT
	Raised Height Heavy Duty Coil Springs <b>Petrol - With Bar / Winch</b> <b>Diesel - all applications</b>	25-30mm	NIS-228HD		
<b>SHOCK ABSORBERS</b>					
	30mm Gas Shock Absorbers		SAS314044	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	25-30mm	NIS-229	1 pr	REAR

# NISSAN PATROL - 4WD

GQ / Y60 SWB Station Wagon & GR, Safari, KY60 2/1988 to 1998



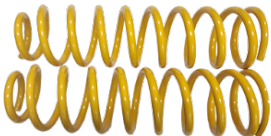


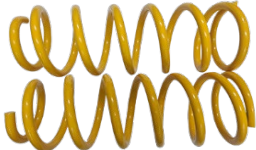
Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35091GP</b>	2 ea	<b>F R O N T</b>	
	41mm Foam Cell Shock Absorbers		<b>SA41091FCN</b>			
<b>STEERING DAMPER</b> (check end type)						
	Steering Damper - Pre 9/1989	Eye/Eye	<b>SD14034G</b>	1 only		
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	<b>SD35036</b>			
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>No LBA</b>	50mm	<b>NIS-200</b>	1 pr		
	Raised Height Heavy Duty Coil Springs <b>With LBA to 45kg - steel bar and/or winch</b>	50mm	<b>NIS-201</b>			
<b>CASTER BUSH KIT</b>						
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		<b>BU1721UK</b>	1 kit		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35094GP</b>	2 ea	<b>R E A R</b>	
	41mm Foam Cell Shock Absorbers		<b>SA41094FC</b>			
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to GVM</b>	50mm	<b>NIS-213</b>	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA 150kg to GVM</b>	50mm	<b>NIS-214</b>			

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# NISSAN PATROL - 4WD

GQ / Y60 - LWB Station Wagon & GR, Safari, WYG60

8/1987 to 1997

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCN	
<b>STEERING DAMPER</b> (Check end type)				
	Steering Damper - Pre 9/1989	Eye/Eye	SD14034G	1 only
	Expanded Body Steering Damper - 9/1989 Onwards	Pin/Pin	SD35036	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD	NIS-204	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 45kg</b>	50mm	NIS-201	
	Raised Height Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	NIS-201HD	
	Raised Height Heavy Duty Coil Springs <b>LBA 80kg plus</b>	50mm	NIS-201HHD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD	NIS-220	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 150kg - constant load</b>	50mm	NIS-214	
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg to 350kg - constant load</b>	50mm	NIS-214HD	
	Raised Height Heavy Duty Coil Springs <b>450kg plus - constant load</b> when fitting NIS-214EHD it is recommended to fit coil tower brace bracket	50mm	NIS-214EHD	


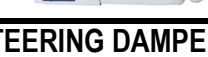













FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# NISSAN PATROL - 4WD

GQ / Y60 Cab Chassis & Utility Leaf Sprung 1988 to 5/1999

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers		SA35661G	2 ea
	41mm Foam Cell Shock Absorbers		SA41661FC	
<b>STEERING DAMPER</b> (Check end type)				
	Steering Damper - Pre 9/1989	ES17-EB1	SD14034G	1 only
	<b>Insufficient clearance for 35mm expanded body cannister</b>	EB1-EB1	SD14022G	
	Expanded Body Steering Damper - 9/1989 Onwards	PIN - PIN	SD35036	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 Leaf Springs	50mm	NISS011	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU718UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts With Nuts		UB436	3 N/S
	Square Forged U Bolts With Nuts		UB669F	1 D/S
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackle		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit in pairs</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional		S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P667	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers		SA35648GL	2 ea
	41mm Foam Cell Shock Absorbers		SA41648FC	
	<b>Urethane boot optional extra</b>			
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 + 2 Leaf Springs <b>LBA up to 300kg</b>	50mm	NISS012D-S NISS012N-S	1 D/S 1 N/S
	Raised Height Extra Heavy Duty 9 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	NISS012MH	
	Raised Height Extra Heavy Duty 7 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	50mm	NISS012GV	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB453	4 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackle		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit in pairs</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional		S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P667	2 ea

FRONT



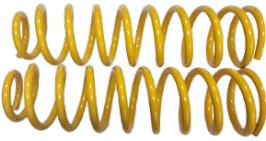


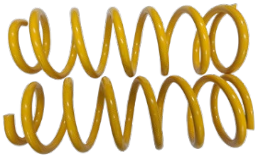
REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# NISSAN PATROL - 4WD











GQ / Y60 Cab Chassis & Utility Coil Sprung 1992 to 5/1999

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35091GP</b>	2 ea	<b>F R O N T</b>	
	41mm Foam Cell Shock Absorbers		<b>SA41091FCN</b>			
<b>STEERING DAMPER</b>						
	Expanded Body Steering Damper	Pin/Pin	<b>SD35036</b>	1 only		
<b>COIL SPRINGS</b>						
	Standard Height Heavy Duty Coil Springs	STD +	<b>NIS-204</b>	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA up to 45kg</b>	50mm	<b>NIS-201</b>			
	Raised Height Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	<b>NIS-201HD</b>			
<b>CASTER BUSH KIT</b>						
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		<b>BU1721UK</b>	1 kit		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35094GP</b>	2 ea	<b>R E A R</b>	
	41mm Foam Cell Shock Absorbers		<b>SA41094FC</b>			
<b>COIL SPRINGS</b>						
	Standard Height Heavy Duty Coil Springs	STD	<b>NIS-210LP</b>	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA up to 150kg</b>	50mm	<b>NIS-214</b>			
	Raised Height Heavy Duty Coil Springs <b>Progressive Rate LBA 200kg to 400kg - constant load</b>	50mm	<b>NIS-209HD</b>			
	Raised Height Heavy Duty Coil Springs <b>Progressive Rate Constant 500kg to GVM</b>	50mm	<b>NIS-211SP</b>			

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# NISSAN PATROL - 4WD

GU / Y61 Cab Chassis Utility Leaf Springs Rear 1999 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCN	
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha	Pin-Pin	SD35011GP	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD	NIS-204	1 pr
	Raised Height Heavy Duty Coils <b>LBA up to 40kg</b>	50mm	NIS-201	
	Raised Height Heavy Duty Coils <b>LBA 50kg to 80kg</b>	50mm	NIS-201HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers		SA35648GL	2 ea
	41mm Foam Cell Shock Absorbers <b>Urethane boot optional extra</b>		SA41648FC	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 + 2 Leaf Springs <b>LBA up to 300kg</b>	50mm	NISS012D-S NISS012N-S	1 D/S 1 N/S
	Raised Height Extra Heavy Duty 9 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	NISS012MH	
	Raised Height Extra Heavy Duty 7 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	50mm	NISS012GV	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB671	4 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackle		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional	<b>in pairs</b>	S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P667	2 ea

FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

\*\* While Stocks Last\*\*

# NISSAN PATROL - 4WD

GU / Y61 LWB Station Wagon 12/1997 Onwards



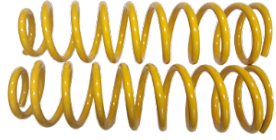


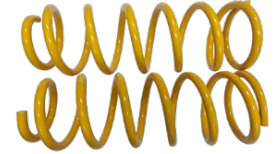
Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCN	
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - <b>Pre 2000</b> - Piranha	PIN/PIN	SD35011GP	
	Expanded Body Steering Damper - <b>4/2000 Onwards</b>	R.A.P	SD35501GP	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD +	NIS-204	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 45kg</b>	50mm	NIS-201	
	Raised Height Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	NIS-201HD	
	Raised Height Heavy Duty Coil Springs <b>LBA 80kg plus</b>	50mm	NIS-201HHD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>COIL SPRINGS</b>				
	Standard + Height Heavy Duty Coil Springs	STD	NIS-220	1 pr
	Raised Height Heavy Duty Coils - Progressive Rate <b>NIS-209LP* has 30mm split L&amp;R for GU Wag</b>	40mm	NIS-209LP*	
	Raised Height Heavy Duty Coil Springs <b>LBA up to 150kg</b>	50mm	NIS-215	
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg to 350kg</b>	50mm	NIS-214HD	
	Raised Height Heavy Duty Coil Springs <b>LBA 450kg to GVM - Constant load</b> <b>when fitting NIS-214EHD it is recommended to fit coil tower brace bracket</b>	50mm	NIS-214EHD	
	Raised Height Heavy Duty Coils - Progressive Rate <b>NIS-211* has 30mm split L&amp;R for GU Wag</b>	50mm	NIS-211*	

FRONT

REAR

# NISSAN PATROL - 4WD

GU / Y61 Cab Chassis & Utility Coil Springs 5/1999 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35091GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCN	
<b>STEERING DAMPER</b>				
	Steering Damper <b>**WSL**</b>	Pin-Pin	SD14011	1 only
	Expanded Body Steering Damper - Piranha		SD35011GP	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD +	NIS-204	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 45kg</b>	50mm	NIS-201	
	Raised Height Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	NIS-201HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35094GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>COIL SPRINGS</b>				
	Raised Height Heavy Duty Coil Springs <b>LBA up to 100kg</b>	50mm	NIS-214	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 250kg - Progressive Rate</b>	50mm	NIS-209HD	
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg to 350kg - constant load</b>	50mm	NIS-214HD	
	Raised Height Heavy Duty Coil Springs <b>450kg to GVM - constant load</b> when fitting NIS-214EHD it is recommended to fit coil tower brace bracket	50mm	NIS-214EHD	


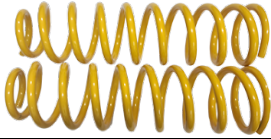


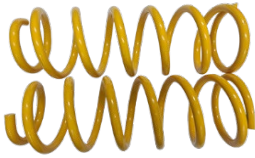
FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)


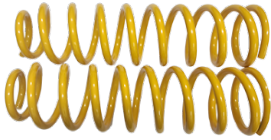



# ROVER - LANDROVER - 4WD

Defender 110 & TD5 LWB 110 Wheelbase 1992 to 2001 & 130 Wheelbase Double Cab 1994 to 1999

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41689FC	2 ea	<b>F R O N T</b>	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>110, TD5 &amp; 130</b>	50mm	LAN-207	1 pr		
	Raised Height Heavy Duty Coil Springs <b>110, TD5 (only)</b>	50mm	LAN-207HD			
<b>STEERING DAMPER</b>						
	Expanded Body Steering Damper		SD14032G	1 only	<b>R E A R</b>	
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41690FC	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>110, TD5 &amp; 130</b>	50mm	LAN-202	1 pr		
	Raised Height Heavy Duty Coil Springs <b>110, TD5 (only)</b>	50mm	LAN-202HD			

# ROVER - LANDROVER - 4WD


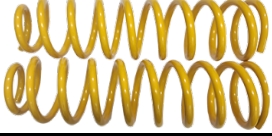



Discovery Series I 1991 to 3/1999

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41689FC	2 ea	F R O N T	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 30kg	50mm	LAN-206	1 pr		
<b>STEERING DAMPER</b>						
	Steering Damper		SD14011	1 only	R E A R	
	Expanded Body Steering Damper		SD35011G			
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers special raised - check coil entrapment		SA41690FC	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 200kg	50mm	LAN-213	1 pr		
	Raised Height Heavy Duty Coil Springs LBA 250kg plus - constant load	50mm	LAN-213HD			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ROVER - LANDROVER - 4WD

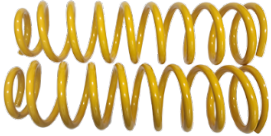

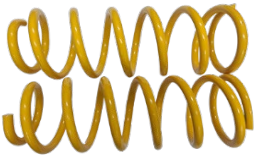
Discovery Series II 3/1999 to 2004

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41776FC	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 30kg	50mm	LAN-208	1 pr		
<b>STEERING DAMPER</b> (right angle pin)						
	Steering Damper		SD14502G	1 only	REAR	
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41777FC	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 200kg	50mm	LAN-213	1 pr		
	Raised Height Heavy Duty Coil Springs LBA 250kg plus - constant load	50mm	LAN-213HD			

LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# ROVER - LANDROVER - 4WD

Discovery Series III 1/2005 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers		SA67778G	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>LBA up to 30kg</b>	50mm	LAN-216	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA up to 50kg</b>	50mm	LAN-216HD			
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers		SA67779G	2 ea	REAR	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>LBA up to 200kg</b>	50mm	LAN-217	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA 250kg to 400kg</b>	50mm	LAN-217HD			
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 450kg plus - constant Load</b>	50mm	LAN-217EHD			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# ROVER - RANGEROVER - 4WD




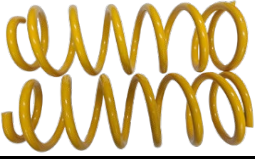
All Models 1971 to 1998 excluding air suspension

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41689FC	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 30kg	50mm	LAN-206	1 pr		
<b>STEERING DAMPER</b> (right angle pin)						
	Steering Damper		SD35011G	1 only	REAR	
<b>SHOCK ABSORBERS</b>						
	41mm Foam Cell Shock Absorbers		SA41690FC	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 150kg	50mm	LAN-212	1 pr		

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# SSANGYONG - 4WD

Musso & Korando 1995 to 2006

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers		SA35667GL	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars		MUSS001	1 pr		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers		SA35758G	2 ea	REAR	
<b>COIL SPRINGS</b>						
	Standard Height Heavy Duty Coil Springs	STD	MUS-201	1 pr		
	Raised Height Heavy Duty Coil Springs	40mm	MUS-200			

# SUBARU FORESTER - 4WD


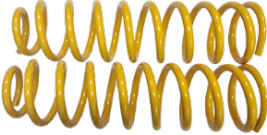

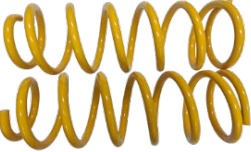
MY99, MY2000, MY2001 1997 to 6/2002 excluding self levelling suspension

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67074G	1 L	F R O N T
			SA67075G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	SUB-201	1 pr	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67076G	1 L	R E A R
			SA67077G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs LBA up to 100kg - constant load	30mm	SUB-203	1 pr	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)


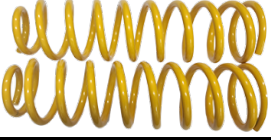

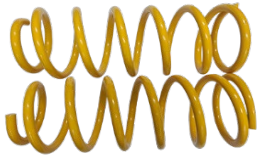
# SUBARU FORESTER - 4WD

MY03, MY04, MY05 7/2002 to 7/2008 excluding 2.5L turbo and all self levelling suspension

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67071G	1 L	F R O N T
			SA67070G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	SUB-201SP	1 pr	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67073G	1 L	R E A R
			SA67072G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	SUB-204	1 pr	














# SUZUKI JIMNY - 4WD

SN413 to JB33 Wagon All Models 1998 to 2017

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>SHOCK ABSORBERS</b>					
	36mm Gas Bulged Shock Absorbers		SA36631G	2 ea	FRONT
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40-50mm	SUZ-206	1 pr	
<b>SHOCK ABSORBERS</b>					
	36mm Gas Bulged Shock Absorbers		SA36640G	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	40-50mm	SUZ-212	1 pr	

# SUZUKI SIERRA - 4WD

SJ & LJ 1981 to 3/1996 (also HOLDEN DROVER)

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Shock Absorbers		SA12649GP	2 ea
<b>STEERING DAMPER</b>				
	Steering Damper		SD14030G	1 only
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 4 Leaf Springs	50mm	SUZ001	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU734UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB654 UB655	2 D/S 2 N/S
<b>SHACKLES</b>				
	Greaseable Shackles		S656K	2 ea
<b>PINS</b>				
	Non-Greaseable Pins		P657	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Shock Absorbers		SA12635GP	2 ea
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 3 + 2 Leaf Springs <b>LBA up to 300kg</b>	50mm	SUZ002	2 ea
	Raised Height Heavy Duty 3 + 2 Leaf Springs <b>use SUZ002D/S with spare tyre on rear door</b>	50mm	SUZ002D/S SUZ002	1 D/S 1 N/S
	Raised Height Extra Heavy Duty 4 + 2 Leaf Springs <b>LBA 300kg to GVM</b>	50mm	SUZ002M	2 ea
<b>Special Note: SUZ002M suits SJ41T Trayback &amp; LJ 80 Stockman</b>				
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU734UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB655	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S656K	2 ea
<b>PINS</b>				
	Non-Greaseable Pins		P657	2 ea


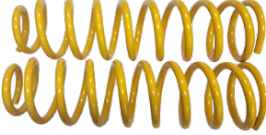

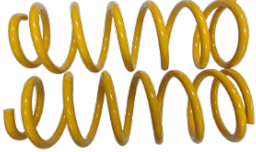
FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)





# SUZUKI SIERRA - 4WD

SJ80 / SJ413 4/1996 to 12/1998

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		<b>SA67104G</b>	2 ea	<b>F R O N T</b>
<hr/>					
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	<b>SUZ-204</b>	1 pr	
<hr/>					
<b>SHOCK ABSORBERS</b>					
	30mm Gas Shock Absorbers		<b>SAS310922</b>	2 ea	<b>R E A R</b>
<hr/>					
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	<b>SUZ-210</b>	1 pr	

# SUZUKI VITARA - 4WD


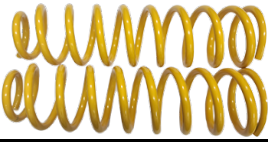

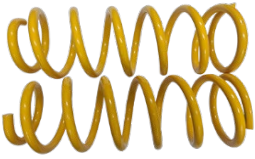
SE416 1.6 Litre & SE420 2 Litre 3 door SWB 1988 to 1997 Santana, Sidekick, Escudo, Geo Tracker

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67140G	1 L	FRONT
			SA67139G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>1.6 Litre Engine</b>	30mm	SUZ-201	1 pr	
	Raised Height Heavy Duty Coil Springs <b>2 Litre Engine</b>	30mm	SUZ-202		
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers		SA35639GL	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	SUZ-208	1 pr	




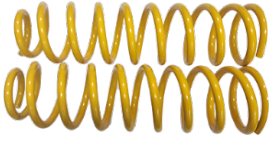

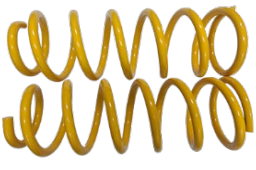
# SUZUKI VITARA - 4WD

SE416 & SV420 / 620 5 door LWB Sidekick, Escudo 1991 to 1998

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67140G	1 L	FRONT
			SA67139G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>4 Cylinder Engine</b>	30mm	SUZ-202	1 pr	
	Raised Height Heavy Duty Coil Springs <b>V6 Engine</b>	30mm	SUZ-203		
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers		SA35639GL	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs	30mm	SUZ-209	1 pr	


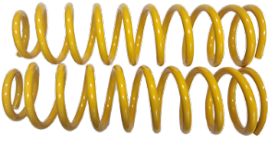

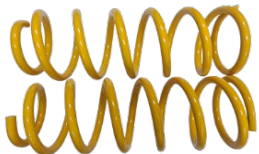
# SUZUKI VITARA - 4WD

Grand Vitara SWB, LWB, XL7 4Cyl & V6 1998 to 2005

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67144G	1 L	F R O N T
			SA67143G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>4 Cylinder Engine SWB &amp; LWB</b>	30mm	SUZ-214	1 pr	R E A R
	Raised Height Heavy Duty Coil Springs <b>V6 Engine</b>	30mm	SUZ-205		
	Raised Height Heavy Duty Coil Springs <b>XL-7</b>	30mm	SUZ-205H		
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers <b>4 Cylinder Engine &amp; V6 SWB &amp; LWB Models</b>		SA35639GL	2 ea	R E A R
	35mm Gas Bulged Shock Absorbers <b>XL7 Models</b>		SA35632G	2 ea	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>4 Cylinder Engine SWB</b>	30mm	SUZ-217	1 pr	R E A R
	Raised Height Heavy Duty Coil Springs <b>4 Cylinder LWB</b>	30mm	SUZ-211		
	Raised Height Heavy Duty Coil Springs <b>V6 Engine</b>	30mm	SUZ-211		
	Raised Height Heavy Duty Coil Springs <b>XL-7</b>	30mm	SUZ-213		















# SUZUKI VITARA - 4WD

Grand Vitara JB416 4Cyl & JB627 V6 8/2005 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>					
	Strut/Gas Spring Seat Shock Absorbers		SA67142G	1 L	FRONT
			SA67141G	1 R	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>4 Cylinder Engine</b>	30mm	SUZ-215 SP	1 pr	FRONT
	Raised Height Heavy Duty Coil Springs <b>V6 Engine / 4 Cylinder Diesel</b>	30mm	SUZ-215		
<b>SHOCK ABSORBERS</b>					
	36mm Gas Bulged Shock Absorbers <b>4 Cylinder &amp; V6 SWB &amp; LWB Models</b>		SA36645G	2 ea	REAR
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>4 Cylinder &amp; V6 Engine</b>	30mm	SUZ-216	1 pr	REAR

# TOYOTA HILUX & 4 RUNNER - 4WD leaf spring front & rear

Pre I.F.S. LN / RN36 / 46 / 105 & LN / YN65 / 67 / 106 1979 to 11/1997

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35639GP	2 ea
<b>STEERING DAMPER</b> (right angle pin on one end)				
	Expanded Body Steering Damper		SD35021G	1 only
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 5 Leaf Springs <b>Petrol Engine</b>	50mm	TOY010CD/S TOY010CN/S	1 D/S 1 N/S
	Raised Height Heavy Duty 6 Leaf Springs <b>Diesel Engine</b>	50mm	TOY010HD/S TOY010HN/S	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU732UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	2 (N/S)
	Square Forged Form U Bolts - With Nuts		UB678	2 (D/S)
<b>SHACKLES</b>				
	Greaseable Shackles		S384K	2 ea
<b>PINS</b>				
	Greaseable Pins		P385	2 ea
<b>OPTIONAL PARTS</b>				
	Adjustable Torque Arm		ACCATA-TOY01	1 kit
	Drop Drag Link		ACCDDL-TOY01	
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers -Piranha - Pre 1/1984		SA35636GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers -Piranha - Pre 1/1984		SA35636GPA	
	35mm Gas Bulged Shock Absorbers - Piranha - Post 1/1984		SA35650GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha - Post 1/1984		SA35650GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	50mm	TOY011	2 ea
	Raised Height Extra Heavy Duty 6 + 1 Leaf Springs <b>LBA 400kg to GVM</b>	50mm	TOY011M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU733UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386K	2 ea
<b>PINS</b>				
	Greaseable Pins		P385	2 ea

FRONT










REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HILUX - 4WD

I.F.S. Single Cab / Dual Cab LN107 SR5, LN108, RN106

9/1991 to 2005

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35088GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41088FC	
<b>STEERING DAMPER</b>				
	Steering Damper <b>Insufficient clearance for 35mm expanded body cannister on some Turbo Diesel models</b>		SD14033G	1 only
	Expanded Body Steering Damper		SD35033G	
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars <b>Length 1064mm</b>		TOY026	1 pr
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35650GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY040	2 ea
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY040M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU747UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea

FRONT










REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HILUX - 4WD

I.F.S. LN / KZN / RN165/166/167, LN170 (2.4L Dsl), LN172 (3.0L Dsl), RZN169

Single Cab / Dual Cab / Extra Cab 10/1997 to 2005

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35088GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41088FC	
<b>STEERING DAMPER</b>				
	Steering Damper <b>Insufficient clearance for 35mm expanded body cannister on some Turbo Diesel models</b>		SD14033G	1 only
	Expanded Body Steering Damper		SD35033G	
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars <b>Length 1064mm</b>		TOY026	1 pr
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35650GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY040	2 ea
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY040M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU747UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386-1K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA 4 RUNNER - 4WD

I.F.S. LN61, YN63, Surf 8/1985 to 1989

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35088GP	2 ea
	41mm Foam Cell Shock Absorbers		SA41088FC	
<b>STEERING DAMPER</b>				
	Steering Damper <b>Insufficient clearance for 35mm expanded body cannister on some Turbo Diesel models</b>		SD14033G	1 only
	Expanded Body Steering Damper		SD35033G	
<b>TORSION BARS</b>				
	Increased Rate Torsion Bars <b>Length 1064mm</b>		TOY026	1 pr
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35650GPA	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA up to 300kg</b>	50mm	TOY011	2 ea
	Raised Height Extra Heavy Duty 6 + 2 Leaf Springs <b>LBA 400kg to GVM</b>	50mm	TOY011M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU733UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S386K	2 ea
<b>PINS</b>				
	Greaseable Pins		P385	2 ea

FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA 4 RUNNER - 4WD

I.F.S. LN / RN / YN / VZN130, Surf 11/1989 to 1997

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35088GP	2 ea	FRONT	
	41mm Foam Cell Shock Absorbers		SA41088FC			
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars Length 1064mm		TOY026	1 pr		
<b>STEERING DAMPER</b>						
	Steering Damper <b>Insufficient clearance for 35mm expanded body cannister on some Turbo Diesel models</b>		SD14033G	1 only	REAR	
	Expanded Body Steering Damper		SD35033G			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers		SA35637GL	2 ea		
	41mm Foam Cell Shock Absorbers		SA41637FC			
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs LBA up to 100kg	40mm	THX-201	1 pr		
	Raised Height Extra Heavy Duty Coil Springs LBA 150kg to 250kg - constant load	40mm	THX-201HD			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)



# PROBLEM SOLVED



## DO YOUR CUSTOMERS CARRY HEAVY LOADS?

At SSA we have been able to solve the heavy load requirements of Mazda BT50/Ford Ranger customers with our spring made to our unique design. This has given the over slung spring added strength in its low camber design.

**NOTE: Loads are to be kept within the vehicle's legal limits. See how this was achieved in this featured video.**

**VISIT WEBSITE: [www.ssa.com.au/solutions/improved-suspension-mazda-bt50](http://www.ssa.com.au/solutions/improved-suspension-mazda-bt50)**

## EXTRA HEAVY SPRING PACKS

SSA has now expanded its range of heavy duty springs to other makes incorporating this same design. These include:

- **Isuzu Dmax/Holden Colorado 2012** - HOLD022GV
- **Mazda BT50/Ford Ranger '06-'11** - MAZDA050GV
- **Mazda BT50/Ford Ranger '12 on** - MAZDA052GV
- **Mitsubishi Triton MQ** - MITS04GV
- **Nissan Navara D23** - NISS036GV
- **Nissan Navara D40** - NISS024GV
- **Toyota Hilux '05-15** - TOY146GV
- **Toyota Hilux '15 on** - TOY056GV
- **Mitsubishi Triton ML/MN** - MITS028GV

### CONTACT US:










**PHONE:** 1800 630 411

**EMAIL:** [info@ssa.com.au](mailto:info@ssa.com.au)



# TOYOTA HILUX - 4WD

KUN 26 4/2005 to 2015 VIGO

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67087GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67087GPA	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR01	1 pr
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204H COIL-ST-TPR11	
	Coil Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204HD COIL-ST-TPR21	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR52	
	Tapered Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204HT COIL-ST-TPR51	
<b>TOP PLATE MOUNT</b>	Strut / Coil Assembly Top Plate Mount		TPL1083	2 ea
<b>SWAY BAR RELOCATION PLATE</b> 	Sway Bar Relocation Plates		ACCSWBR-TOY01	1 kit
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35650GPA	
<b>LEAF SPRINGS</b> 	Raised Height 5 Leaf Parabolic Springs <b>LBA 100kg to 300kg</b>	50mm	TOY146P5	2 ea
	Raised Height Comfort 4 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY146	
	Raised Height Heavy Duty 5 + 2 Leaf Springs <b>LBA 250kg - 400kg</b>	50mm	TOY146M	
	Raised Height Heavy Duty 6 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	TOY146MH	
	Raised Height Extra Heavy Duty 5 + 2 Leaf Springs <b>LBA 600kg to GVM</b> with 10mm main & wrap leaves - constant load	50mm	TOY146GV	
<b>SHACKLE BUSH KITS</b> 	Polyurethane Bush Kit		BU766UK	1 kit
<b>U-BOLTS</b> 	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts use with TOY146P5, TOY146M, TOY146MH & TOY146GV		UB437	
<b>SHACKLES</b> 	Greaseable Shackles		S387K	2 ea
<b>PINS</b> 	Greaseable Pins		P387-2	2 ea
<b>BRAKE BIAS ROD</b> 	Brake Bias Rod		ACCBRR-TOY01	2 ea








FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA HILUX - 4WD

2015 Onwards REVO

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67087GP	2 ea
	<b>Adjustable</b> Dampening Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67087GPA	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR01	1 pr
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204H COIL-ST-TPR11	
	Coil Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204HD COIL-ST-TPR21	
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204T COIL-ST-TPR52	
	Tapered Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204HT COIL-ST-TPR51	
<b>TOP PLATE MOUNT</b>	Strut / Coil Assembly Top Plate Mount		TPL1083	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35098GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35098GPA	
<b>LEAF SPRINGS</b>				
	Raised Height 4 Leaf Parabolic Springs <b>LBA 100kg to 300kg</b>	50mm	TOY056P4	2 ea
	Raised Height Comfort 3 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY056	
	Raised Height Heavy Duty 3 + 2 Leaf Springs <b>LBA 300kg to 500kg</b>	50mm	TOY056M	
	Raised Height Heavy Duty 4 + 2 Leaf Springs <b>LBA 500kg to GVM</b>	50mm	TOY056GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU766UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB453-2	4 ea
	Square Form U Bolts - With Nuts <b>use with TOY056P4, TOY056M &amp; TOY056GV</b>		UB437	
<b>SHACKLES</b>				
	Greaseable Shackles		S391K	2 ea
<b>PINS</b>				
	Greaseable Pins		P387-2	2 ea














FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA LANDCRUISER - 4WD

FJ45 / HJ47 LWB 7/1980 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA12635GP	2 ea
<b>STEERING DAMPER</b>				
	Steering Damper		SD14023G	1 only
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 Leaf Springs <b>Comfort - no load</b>	50mm	TOY004A	2 ea
	Raised Height Heavy Duty 8 Leaf Springs <b>LBA 50kg</b>	50mm	TOY004	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB453-1	3 ea
	Square Form U Bolt - With Nuts		UB449	1 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackles		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional	<b>in pairs</b>	S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P351	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 + 3 Leaf Springs <b>LBA up to 300kg</b>	50mm	TOY005	2 ea
	Raised Height Heavy Duty 8 + 3 Leaf Springs <b>LBA 350kg plus - constant load</b>	50mm	TOY005M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB416	4 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackle		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional	<b>in pairs</b>	S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P351	2 ea














FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA LANDCRUISER - 4WD

FJ60 / HJ60 Station Wagon 1980 to 1990

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35637GP	2 ea
<b>STEERING DAMPER</b> (right angle pin)				
	Expanded Body Steering Damper - Piranha		SD35024GP	1 only
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 Leaf Springs <b>Comfort - no load</b>	50mm	TOY006	2 ea
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB436	4 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackles		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit in pairs</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional		S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P351	2 ea
<b>SHOCK ABSORBERS</b>				
	<b>Pre 10/1985</b> 35mm Gas Bulged Shock Absorbers - Piranha		SA35636GP	2 ea
	<b>Post 10/1985</b> 35mm Gas Bulged Shock Absorbers - Piranha		SA35650GP	
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 6 + 1 Leaf Springs	50mm	TOY007CN-S TOY007CD-S	1 only
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Round Form - With Nuts		UB453-3	4 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackles		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit in pairs</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional		S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P351	2 ea

FRONT

REAR














\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA LANDCRUISER - 4WD

FJ / HJ75 1984 to 1990

FZJ / HZJ75 1990 to 9/1999

Utility & Troop Carrier

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35637GP	2 ea
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha		SD35024GP	1 only
<b>LEAF SPRINGS</b>				
	Raised Height Heavy Duty 7 Leaf Springs <b>LBA up to 70kg</b>	50mm	TOY008	2 ea
	Raised Height Extra H/D 8 Leaf Springs <b>LBA 50kg Plus</b>	50mm	TOY008M	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU719UK	1 kit
<b>U-BOLTS</b>				
	Square Form U Bolts - With Nuts		UB436	4 ea
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackles		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional	<b>in pairs</b>	S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P351	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35099GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35099GPA	
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>LEAF SPRINGS</b>				
	Raised Height Med Duty 6 + 2 Leaf Springs <b>LBA up to 200kg - Tray Back only</b>	30mm	TOY009 **	2 ea
	Raised Height H/D 7 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY009M	
	Raised Height H/D 8 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	TOY009MH	
	Raised Height EH/D 9 + 2 Leaf Springs <b>LBA 600kg to GVM</b>	50mm	TOY009RS	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit		BU720UK	1 kit
<b>U-BOLTS</b>				
	Round Form U Bolts - With Nuts		UB453-1	4 ea
	Round Form U Bolts - With Nuts		UB416	
	<b>Use with TOY009MH &amp; TOY009RS</b>			
<b>SHACKLES</b>				
	Heavy Duty Greaseable Shackles		S353K	2 ea
	Anti - Inversion Shackle L/H optional	<b>Must fit</b>	S353KLH	1 L/H
	Anti - Inversion Shackle R/H optional	<b>in pairs</b>	S353KRH	1 R/H
<b>PINS</b>				
	Greaseable Pins		P354	2 ea



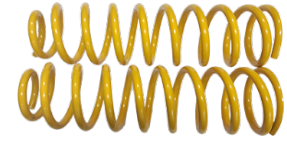










FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA LANDCRUISER - 4WD

VDJ76 Station Wagon 2007 Onwardss



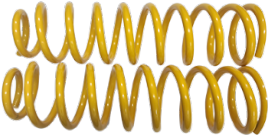










Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35097GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35097GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCT	
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha		SD35047GP	1 only
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD +	TLC-207	
	Raised Height Heavy Duty Coil Springs <b>No Bar / Winch</b>	50mm	TLC-203	
	Raised Extra Height Heavy Duty Coil Springs <b>Progressive Rate - With Bar / Winch</b>	50mm	TLC-203HT	1 pr
	Raised Height Extra Heavy Duty Coil Springs <b>Extreme loads to GVM</b>	50mm	TLC-203HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>ABS EXTENSION</b>				
	ABS Extension - Does not suit later models with DPF		ACCABSXT-TOY01	1 kit
<b>SWAY BAR SPACERS</b>				
	Sway Bar Spacer		ACCSWBB-TOY02	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35099GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35099GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>LEAF SPRINGS</b>				
	Raised Height Medium Duty 5 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY050M	2 ea
	Raised Height Heavy Duty 8 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY050MH	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit - <b>Suits SSA Shackles &amp; Pins</b> <b>Shackle Widths May Vary Between Brands</b>		BU779UK	1 kit
<b>U-BOLTS (check length required)</b>				
	Round Form U Bolts - With Nuts		UB453-3	
	Round Form U Bolts - With Nuts		UB416	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S358HDK	2 ea
<b>PINS</b>				
	Greaseable Pins		P356HD	2 ea
<b>BRAKE PROPORTION SPACER</b>				
	Brake Proportioning Spacer		SP-TOY-BRK01	1 ea

F  
R  
O  
N  
T

R  
E  
A  
R

# TOYOTA LANDCRUISER - 4WD

FZJ78 / HZJ78 / VDJ78 Troop Carrier 9/1999 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35097GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35097GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCT	
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha <b>1999-2006</b>		SD35024GP	1 only
	Expanded Body Steering Damper - Piranha <b>2007+ V8 &amp; 6 Cylinder Models</b>		SD35047GP	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD +	TLC-207	1 pr
	Raised Height Heavy Duty Coil Springs <b>No Bar / Winch</b>	50mm	TLC-203	
	Raised Extra Height Heavy Duty Coil Springs <b>Progressive Rate - With Bar / Winch</b>	50mm	TLC-203HT	
	Raised Height Extra Heavy Duty Coil Springs <b>Extreme loads to GVM</b>	50mm	TLC-203HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>ABS EXTENSION</b>				
	ABS Extension - Does not suit later models with DPF		ACCABSXT-TOY01	1 kit
<b>SWAY BAR SPACERS</b>				
	Sway Bar Spacer		ACCSWBB-TOY02	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35099GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35099GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>LEAF SPRINGS</b>				
	Raised Height Medium Duty 7 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY020	2 ea
	Raised Height Heavy Duty 8 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY020M	
	Raised Height Heavy Duty 9 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	TOY020MH	
	Raised Height Extra Heavy Duty 8 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	50mm	TOY020GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit - Suits SSA Shackles & Pins Shackle Widths May Vary Between Brands		BU779UK	1 kit
<b>U-BOLTS (check length required)</b>				
	Round Form U Bolts - With Nuts		UB416	4 ea
	Round Form U Bolts - With Nuts		UB418	
<b>SHACKLES</b>				
	Greaseable Shackles		S358HDK	2 ea
<b>PINS</b>				
	Greaseable Pins		P356HD	2 ea
<b>BRAKE PROPORTION SPACER</b>				
	Brake Proportioning Spacer		SP-TOY-BRK01	1 ea



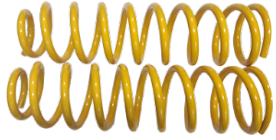










FRONT

REAR



# TOYOTA LANDCRUISER - 4WD

FZJ79 / HZJ79 / VDJ79 Utility - Single Cab Models 9/1999 Onwards



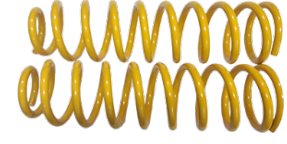










Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35097GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35097GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCT	
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha <b>1999-2006</b>		SD35024GP	1 only
	Expanded Body Steering Damper - Piranha <b>2007+ V8 &amp; 6 Cylinder Models</b>		SD35047GP	
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD +	TLC-207	1 pr
	Raised Height Heavy Duty Coil Springs <b>No Bar / Winch</b>	50mm	TLC-203	
	Raised Extra Height Heavy Duty Coil Springs <b>Progressive Rate - With Bar / Winch</b>	50mm	TLC-203HT	
	Raised Height Extra Heavy Duty Coil Springs <b>Extreme loads to GVM</b>	50mm	TLC-203HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>ABS EXTENSION</b>				
	ABS Extension - Does not suit later models with DPF		ACCABSXT-TOY01	1 kit
<b>SWAY BAR SPACERS</b>				
	Sway Bar Spacer		ACCSWBB-TOY02	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35099GP	2 ea
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35099GPA	
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>LEAF SPRINGS</b>				
	Raised Height Medium Duty 7 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY020	2 ea
	Raised Height Heavy Duty 8 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY020M	
	Raised Height Heavy Duty 9 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	TOY020MH	
	Raised Height Extra Heavy Duty 8 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load</b> <b>LBA 600kg to GVM</b>	50mm	TOY020GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit - Suits SSA Shackles & Pins <b>Shackle Widths May Vary Between Brands</b>		BU779UK	1 kit
<b>U-BOLTS (check length required)</b>				
	Round Form U Bolts - With Nuts		UB416	4 ea
	Round Form U Bolts - With Nuts		UB418	
<b>SHACKLES</b>				
	Greaseable Shackles		S358HDK	2 ea
<b>PINS</b>				
	Greaseable Pins		P356HD	2 ea
<b>BRAKE PROPORTION SPACER</b>				
	Brake Proportioning Spacer		SP-TOY-BRK01	1 ea

FRONT

REAR

# TOYOTA LANDCRUISER - 4WD

70 Series Dual Cab 7/2012 Onwards



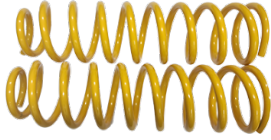


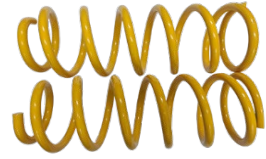
Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35097GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35097GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41091FCT	
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha		SD35047GP	1 only
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD +	TLC-207	
	Raised Height Heavy Duty Coil Springs <b>No Bar / Winch</b>	50mm	TLC-203	
	Raised Extra Height Heavy Duty Coil Springs <b>Progressive Rate - With Bar / Winch</b>	50mm	TLC-203HT	1 pr
	Raised Height Extra Heavy Duty Coil Springs <b>Extreme loads to GVM</b>	50mm	TLC-203HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>ABS EXTENSION</b>				
	ABS Extension - Does not suit later models with DPF		ACCABSXT-TOY01	1 kit
<b>SWAY BAR SPACERS</b>				
	Sway Bar Spacer		ACCSWBB-TOY02	2 ea
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35099GP	
	35mm <b>Adjustable</b> Shock Absorbers - Piranha		SA35099GPA	2 ea
	41mm Foam Cell Shock Absorbers		SA41094FC	
<b>LEAF SPRINGS</b>				
	Raised Height Medium Duty 7 + 2 Leaf Springs <b>LBA up to 200kg</b>	50mm	TOY020	
	Raised Height Heavy Duty 8 + 2 Leaf Springs <b>LBA 250kg to 400kg</b>	50mm	TOY020M	
	Raised Height Heavy Duty 9 + 2 Leaf Springs <b>LBA 400kg to 600kg</b>	50mm	TOY020MH	2 ea
	Raised Height Extra Heavy Duty 8 + 2 Leaf Springs <b>with 10mm main &amp; wrap leaves - constant load LBA 600kg to GVM</b>	50mm	TOY020GV	
<b>SHACKLE BUSH KITS</b>				
	Polyurethane Bush Kit - Suits SSA Shackles & Pins <b>Shackle Widths May Vary Between Brands</b>		BU779UK	1 kit
<b>U-BOLTS (check length required)</b>				
	Round Form U Bolts - With Nuts		UB416	
	Round Form U Bolts - With Nuts		UB418	4 ea
<b>SHACKLES</b>				
	Greaseable Shackles		S358HDK	2 ea
<b>PINS</b>				
	Greaseable Pins		P356HD	2 ea
<b>BRAKE PROPORTION SPACER</b>				
	Brake Proportioning Spacer		SP-TOY-BRK01	1 ea

FRONT

REAR

# TOYOTA LANDCRUISER - 4WD

FJ80, HDJ80, HZJ80 Station Wagon 8/1991 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35105GP	2 ea
<b>STEERING DAMPER</b>				
	Expanded Body Steering Damper - Piranha		SD35024GP	1 only
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD	TLC-208	1 pr
	Raised Height Heavy Duty Coil Springs <b>LBA up to 50kg</b>	50mm	TLC-202	
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	TLC-202HD	
<b>CASTER BUSH KIT</b>				
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit
<b>SHOCK ABSORBERS</b>				
	35mm Gas Bulged Shock Absorbers - Piranha		SA35106GP	2 ea
<b>COIL SPRINGS</b>				
	Standard Height Heavy Duty Coil Springs	STD	TLC-217	1 pr
	Raised Height Heavy Duty Coil Springs <b>Up to 150kg</b>	50mm	TLC-213	
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 200kg to 300kg - constant load</b>	50mm	TLC-213HD	
	Raised Height Ultra Heavy Duty Coil Springs <b>LBA 360kg to GVM - constant Load</b>	50mm	TLC-213HHD	

FRONT

REAR

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

\* Early model 80 series 5/1990 - 8/1991 require different coils. Contact for more info.

# 4WD SHOCK ABSORBERS

## ADJUSTABLE SHOCK ABSORBER

Piranha 4 Way Adjustable Gas Charged Shock Absorbers come with an alloy adjustable knob at the lower end of the body that allows you to configure your ride depending on your needs, so if your vehicles weight varies from day to day or you are after more refined dampening flexibility than an off the shelf shock absorber this is the shock absorber for you.

- 1. 18mm Hardened Chrome Shaft
- 2. Multi-Lip Seal
- 3. Teflon Wear Band
- 4. Sintered Piston
- 5. 57mm Outer Body
- 6. 35mm Bore-Twin Tube Nitrogen Charged
- 7. Alloy Adjuster Dial

## SINGLE SHOCK ABSORBER

- 1. 18mm Hardened Chrome Shaft
- 2. Teflon Wear Band
- 3. Multi-Lip Seal
- 4. 57mm Outer Body
- 5. 35mm Bore-Twin Tube Nitrogen Charged
- 6. Sintered Piston

## COIL OVER STRUT

- 1. 18mm Shaft
- 2. Protective Boot
- 3. Multi-Lip Seal
- 4. 35mm Bore-Twin Tube Nitrogen Charged
- 5. 57mm Outer Body
- 6. Sintered Piston
- 7. Polypropylene Spring Seat
- 8. Height Adjustable Spring Seat





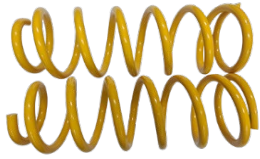


[www.ssa.com.au](http://www.ssa.com.au)

# TOYOTA LANDCRUISER - 4WD

HDJ100, HZJ100, UZJ100 I.F.S. Station Wagon



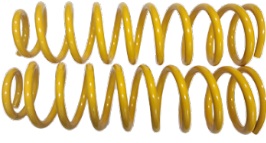


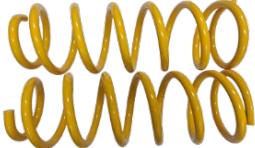
4/1998 to 11/2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35103GP	2 ea	FRONT	
<b>TORSION BARS</b>						
	Increased Rate Torsion Bars <b>Length 1160mm</b> <b>Petrol</b>		TOY041	1 pr		
	Increased Rate Torsion Bars <b>Length 1210mm</b> <b>Diesel / Turbo Diesel / 6 Cylinder Petrol Engine</b>		TOY041D	1 pr		
<b>TORSION BAR SUPPORT BRACKET</b>						
	Torsion Bar Support Bracket		TOY041SUPPBKT	1 kit	REAR	
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35104GP	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>Progressive Rate - LBA 50kg to GVM</b>	STD	TLC-210	1 pr		
	Raised Height Heavy Duty Coil Springs <b>Progressive Rate - LBA up to 150kg</b>	20mm	TLC-209			
	Raised Height Heavy Duty Coil Springs <b>LBA up to 200kg</b>	25mm	TLC-217			
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 250kg Plus - constant load</b>	25mm	TLC-216HD			

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA LANDCRUISER - 4WD



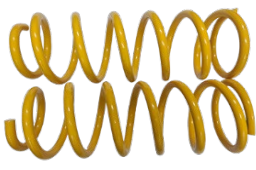
FZJ105R, HZJ105R Station Wagon 4/1998 to 11/2007

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35105GP	2 ea	FRONT	
<b>STEERING DAMPER</b>						
	Expanded Body Steering Damper - Piranha		SD35024GP	1 only		
<b>COIL SPRINGS</b>						
	Standard Height Heavy Duty Coil Springs	STD	TLC-208	1 pr		
	Raised Height Heavy Duty Coil Springs <b>LBA up to 50kg</b>	50mm	TLC-202			
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 50kg to 80kg</b>	50mm	TLC-202HD			
<b>CASTER BUSH KIT</b>						
	Correct castor angles by using Castor Bush Kit BU1721UK (2 degrees) for 50mm lift		BU1721UK	1 kit	REAR	
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35106GP	2 ea		
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>Progressive Rate</b>	20mm	TLC-210	1 pr		
	Raised Height Heavy Duty Coil Springs <b>Progressive Rate</b>	40mm	TLC-209			
	Raised Height Heavy Duty Coil Springs <b>LBA Up to 150kg</b>	50mm	TLC-213			
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 250kg to 400kg - constant load</b>	50mm	TLC-213HD			

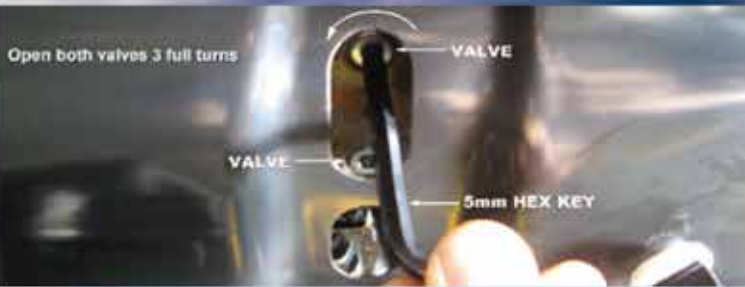
\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# TOYOTA LANDCRUISER - 4WD

200 Series Station Wagon UZJ, URJ, GRJ, VDJ 11/2007 Onwards \* excluding air suspension models

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha <b>Must use BlueMax Top Plate Mount when using BlueMax strut/shock absorbers</b>		SA67200GP	2 ea	<b>F R O N T</b>
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles With LBA up to 50kg</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TLC-218 COIL-ST-TLC01	1 pr	
	Coil Springs <b>For Vehicles With LBA 50kg to 100kg</b> Preassembled Strut/Coil With Top Plate Mount	40mm	KTFR-130H COIL-ST-TLC11		
	Coil Springs <b>For Vehicles With LBA 100kg to 130kg</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TLC-218HD COIL-ST-TLC21		
	Coil Springs <b>For Vehicles With LBA 130kg plus</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TLC-218HHD COIL-ST-TLC22		
<b>Note:</b> Special Order Coils are available for vehicles with KDSS. With a 10mm Taller Coil on D/S					
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1107	2 ea	
<b>SHOCK ABSORBERS</b>					
	35mm Gas Bulged Shock Absorbers - Piranha		SA35681GP	2 ea	
<b>COIL SPRINGS</b>					
	Raised Height Heavy Duty Coil Springs <b>LBA Up to 150kg</b>	25mm	TLC-219	1 pr	<b>R E A R</b>
	Raised Height Heavy Duty Coil Springs <b>LBA 100kg to 250kg - constant load</b>	45mm	KTRR-131H		
	Raised Height Heavy Duty Coil Springs <b>LBA 300kg to 500kg - constant load</b>	45mm	TLC-219HD		
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 500kg plus - constant Load</b>	45mm	TLC-219HHD		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**  
 \* **Check vehicle KDSS suspension system. If fitted follow recommended fitment procedure outlined opposite.**



When Replacing Suspension on a Toyota Prado 150 Series/Landcruiser 200 Series or Lexus LX Series vehicles fitted with Toyota's Kinetic Dynamic Suspension System (KDSS), also referred to by Toyota as a 'hydro-mechanical semi active anti roll bar' always abide by the correct fitting procedure as follows:

1. Suspend vehicle on 2-post type chassis hoist allowing wheels to hang.

2. Locate the KDSS valve housing

**NOTE:** The valve housing is located on the left-hand side of the vehicle, on the inside of the chassis rail, roughly half way between the front and the back of the vehicle.

3. Using a 5mm hex key, open the 2 levelling valves 3 full rotations anti-clockwise. (Access is from underside of the KDSS valve)

**NOTE:** The KDSS system is now open and the sway bar ends should be able to be freely manipulated with little effort, allowing spring / strut removal and installation.

**THE VEHICLE MUST NOT BE DRIVEN WITH THESE VALVES OPEN AS THIS WILL COMPROMISE THE SYSTEM AND RENDER THE VEHICLE UNSAFE TO DRIVE.**

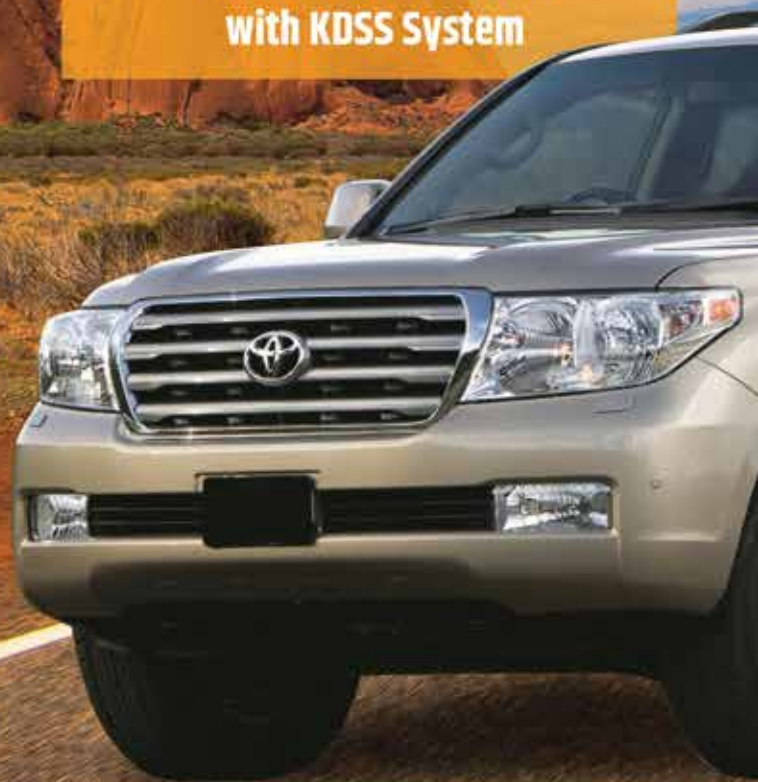
4. With the vehicle sitting on level ground, close both KDSS levelling valves by turning them in a clockwise direction and then tightening.



*Go to the Max*

2022

**Toyota Landcruiser  
200 Series/ Toyota  
Prado 150 Series  
with KDSS System**



Ph 1800 630 411



[www.ssa.com.au](http://www.ssa.com.au)

**BLUEMAX - Distributing Australia Wide**

SSA | BRISBANE

219 Toombul Road  
Northgate Queensland 4013  
T: 07 3370 3200  
E: [info@ssa.com.au](mailto:info@ssa.com.au)

MCNAUGHTAN'S | MELBOURNE

321 Greens Rd  
Keysborough, VIC, 3173  
T: 03 8768 6666  
E: [vicsales@mcnaughtans.com.au](mailto:vicsales@mcnaughtans.com.au)



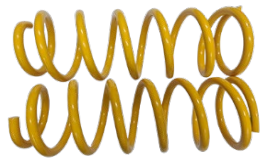
MCNAUGHTAN'S | PERTH

3 Kalli Street, Malaga  
Western Australia, 6090  
T: 08 92481833  
E: [wainfo@mcnaughtans.com.au](mailto:wainfo@mcnaughtans.com.au)





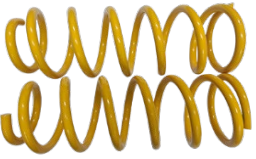
# TOYOTA LANDCRUISER - 4WD

FJ Cruiser 2006 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67087GP</b>	2 ea	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204</b> <b>COIL-ST-TPR01</b>	1 pr	<b>F R O N T</b>
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204H</b> <b>COIL-ST-TPR11</b>		
	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204T</b> <b>COIL-ST-TPR52</b>		
	Tapered Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HT</b> <b>COIL-ST-TPR51</b>		
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		<b>SA35682GP</b>	2 ea	
<b>COIL SPRINGS</b> 	Raised Height Heavy Duty Coil Springs	50mm	<b>TPR-205</b>	1 pr	<b>R E A R</b>

# TOYOTA FORTUNER - 4WD

GUN156R 8/2015 Onwards

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67087GP	2 ea	FRONT
<b>COILS &amp; STRUT ASSEMBLY</b> 	Tapered Coil Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	HOL-210HT COIL-ST-HOL54		
	Coil Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204 COIL-ST-TPR11		
	Coils Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204H COIL-ST-TPR	1 pr	
	Tapered Coils Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	TPR-204HT COIL-ST-TPR51		
	<b>TOP PLATE MOUNT</b>	Strut / Coil Assembly Top Plate Mount		TPL1083	
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha		SA35686GP	2 ea	REAR
<b>COIL SPRINGS</b> 	Raised Height Heavy Duty Coil Springs		KTRR-215		
	Raised Height Heavy Duty Coil Springs	50mm	KTRR-215HD	1 pr	

# TOYOTA PRADO 95 SERIES - 4WD

VZJ, KZJ, RZJ, KDJ 95 Station Wagon



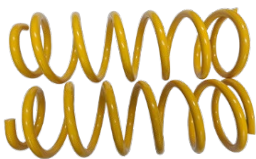
1996 to 2003

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers		<b>SA67222G</b>	2 ea	<b>F R O N T</b>
<b>COILS &amp; STRUT ASSEMBLY</b>	Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	30mm	<b>TPR-201</b> <b>COIL-ST-TPR06</b>	1 pr	
	Coils Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-201HD</b> <b>COIL-ST-TPR26</b>		
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		<b>TPL1081</b>	2 ea	
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers		<b>SA35661G</b>	2 ea	
<b>COIL SPRINGS</b>	Raised Height Heavy Duty Coil Springs <b>LBA Up to 150kg</b>	30mm	<b>TPR-203</b>	1 pr	
	Raised Height Heavy Duty Coil Springs <b>LBA 200kg plus - constant load</b>	40mm	<b>TPR-203HD</b>		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# TOYOTA PRADO 120 SERIES - 4WD

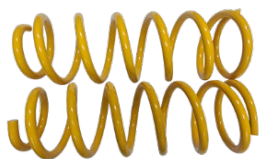
VZJ, KZJ, RZJ, KDJ 120 SWB & LWB Station Wagon 2003 to 11/2009 \*Excludes Air Suspension Models

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		<b>SA67088GP</b>	2 ea	
<b>COILS &amp; STRUT ASSEMBLY</b> 	Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204</b> <b>COIL-ST-TPR04</b>	1 pr	<b>F R O N T</b>
	Coils Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204H</b> <b>COIL-ST-TPR14</b>		
	Coils Springs <b>For Vehicles With Bullbar &amp; Winch</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HD</b> <b>COIL-ST-TPR22</b>		
	Coils Springs <b>For Vehicles Without Bullbar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204T</b> <b>COIL-ST-TPR54</b>		
	Coils Springs <b>For Vehicles With Bull Bar</b> Preassembled Strut/Coil With Top Plate Mount	40mm	<b>TPR-204HT</b> <b>COIL-ST-TPR55</b>		
	<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount			
<b>SHOCK ABSORBERS</b> 	35mm Gas Bulged Shock Absorbers - Piranha <b>11mm stem</b>		<b>SA35682GP</b>	2 ea	
<b>COIL SPRINGS</b> 	Raised Height Heavy Duty Coil Springs <b>LBA Up to 150kg</b>	40mm	<b>TPR-205</b>	1 pr	<b>R E A R</b>
	Raised Height Heavy Duty Progressive Rate Coils	40mm	<b>TPR-206</b>		
	Raised Height Extra Heavy Duty Coil Springs <b>LBA 200kg plus - constant load</b>	40mm	<b>TPR-205HD</b>		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

# TOYOTA PRADO 150 SERIES - 4WD

KDJ150, GRJ150, KDJ155, GX & GXL Station Wagon 2010 Onwards \*Excludes Air Suspension Models

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle	
<b>STRUT</b>	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67095GP	2 ea	<b>F R O N T</b>
<b>COILS &amp; STRUT ASSEMBLY</b>	Coils Springs <b>For Vehicles Without Bullbar</b>	40mm	TPR-204	1 pr	
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR05		
	Coils Springs <b>For Vehicles With Bull Bar</b>	40mm	TPR-204H		
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR15		
	Coils Springs <b>For Vehicles With Bullbar &amp; Winch</b>	40mm	TPR-204HD		
	Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR23		
Coils Springs <b>For Vehicles Without Bullbar</b>	40mm	TPR-204T			
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR57			
Coils Springs <b>For Vehicles With Bull Bar</b>	40mm	TPR-204HT			
Preassembled Strut/Coil With Top Plate Mount		COIL-ST-TPR58			
<b>SWB Models</b>					
	Coils Springs <b>For Vehicles With No Bar / Winch</b>	40mm	KTFS-101		
	Raised Height Heavy Duty Coil Springs				
<b>TOP PLATE MOUNT</b>	Strut Top Plate Mount		TPL1083	2 ea	
<b>SHOCK ABSORBERS</b>	35mm Gas Bulged Shock Absorbers - Piranha		SA35686GP	2 ea	
<b>COIL SPRINGS</b>					<b>R E A R</b>
	<b>LWB Models</b>				
	Raised Height Heavy Duty Coil Springs	40mm	TPR-205	1 pr	
	<b>LBA up to 150kg</b>				
	Raised Height Heavy Duty Progressive Rate Coils	40mm	TPR-206		
	Raised Height Extra Heavy Duty Coil Springs				
	<b>LBA 200kg to 350kg</b>	40mm	TPR-205HD		
<b>SWB Models</b>					
	Raised Height Heavy Duty Coil Springs	40mm	KTRS-102		

\* **LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)**

Open both valves 3 full turns



When Replacing Suspension on a Toyota Prado 150 Series/Landcruiser 200 Series or Lexus LX Series vehicles fitted with Toyota's Kinetic Dynamic Suspension System (KDSS), also referred to by Toyota as a 'hydro-mechanical semi active anti roll bar' always abide by the correct fitting procedure as follows:

1. Suspend vehicle on 2-post type chassis hoist allowing wheels to hang.

2. Locate the KDSS valve housing

**NOTE:** The valve housing is located on the left-hand side of the vehicle, on the inside of the chassis rail, roughly half way between the front and the back of the vehicle.

3. Using a 5mm hex key, open the 2 levelling valves 3 full rotations anti-clockwise. (Access is from underside of the KDSS valve)

**NOTE:** The KDSS system is now open and the sway bar ends should be able to be freely manipulated with little effort, allowing spring / strut removal and installation.

**THE VEHICLE MUST NOT BE DRIVEN WITH THESE VALVES OPEN AS THIS WILL COMPROMISE THE SYSTEM AND RENDER THE VEHICLE UNSAFE TO DRIVE.**

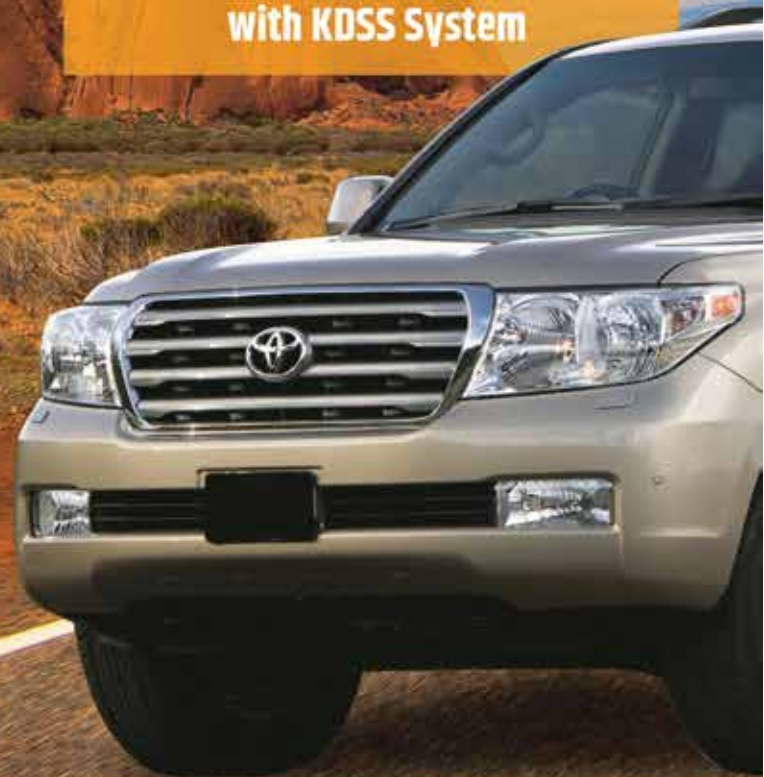
4. With the vehicle sitting on level ground, close both KDSS levelling valves by turning them in a clockwise direction and then tightening.



*Go to the Max*

2022

**Toyota Landcruiser  
200 Series/ Toyota  
Prado 150 Series  
with KDSS System**



Ph 1800 630 411



[www.ssa.com.au](http://www.ssa.com.au)

**BLUEMAX - Distributing Australia Wide**

SSA | BRISBANE

219 Toombul Road  
Northgate Queensland 4013  
T: 07 3370 3200  
E: [info@ssa.com.au](mailto:info@ssa.com.au)

MCNAUGHTAN'S | MELBOURNE


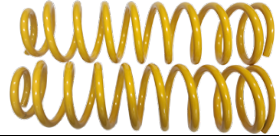




321 Greens Rd  
Keysborough, VIC, 3173  
T: 03 8768 6666  
E: [vicsales@mcnaughtans.com.au](mailto:vicsales@mcnaughtans.com.au)

MCNAUGHTAN'S | PERTH

3 Kalli Street, Malaga  
Western Australia, 6090  
T: 08 92481833  
E: [wainfo@mcnaughtans.com.au](mailto:wainfo@mcnaughtans.com.au)

# VW AMAROK - 4WD


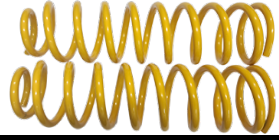




2010 Onwards \*Excludes V6 Models

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67090GP	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>No bar / Winch</b>	20mm	VW-201	1 pr	FRONT	
	Raised Extra Height Heavy Duty Coil Springs <b>With bar / Winch</b>	20mm	VW-201H			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35085GP	2 ea	REAR	
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty Leaf Springs 3 + 3 <b>LBA 200 kg to 400kg</b>	20mm	VW001M	2 ea		REAR
	Raised Height Extra Heavy Duty Leaf Springs 3 + 3 <b>LBA 500kg to GVM - Additional camber</b>	20mm	VW001MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit <b>* does not include chassis bushes</b>		BU780UK	1 kit	REAR	
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-3	4 ea	REAR	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

# VW AMAROK - 4WD

## 2016 Onwards V6 Model Only

Part and Location	Description	Approx Lift	Part Number	Qty Per Vehicle		
<b>STRUT</b>						
	Strut/Gas Spring Seat Shock Absorbers - Piranha		SA67090GP	2 ea	FRONT	
<b>COIL SPRINGS</b>						
	Raised Height Heavy Duty Coil Springs <b>No bar / Winch</b>	20mm	VW-201H	1 pr	FRONT	
	Raised Extra Height Heavy Duty Coil Springs <b>With bar / Winch</b>	20mm	VW-201HH			
<b>SHOCK ABSORBERS</b>						
	35mm Gas Bulged Shock Absorbers - Piranha		SA35085GP	2 ea	REAR	
<b>LEAF SPRINGS</b>						
	Raised Height Heavy Duty Leaf Springs 3 + 3 <b>LBA 200 kg to 400kg</b>	20mm	VW001M	2 ea		REAR
	Raised Height Extra Heavy Duty Leaf Springs 3 + 3 <b>LBA 500kg to GVM - Additional camber</b>	20mm	VW001MH			
<b>SHACKLE BUSH KITS</b>						
	Polyurethane Bush Kit <b>* does not include chassis bushes</b>		BU780UK	1 kit	REAR	
<b>U-BOLTS</b>						
	Round Form U Bolts - With Nuts		UB453-3	4 ea	REAR	

\* LBA = Load Bearing Accessories (Bull Bar, Winch, Tyre Carrier, Extra Fuel Tanks etc)

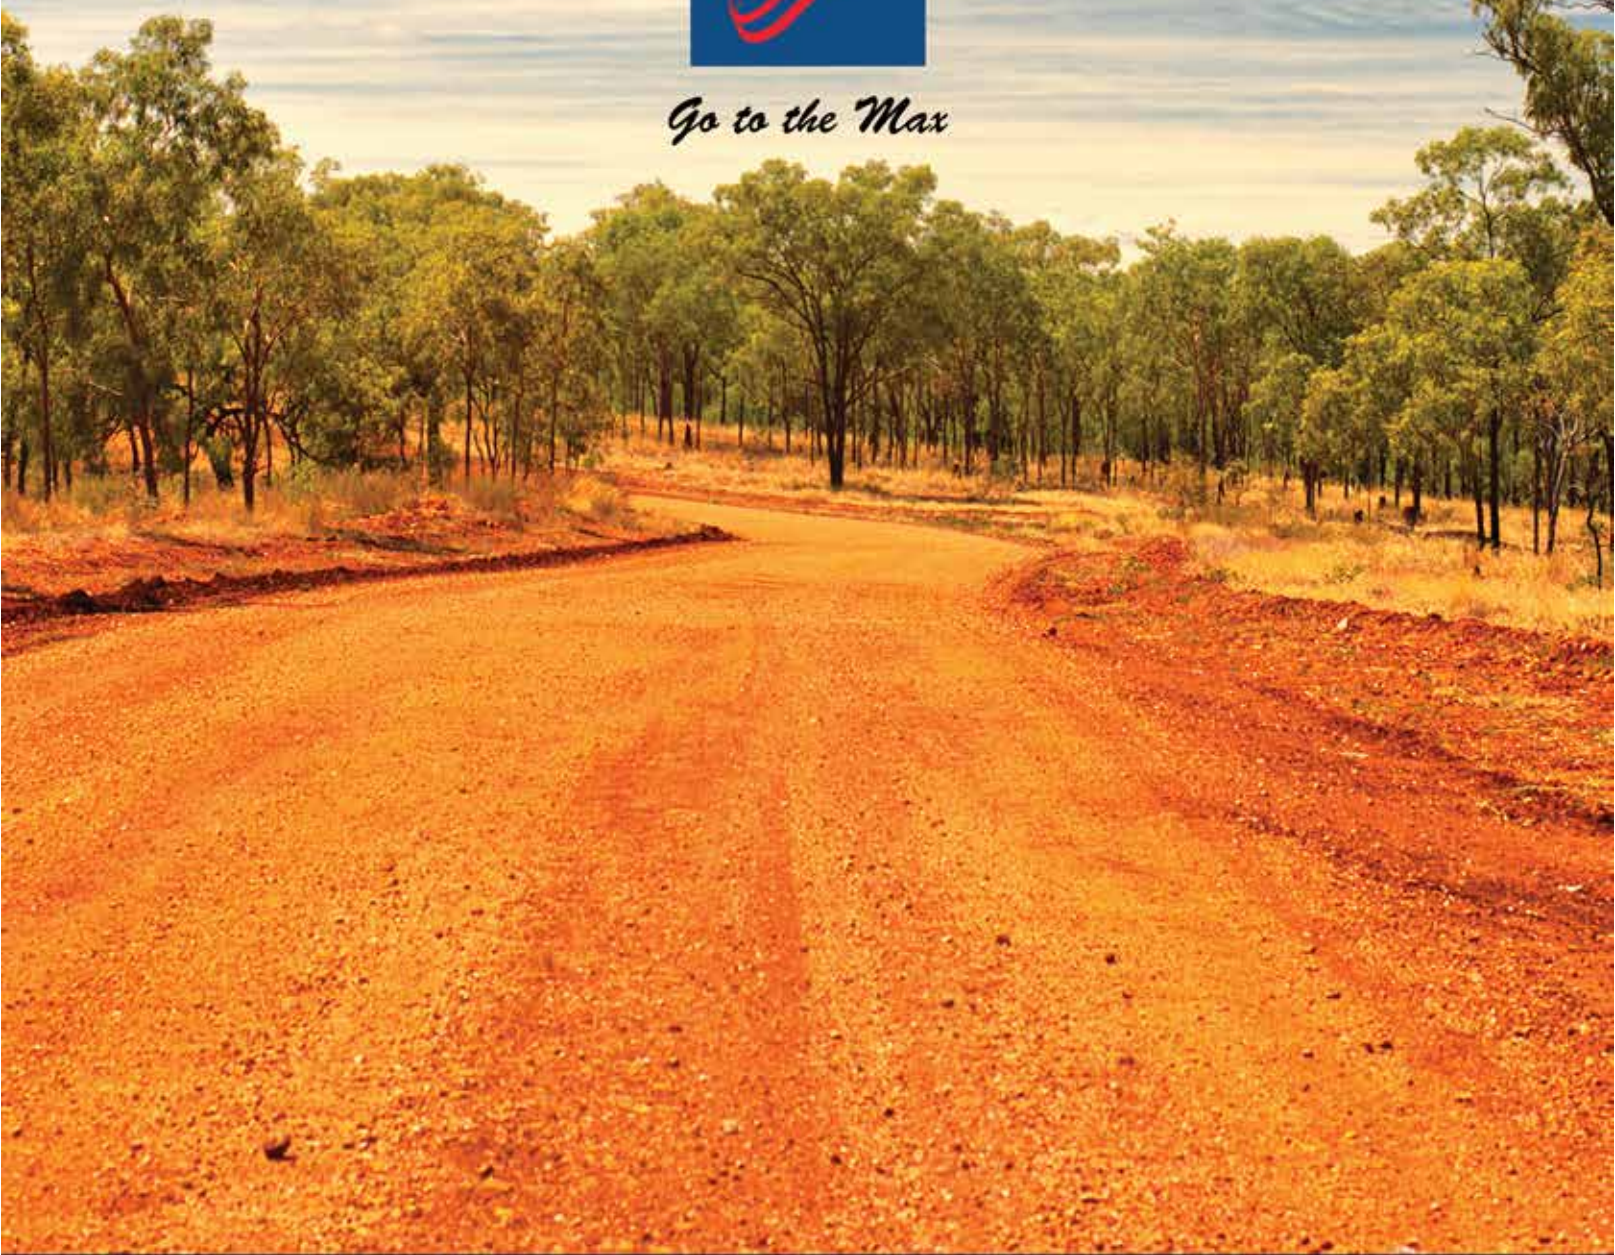


## NOTES

## NOTES



*Go to the Max*



**PH: 1800 630 411**



[www.ssa.com.au](http://www.ssa.com.au)

**BRISBANE · MELBOURNE · PERTH**

**SSA | BRISBANE**

219 Toombul Road  
Northgate Queensland 4013  
☎: 07 3370 3200  
✉: [info@ssa.com.au](mailto:info@ssa.com.au)

**MCNAUGHTAN'S | MELBOURNE**

321 Greens Rd  
Keysborough, VIC, 3173  
☎: 03 8768 6666  
✉: [vicsales@mcnaughtans.com.au](mailto:vicsales@mcnaughtans.com.au)

**MCNAUGHTAN'S | PERTH**

3 Kalli Street, Malaga  
Western Australia, 6090  
☎: 08 92481833  
✉: [wainfo@mcnaughtans.com.au](mailto:wainfo@mcnaughtans.com.au)